

USER MANUAL

BENUTZERHANDBUCH

MANUEL UTILISATEUR

MANUAL DE USUARIO

MANUALE UTENTE

MANUAL DO USUÁRIO

BRUKSANVISNING

ユーザーマニュアル

用户手册

РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ

wiral[®]LITE

TO DOWNLOAD THIS USER MANUAL IN A DIFFERENT LANGUAGE,
VISIT WIRALCAM.COM/SUPPORT.

WENN SIE DIESES BENUTZERHANDBUCH IN EINER ANDEREN SPRACHE
HERUNTERLADEN MÖCHTEN, BESUCHEN SIE WIRALCAM.COM/SUPPORT.

POUR TÉLÉCHARGER CE MANUEL DE L'UTILISATEUR DANS UNE AUTRE
LANGUE, RENDEZ-VOUS SUR WIRALCAM.COM/SUPPORT.

PARA DESCARGAR ESTE MANUAL DE USUARIO EN OTRO IDIOMA,
VISITE WIRALCAM.COM/SUPPORT.

PER SCARICARE QUESTO MANUALE UTENTE IN UN'ALTRA LINGUA,
VISITA WIRALCAM.COM/SUPPORT.

PARA BAIXAR ESTE MANUAL DO USUÁRIO EM OUTRO IDIOMA,
ACESSE WIRALCAM.COM/SUPPORT.

FOR Å LASTE NED DENNE BRUKERHÅNDBOKEN PÅ ET ANNET SPRÅK,
BESØK WIRALCAM.COM/SUPPORT.

FÖR ATT LADDA NER DEN HÄR BRUKSANVISNINGEN PÅ ETT ANNAT SPRÅK,
BESÖK WIRALCAM.COM/SUPPORT.

このユーザーマニュアルの他言語版をダウンロードするには、
WIRALCAM.COM/SUPPORT にアクセスしてください。

若要下載其他語言版本的使用說明書，請前往：
WIRALCAM.COM/SUPPORT。

如需下載本用戶手冊的其他語言版本，請訪問
WIRALCAM.COM/SUPPORT。

Чтобы загрузить это руководство пользователя на другом языке,
посетите страницу WIRALCAM.COM/SUPPORT.

WELCOME TO OUR FAMILY!

BOOM! Thanks for purchasing Wiral LITE and welcome to our family!

[Please take your brand new Wiral LITE slowly out of the box while reading this imagining Morgan Freemans voice, for a dramatic effect]

There are those of us that like to explore the unexplored, go out there with a fresh and open mind. Those of us that go out there, with a sense of... curiosity. We

believe that this is why you got yourself a Wiral LITE, and we believe that this is why you will go out there and create videos never seen before. Because we believe you are the future of content creators and that the best tools for content creations should be available to you. Go out, be curious, be creative, be proud and explore the world with your Wiral LIFE.

Go to the address or scan the QR code below to watch a video tutorial on how to use Wiral LITE safely:



www.wiralcam.com/how-to-use

DISCLAIMERS

- 1.** Read the complete manual before using the product.
- 2.** The user holding the remote control is legally the operator of the unit. The operator is responsible for safe usage and consequences of unsafe usage of the unit and the line. Wiral Technologies AS is not responsible for any injury, damage of property or harm caused by usage of Wiral LITE and accessories.
- 3.** The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- 4.** Do not breach the bounds of privacy. Ask for permission before using Wiral LITE on private property.
- 5.** Do not use the Wiral LITE while under the influence of drugs or alcohol.

CAUTION

 
To avoid injuries and damages to property:

- 1.** Keep control of the immediate environment and keep Wiral LITE in line of sight at all times when operating the unit. Wiral LITE requires a certain line length for braking and stopping [See page 11]. Lack of attention can result in crashing it into the end anchor points or other obstacles.
- 2.** To keep the Quick Reel™, tightening strap, or rope from breaking, and prevent the resulting injuries/damages to property, follow these instructions:
 - Always make sure the Quick Reel™ is securely locked when tightening the rope.
 - Do not set up the line in locations where it might interfere with, or block traffic or anything that might crash into the line [e.g. trails, roads].
 - Do not set up the line and use Wiral LITE above people and large crowds.
 - Do not set up the line near heat sources, sharp objects or in another way that lead to the line being cut [e.g. open flame, concert lights, sharp rocks]
 - Do not set up the line on weak or unstable anchors or anchor points that do not have a fixed distance
 - Never overtighten the Quick Reel™. Do not tighten above 390N [40kg/90lbs]. [Replace strap if safety seam is breached].
 - Do not pull or apply pressure on a line that is fully tightened.
 - Release the control wheel and stop the Wiral LITE immediately if it derails or if an obstacle keeps it from moving freely.
 - Never exceed maximum payload of 1.5kg [3.3 lbs]
 - Do not leave the line mounted unsupervised.
- 3. Warning!** Misuse of battery could lead to

risk of fire and burns.

- 4.** Always make sure that the Wiral LITE and the remote control is powered on and the line is tightened before mounting Wiral LITE on the line, and do not loosen or tighten the line while the unit is mounted.
- 5.** Do not touch the motor when the product is in use or immediately after use.
- 6.** Do not expose Wiral LITE to water. It is not waterproof and cannot be used under water. [do not use in snowstorm, sandstorm, or other extreme weather]
- 7.** Do not use in temperatures below -15°C and above 50°C
- 8.** Do not use Wiral LITE in wind conditions exceeding 10 m/s [22 mph], or in other severe weather conditions.
- 9.** Do not use in areas with high levels of interference [e.g. radio transmission towers].
- 10.** Store the kit in room temperature, in a dry environment and shielded from sunlight. Maximum line strength may decrease over time.
- 11.** Always keep Wiral LITE, all accessories and packaging out of reach of children and infants.
- 12.** Never use 3rd party accessories including 3rd party rope as a replacement for the original parts. Only use genuine certified Wiral replacement parts.

WHAT'S IN THE BOX



WIRAL^oLITE



REMOTE CONTROL



 
QUICK REEL



TIGHTENING STRAP



11.1 V LI-POLY
BATTERY




UNIVERSAL BATTERY
CHARGER



BALL JOINT




END STOP CLIPS (2X)

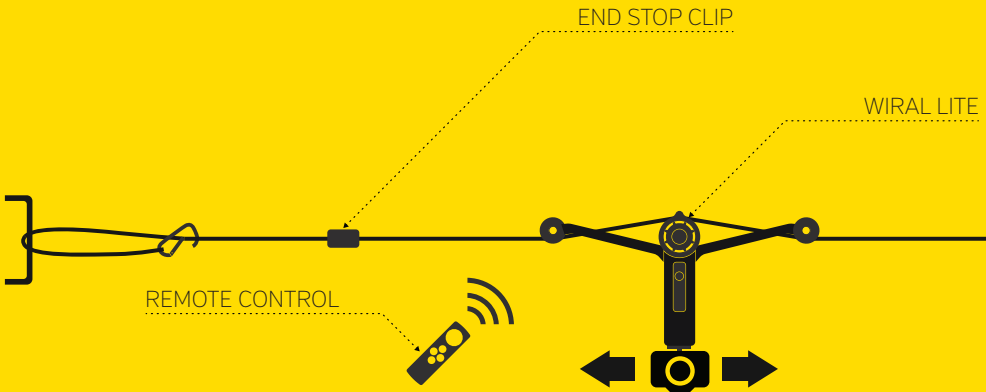

QUICK SETUP

Wiral LITE can easily be set up in less than 3 minutes. To learn how to do it, follow the instructions on the next pages.


1

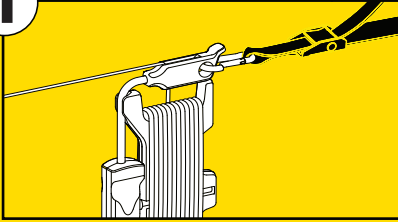

SET UP THE ROPE SYSTEM

READ MORE ON PAGE 8-9


2

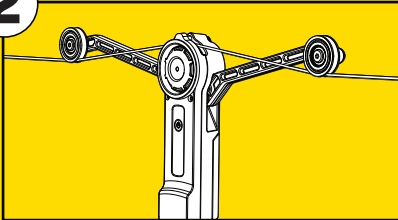

MOUNT WIRAL LITE


READ MORE ON PAGE 10-11


3

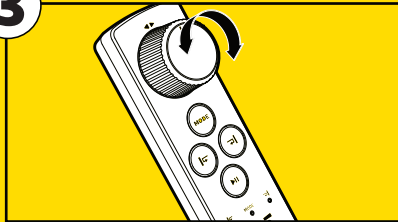

CONTROL WIRAL LITE


READ MORE ON PAGE 14-19

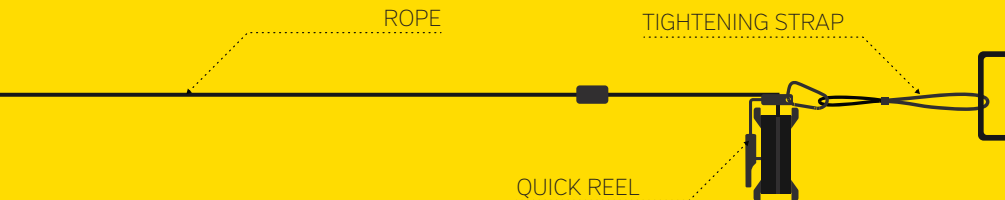

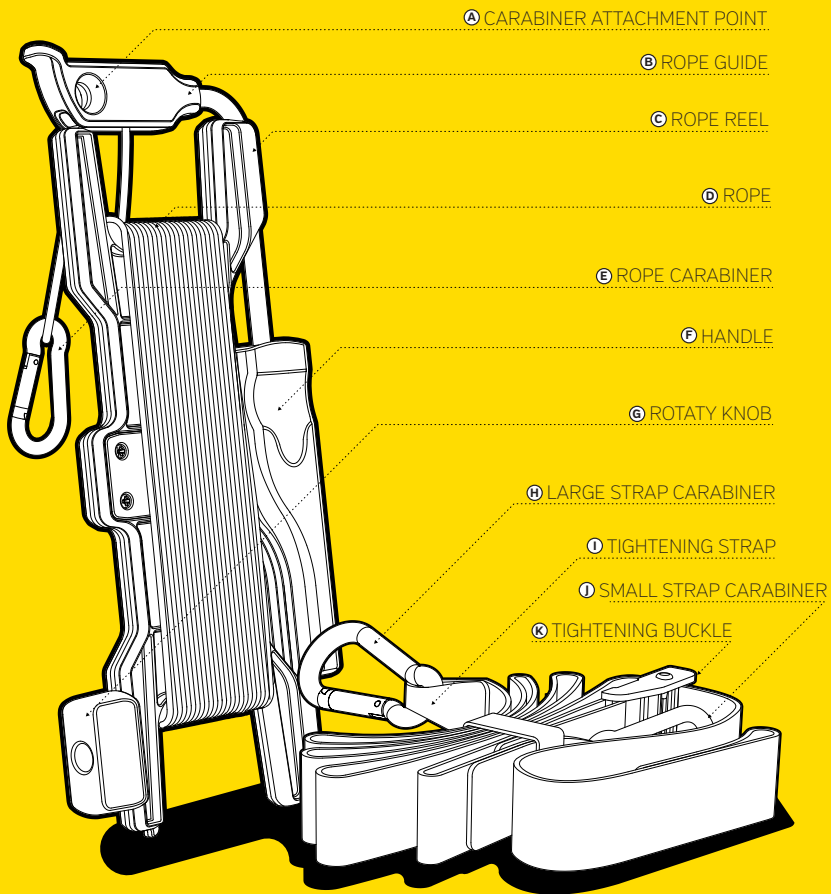


1 QUICK REEL™

The Wiral LITE kit comes with the Quick Reel™ that makes it possible to set up the line in just a few minutes. The Quick Reel™ consists of a reel for handling the rope and a tightening strap for connecting and tightening it.

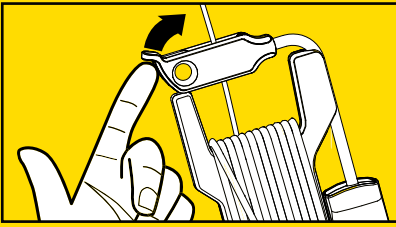


01 UNLOCK QUICK REEL™

Press rope guide to unlock Quick Reel™ and unwind the rope.

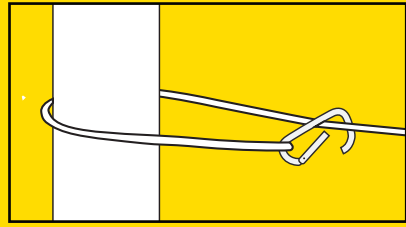


02 ATTACH CARABINER

Place the rope around the first attachment point, and attach the carabiner to the rope.

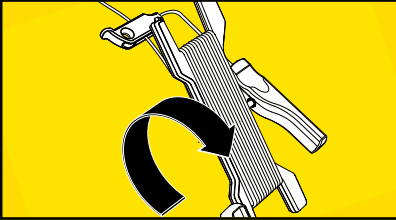


03 UNWIND ROPE

Pull out the rope and let the reel rotate freely to unwind the rope.

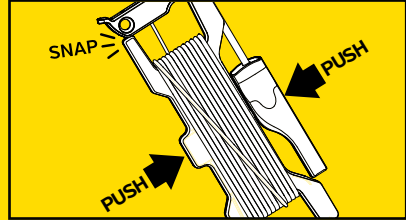


04 LOCK QUICK REEL™

Lock the Quick Reel™ when you are close to the second attachment point.

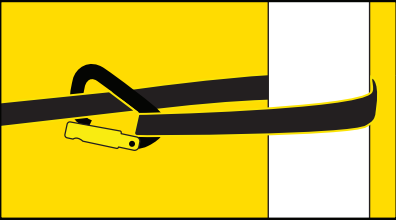


05 FASTEN STRAP

Place the tightening strap around the second attachment point, and attach the large strap carabiner.

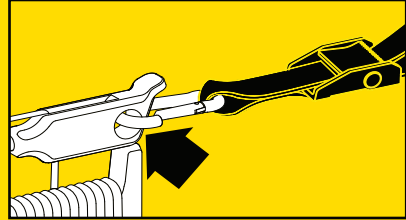


06 ATTACH STRAP

Connect the small strap carabiner to the Quick Reel™ rope guide.

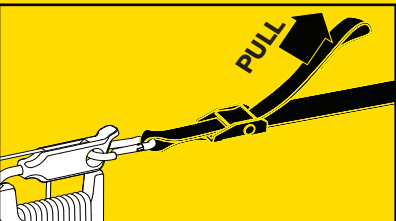

07 TIGHTEN STRAP

Tighten the system by pulling the end of the strap with a maximum force of 40 kg / 390 Nm.

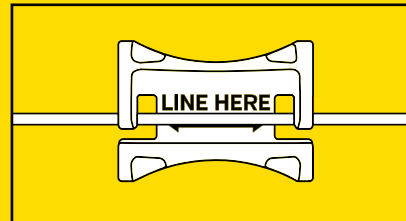


08 MOUNT END STOPS


Mount the physical end stops close to the attachment point on each side. See next page.

MOUNTING OF END STOP CLIPS


The kit includes two end stop clips. The clips should be mounted on to the rope in a recommended distance from each attachment point. The distance can be found in the table on the next page. This will help avoiding Wiral LITE crashing into the attachment points. When the end stop is mounted, it will either derail or stop the unit before it is reaching the end of the line.

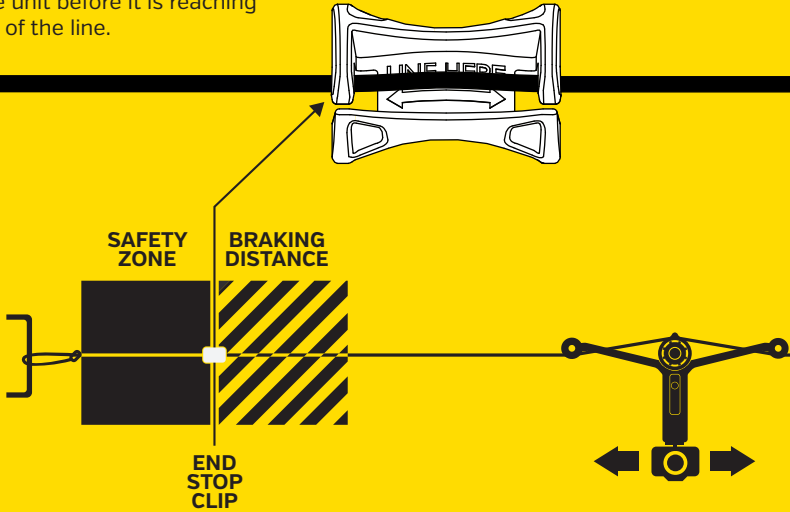


WARNING!

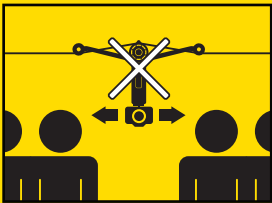

DO NOT SET UP the line and use Wiral LITE above people, in locations where it might interfere with traffic or where anything might crash into the line (e.g. trails, roads).

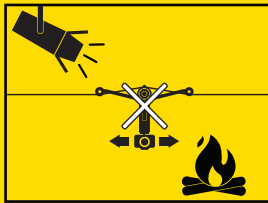

DO NOT SET UP the line near heat sources, sharp objects or in another way that lead to the line being cut (e.g. open flame, concert lights, sharp rocks)

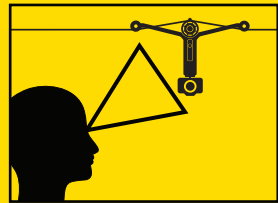

KEEP CONTROL of the immediate environment and keep Wiral LITE in line of sight at all times when operating the unit. Lack of attention can result in crashing it into obstacles.

BRAKING DISTANCE AND SAFETY ZONE

INCLINE

The maximum incline of Wiral LITE varies with the weight of the camera attached to it. See the table below to check how steep your setup can move.

	0 - 500 g (0 - 1.1 lb)	500 - 1000 g (1.1 - 2.2 lb)	1000 - 1500 g (2.2 - 3.3 lb)
Max. Incline	30°	25°	10°

**The values are estimates, and may vary with environmental conditions.*

BRAKING DISTANCE

Maximum braking distance of Wiral LITE will be different based on the weight of the camera that is used.

	0 - 500 g (0 - 1.1 lb)	500 - 1000 g (1.1 - 2.2 lb)	1000 - 1500 g (2.2 - 3.3 lb)
Horizontal	4 m / 13 ft	5.5 m / 18 ft	7 m / 23 ft
Max. Incline	2 m / 6.5 ft	2 m / 6.5 ft	2 m / 6.5 ft
Max. Decline	5 m / 16.5 ft	7 m / 23 ft	9 m / 29.5 ft


**The values are estimates, and may vary with environmental conditions.*

SAFETY ZONE

The end stop clip should be mounted with a safety zone between itself and the end of the line to avoid Wiral LITE from crashing into the attachment point. The length of the zone will vary with the weight of the camera used.


	0 - 500 g (0 - 1.1 lb)	500 - 1000 g (1.1 - 2.2 lb)	1000 - 1500 g (2.2 - 3.3 lb)
Horizontal	3 m / 10 ft	4 m / 13 ft	5 m / 16.5 ft
Max. Incline	1.5 m / 5 ft	1.5 m / 5 ft	1.5 m / 5 ft
Max. Decline	5 m / 16.5 ft	7 m / 23 ft	9 m / 29.5 ft

**The values are estimates, and may vary with environmental conditions.*

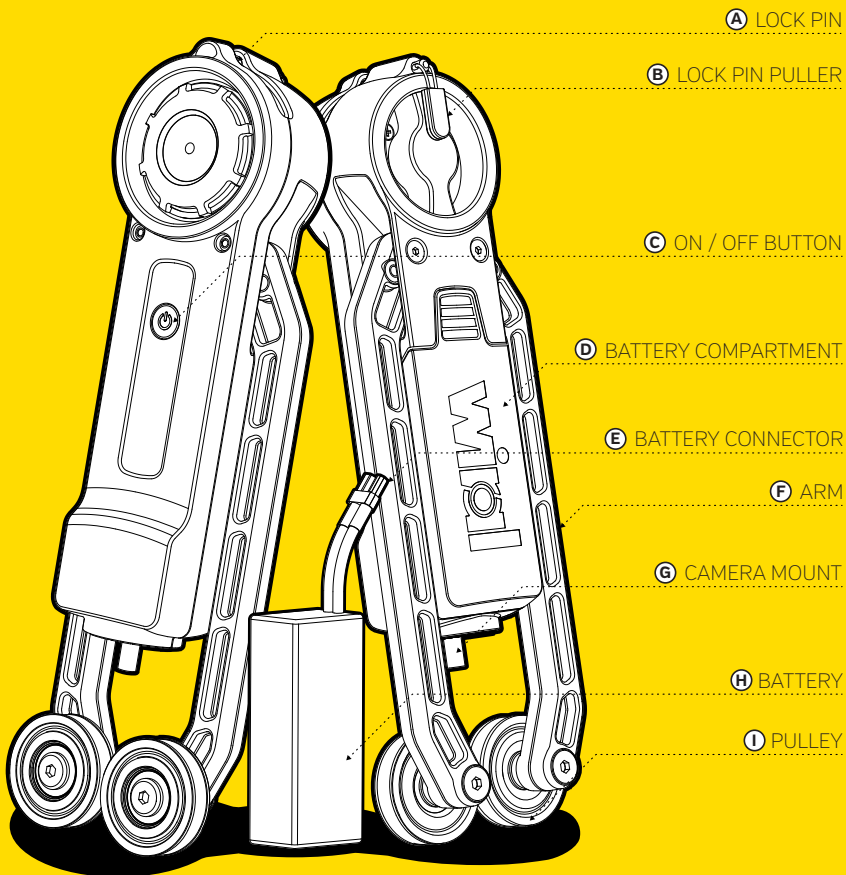


2 MAIN UNIT

After mounting the line, it is time to prepare the main unit, including the batteries and the camera that is going to be attached.

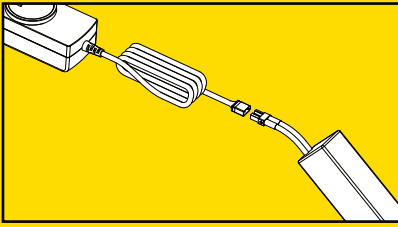


01 CHARGE BATTERY

Charge battery using the charger included in the kit. Read more on page 18 - 19.

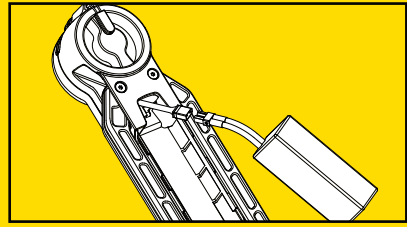


02 INSERT BATTERY

Insert battery and connect it to the power plug. The unit automatically turns on.

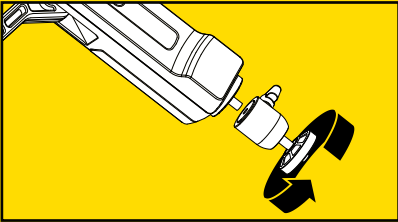


03 MOUNT BALL JOINT

Mount the ball joint to be able to point your camera in any angle.

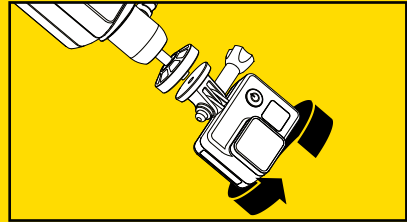


04 MOUNT CAMERA

Mount your camera on the universal camera screw.

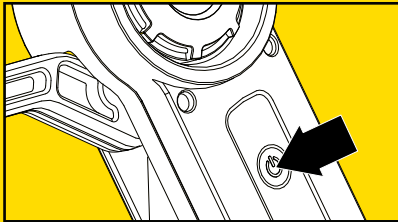


05 POWER ON

Make sure the unit is powered on, use the button to toggle power on or off.

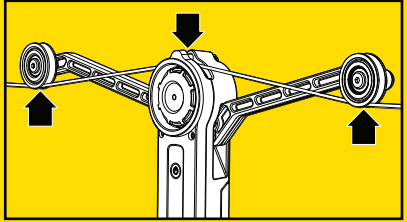

06 MOUNT ON LINE

Mount the unit on the line by placing the line under the two pulleys and over the drive wheel.

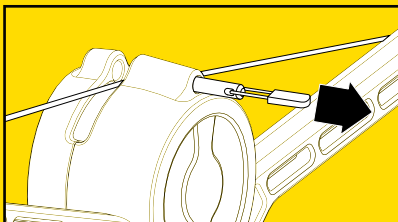

07 SECURE THE UNIT

Secure the unit by opening the lock pin, let the line pop into place. Make sure that the line is placed in the drive wheel groove.



08 CONNECT TO REMOTE

If the remote is switched on, it will connect automatically. If not connected, all LEDs will be blinking. To lock the remote to just one unit, read more on page 22.




3 REMOTE CONTROL

Wiral LITE can be operated by using the remote control included in the kit. The remote control is controlling speed and acceleration, setting digital end stops, and giving feedback through six LED lights.


Wiral Lite has three different control modes:

- 1 **Normal Mode:** Control the speed from 0 to 1.4 m/s [0 - 4.5 fps] directly by turning the speed wheel. [Page 16]
- 2 **Sport Mode:** Control the speed from 0 to 9.5 m/s [0 - 31 fps] directly by turning the speed wheel. [Page 17]
- 3 **Time lapse Mode:** The unit moves slowly back and forth between the digital end stops in speeds up to 20.0 m / 65.6 ft per hour. [Page 18]

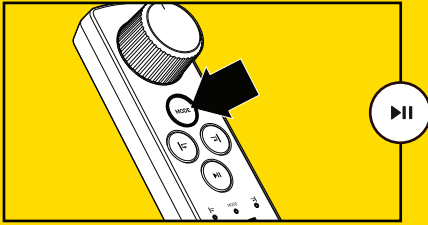


01 POWER ON

Press the **Mode Button** to turn on the remote control. The Mode LED will turn on. Hold the same button for 2 seconds to turn off.

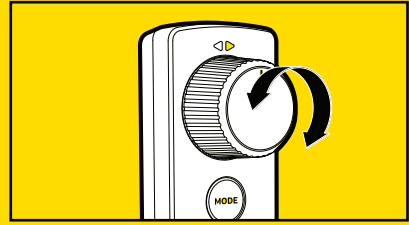


02 CONTROL MOVEMENT

Rotate the **Speed Wheel** to move the main unit. Rotating towards the yellow arrow, will move the main unit in direction of the arm marked with a yellow stripe.

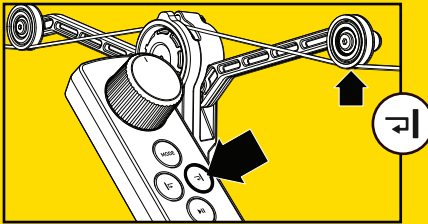


03 SET DIGITAL END STOP

Set digital end stops by moving the main unit to the point you want it to automatically stop and press the end stop button. The yellow end stop button will set a digital end stop in the direction of the arm marked with a yellow stripe.

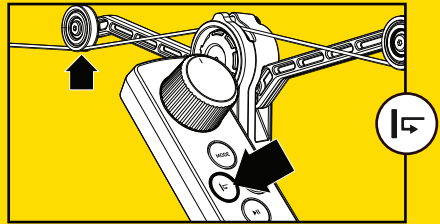


04 SET SECOND END STOP

Move the main unit to the second point you want it to automatically stop and press the opposite end stop button. The main unit will now only move in between these points. **Be aware** that the end stops might drift. They should be reset after emergency stops. Use end stop clips for extra safety.

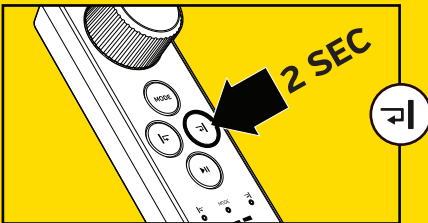

05 REMOVE END STOP


Remove end stop by holding the end stop button for 2 seconds. To replace an end stop, just click the end stop button when you want to place it.

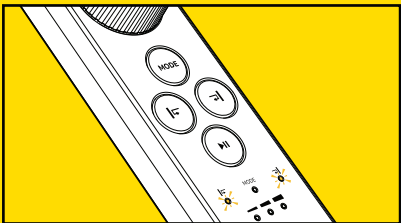

06 END STOPS NOT SET


Setting digital end stops is highly recommended. In time lapse mode the indicators will blink if the end stops are not set.

CHANGE SPEED MODE

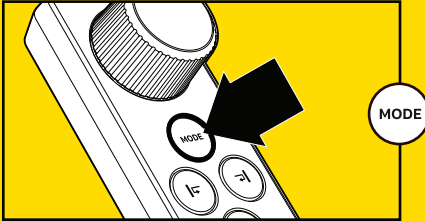

01 CHANGE MODE

The remote is automatically set to normal mode when turned on. Change modes by pressing the mode button.

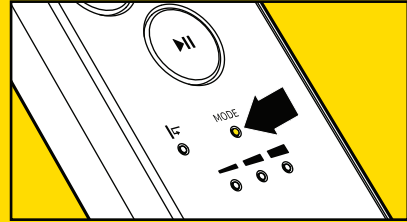



02 MODE INDICATION

Normal Mode: Mode indicator LED is blinking slowly.

Sport Mode: Mode indicator LED is blinking fast.


Time Lapse Mode: Mode indicator LED is continuously lit.

NORMAL MODE

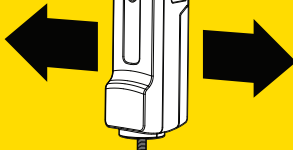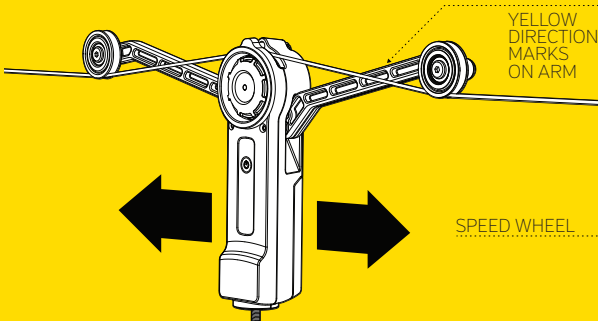


SPEED WHEEL

MODE INDICATOR

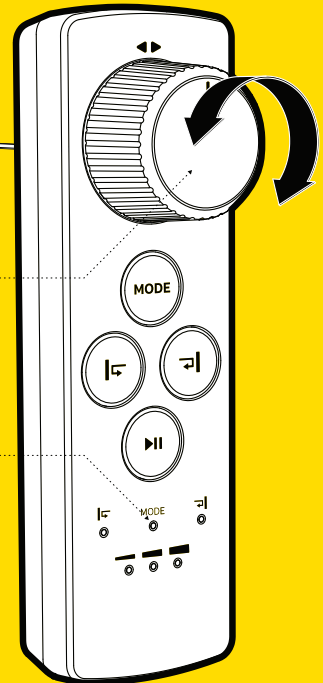


- 1 When in Normal Mode, the mode indicator will fade **slowly** in and out.
- 2 Control the **speed** from 0 to 1.4 m/s (0 - 4.5 fps) directly by turning the speed wheel.
- 3 Moving the speed wheel clockwise (towards the yellow arrow) will make the main unit move towards the side with yellow direction mark.
- 4 When the speed wheel is released, the unit will stop.

SPORT MODE

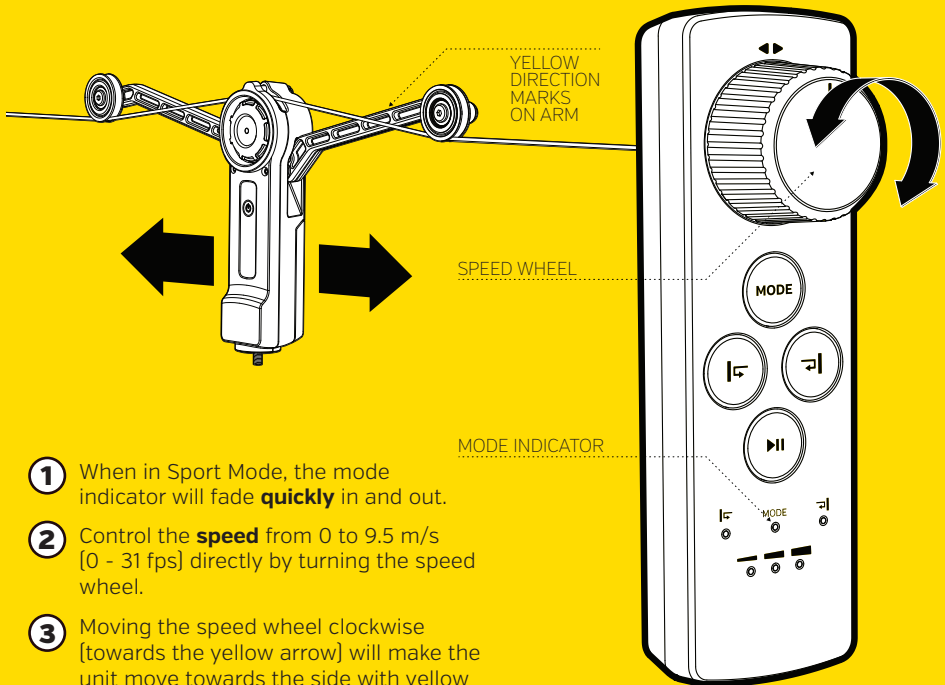

- 1 When in Sport Mode, the mode indicator will fade **quickly** in and out.
- 2 Control the **speed** from 0 to 9.5 m/s [0 - 31 fps] directly by turning the speed wheel.
- 3 Moving the speed wheel clockwise [towards the yellow arrow] will make the unit move towards the side with yellow direction marks.
- 4 When the speed wheel is released, the unit will stop.

TIME LAPSE MODE

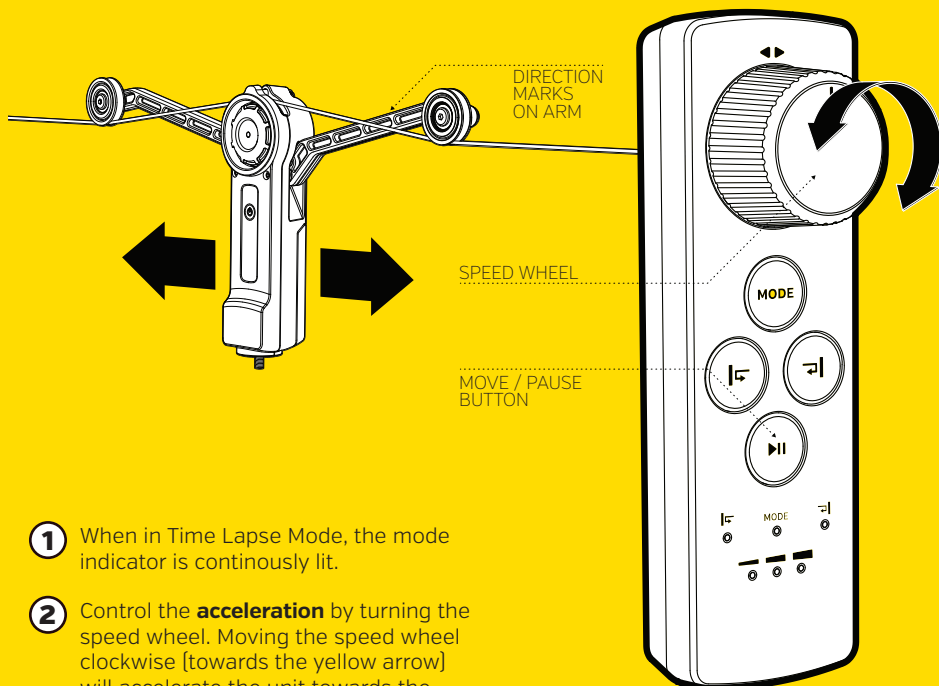

- 1 When in Time Lapse Mode, the mode indicator is continuously lit.
- 2 Control the **acceleration** by turning the speed wheel. Moving the speed wheel clockwise [towards the yellow arrow] will accelerate the unit towards the side with yellow direction marks.
- 3 When releasing the wheel, the unit will continue in the same speed.
- 4 Pause the unit by pressing the move /pause button on the remote.
- 5 The unit restarts when the play/pause button is pressed for the
- 6 To reset the speed to zero, click the play/pause button twice.


SPEED LEVEL 1	
3.3 m / 10.7 ft per hour	<input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
SPEED LEVEL 2	
6.2 m / 20.4 ft per hour	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
SPEED LEVEL 3	
10.0 m / 32.8 ft per hour	<input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/>
SPEED LEVEL 4	
12.9 m / 42.2 ft per hour	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
SPEED LEVEL 5	
16.4 m / 53.7 ft per hour	<input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
SPEED LEVEL 6	
20.0 m / 65.6 ft per hour	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>



WARNING!



Time lapse mode should only be used with horizontal line. Incline on the line can lead to overheating.

CHECK BATTERY STATUS

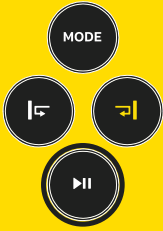

To check the battery status of the main unit, hold the play / pause button for 2 seconds. The status will be displayed in the LED below.

  BATTERY LEVELS



LED STATES

NORMAL MODE

Mode indicator is fading slowly in and out.



SPORT MODE

Mode indicator is fading quickly in and out.



TIME LAPSE MODE

Mode indicator is continuously lit.



TIME LAPSE SPEED LEVEL INDICATION

3.3 m / 10.7 ft per hour in Time Lapse Mode.

See page 18 for details



TIME LAPSE PAUSE

When time lapse is paused by pressing the pause button, all speed LEDs will be blinking.



END STOP 1 AND 2 SET

When end stop indicators are lit, digital end stops are set



END STOP NOT SET

If digital end stops are not set in Time Lapse Mode, LEDs will blink.



NOT CONNECTED, ERROR OR OVERHEAT

If the remote is not connected to the main unit, having an unexpected error or overheating all six LEDs will blink at the same time, and the LED on the main unit will blink orange.

Read more about overheat on page 22.



FIRMWARE UPDATE MODE / UNPAIRING MODE


The main unit LED will be continuously orange when in firmware update mode or unpairing. Remove the battery of the main unit to exit the mode.



OVERHEATING WARNING

The main unit LED will be blinking white when it is close to overheating. At this point the unit will slow down.



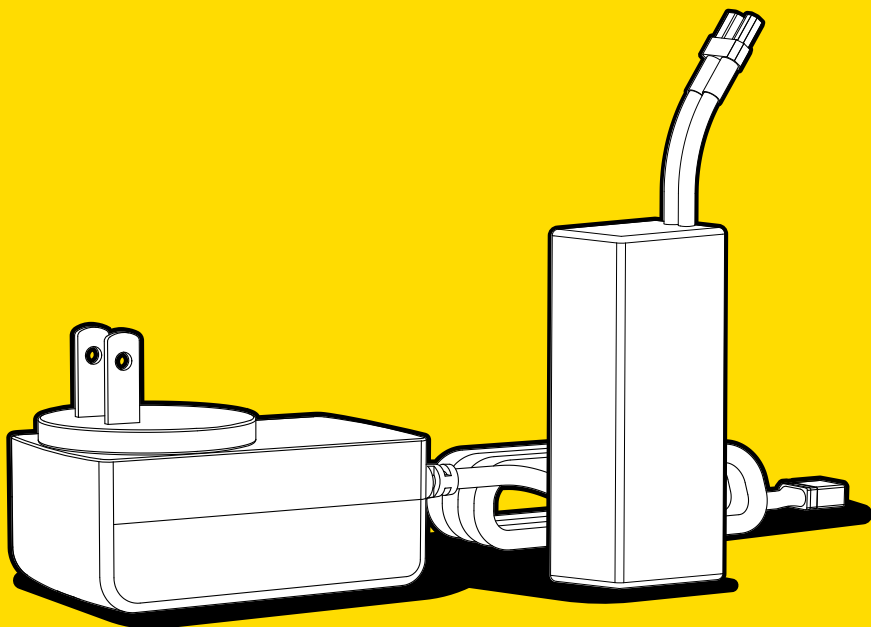

4 BATTERY/CHARGER

Wiral LITE is using a 11.1V rechargeable LiPo battery, that can be recharged by using the charger included in the kit. Be sure to read the instructions for use on the next page before using both the battery and the charger.

SAFETY AND DISCLAIMERS

1. Read this whole document (Wiral LITE User Manual) before charging and using the battery.
2. Never puncture, deform, disassemble, shock or short circuit the battery.
3. Stop using or charging the battery if it swells up, the temperature exceeds 60°C, it leaks or anything abnormal happens.
4. Keep battery out of reach of children.
5. Never use a wet battery.
6. Keep away from heat and fire.
7. Only use the original Wiral LITE charger.

8. The user takes the full responsibility of using this battery.

CAUTION


Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instruction.

SPEIFICATIONS

Manufacturer:	ABP Group Ltd.
Input:	110-240 V 0.5 A max
Output:	12.6 V 1000 mA


BATTERY DISCHARGE

Be sure to disconnect the battery from Wiral LITE when not in use. A connected battery will be discharged over time.

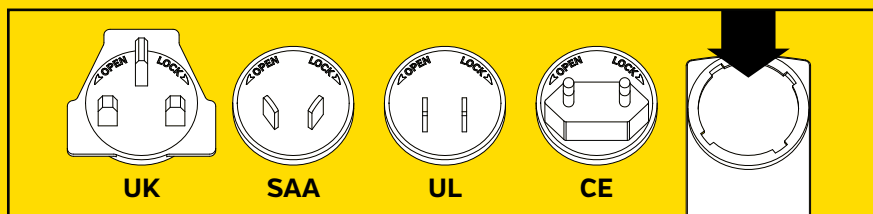


01 SELECT AND MOUNT PLUG

The charger comes with four different interchangeable plugs. Select the correct one for your area, and insert it into the charger.

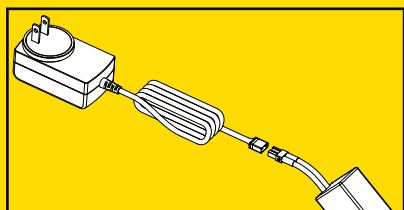

02 CONNECT BATTERY

Connect the battery to the charger, and plug the charger into a power outlet.

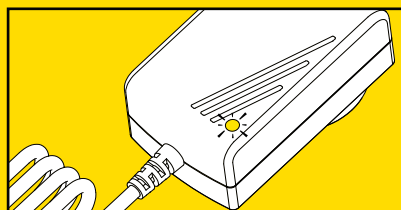

03 WAIT FOR GREEN LIGHT

When the battery is fully charged, the LED indicator will change from red to green. The battery is now ready to use.

OVERHEAT PROTECTION

When running Wiral LITE with high loads and in high speed for a longer period, the main unit might get warm. To protect the product from possible damages, it will automatically slow down for a short period to cool down. If the problem continues, the unit will stop.

AVOID ROPE WEAR

When using Wiral LITE over time, the rope will wear and tear. To avoid too much damage on the rope, there are some precautions that can be taken.

1. Do not use steeper lines than recommended in the table at page 11.
2. If hitting obstacles, the support pulleys might derail. Be sure to place them in the correct position before you continue.
3. When mounting Wiral LITE, be sure that the line is placed in the drive wheel groove. If not, the line will be damaged.

WIRAL LITE FACTORY RESET

If you are experiencing connection or control errors while using Wiral LITE, a solution could be to do a factory reset to recalibrate the unit. The reset is a quick and simple operation:

1. Press and hold the on / off button on the main unit while connecting the battery.
2. If done correctly, the motor should start running slowly to calibrate the unit.
3. When the motor stops, the unit is ready to use.

PAIRING OF REMOTE

Wiral LITE units coming straight from the factory will not be paired to a specific remote control. This means that one unit can be controlled by several different remote controls at the same time.

To avoid this problem, the main unit can be paired with a specific remote control by following the steps below:

1. Turn on both the remote control and main unit.
2. Hold down both end stop buttons and the play/pause button at the same time, while moving the remote control within a few centimeters of the main unit.
3. When close enough, Wiral LITE will make a sound and the units are paired.

UNPAIRING

To unpair the remote control:

1. Hold down both end stop buttons and the play/pause button at the same time, while turning on the remote control.

To unpair the main unit:

1. Press and hold the power button for 5 seconds, until button light is continuously yellow.
2. Remove battery to confirm unpairing.

USEFUL LINKS

If you need more information about Wiral and Wiral LITE, check out

www.wiralcam.com

To find all information on using Wiral LITE, such as FAQ, tutorials and support information, go to

www.wiralcam.com/support

To read more about warranties, and general legal information for Wiral, visit

www.wiralcam.com/legal

WIRAL LITE FIRMWARE UPDATE

We are continuously working on improving the performance and functions of Wiral LITE. To be sure your Wiral LITE has the latest features integrated, you should scan the QR code or follow the link below to download the latest update:



www.wiralcam.com/firmware



www.wiralcam.com

This content is subject to change.

*Download the latest version at
www.wiralcam.com/support*

© Wiral Technologies AS. All rights reserved.