

FREE TRIO SET UP INSTRUCTIONS



Cutting Guylines:

Guylines are pre-cut and attached for you. Linelocs are sewn in place for adjusting the lines. If you choose to switch out your lines for a different cord, there are six pieces of cord, each cut at 54 inches (137 cm). The front center stake loop is tied at 20" (51 cm) from the end of the cord.

Setup Instructions:

In windy conditions orient the end of your tent with the overlapping storm doors upwind. The Zpacks labels at the corners indicate the upwind end of the tent

Splash-up can occur when camped on hard packed surfaces during heavy rain. Our tall bathtub floor and overhanging canopy helps to keep mud and water from splashing up into your tent, but for best results please choose camp spots on leaves or pine needles when possible. Remove any pointy twigs and sharp objects to protect your tent floor but leave as much rain-dampening cushioning as possible to minimize the potential of splash-up.

1) Insert the the tips of the "H" shaped tent poles into the rings at the corners and peaks of the tent. The center part of the "H" should be horizontal. Make sure that the tips at the peaks of the tent are criss-crossed. Crossing the tips at the peak helps keep the tent splayed open.

Clip the wall clips to the horizontal part of the "H" poles. They may be tight, especially on the first few pitches.

2) If conditions warrant it, stake out the storm doors, the side walls, and the corners. In strong wind use all eight stakes for the best stability.

Storm Doors:

Any of the four doors can be clipped down, or rolled up independently. The storm doors can be clipped down to the front center guylines, or rolled up depending on the weather. Leave at least one down-wind door open for air flow unless the weather is bad.

Seam Sealing:

All Zpacks shelters have taped seams and bonded tie outs! No seam sealing necessary.