

OPEN ZStand Sportster LT

When turning knobs remember: Righty tighty (not too tight), and Lefty Lucy (Just loose enough to re-position)



1. CARRY MODE.
All knobs tightened in transit



4. RAISE TOP ZBONES UPWARD



7. TILT FRONT TABLE ASSEMBLY then tighten top knobs to lock down



2. SET UP, LOOSEN KNOBS Just enough, start at base knobs and work up. Remember: Righty-tighty / lefty-Lucy



 NOTE: KEEP ALL WEIGHT WITHIN BASE WHEELS and then re-tighten mid-knobs.



ONLY AFTER ALL TIGHTENED Add electronics and equipment.



3. RAISE BASE LEGS
Raise to almost 90° and then
thghten knobs and lockdown
to base.



6. TABLE TILT ADJUSTMENT Loosen knobs just enough to tilt.

Combines a stylish appeal with affordability, portability, and versatility. The ZStand seamlessly fits into any office or home-entertainment room without compromising aesthetics. All ZStand models are ergonomically designed, are made from 100% recycled materials and are effortless to setup or take down.

>>>>>! **WARNING**! <<<<<

FAILURE TO COMPLY WITH WARNING MAY RESULT IN PERSONAL INJURY AND EQUIPMENT DAMAGE.

- 1. Open and close with care. Keep fingers safe. Not made for childern.
- 2. When loosening loosen only enough to move arm. Loosen too much and arm will disengage and will need reassembly. Note: Righty= tighty / Lefty= lucy rule. Not too tight and not too loose.
- 3. Put ZStand into the desired position and tighten before adding electronics or equiptment.
- 4. Do not exceed working load limit of 30 lbs (Tablet, tracpad, keyboard, laptop, small projector...)
- Remove computer tablet and electronics before closing or adjusting ZStand.
- 6. Do not stand on ZStand.
- 7. Regularly inspect the ZStand for loose knobs or missing screws or fatigue, cracks and general instability.



CLOSE ZStand Sportster LT

When turning knobs remember: Righty tighty (not too tight), and Lefty Lucy (Just loose enough to re-position)



 REMOVE ALL ELECTRONICS AND EQUIPMENT before loosening knobs and disassembly.



2. START AT TOP AND WORK DOWN Position table top downward.



3. TABLE PLATFORM Loosen top knobs to flip down table



4. TABLE PLATFORM Flip down table then tighten



5. LOOSEN MID KNOBS



LOWER BACK TABLE and back bones TO CLOSING POSITION. Then re-tighten knobs



LOOSEN, FLIP DOWN REMAINING and lock to base



8. CHECK ALL KNOBS



ALL KNOBS ARE TIGHTENED and now you're ready to go.

Warrenty: ZStands are durable and stronge. In the unlikely event that a ZStand should fail within a year after the original purchase due to a manufacturing defect, ZStand is pleased to repair or replace that product.

Limitation on Warranty and Claims. SELLER WARRANTS THAT THE GOODS SOLD AND DELIVERED BY THE SELLER TO THE BUYER SHALL BE FREE FROM DEFECTS IN WORKMANSHIP AND MATERIAL UNDER NORMAL USE AND SERVICE FOR A PERIOD OF ONE (1) YEAR FROM THE DATE OF DELIVERY. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, WHETHER STATUTORY OR OTHERWISE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Seller's liability for breach of warranty shall arise only upon the return of the defective parts at the buyer's expense after notice to the seller of claimed breach and shall be limited to furnishing a like quantity of such goods free from such defects or, a the seller's option to refund the purchase price. Notice to the seller of claimed defects discoverable by inspection must be given within ten (10) days after receipt of shipment. In no event shall the seller be liable to the buyer for indirect, incidental, collateral or consequential damages of any kind. The buyer indemnifies the seller, its successors and assigns from and against any and all losses, damages and expenses (including reasonable attorney's fees) which the seller may sustain or incur as a result of any claim of negligence, breach of warranty or strict liability in tort in connection with the use of the goods furnished hereunder, except such as may be wholly caused by the negligence of the seller.