

OPEN ZSportsterPro

When turning knobs remember: *Righty tighty (not too tight), and Lefty Lucy (Just loose enough to re-position)*



1. CARRY MODE.
All knobs tightened in transit



2. SET UP, LOOSEN KNOBS
Not too loose, start at base knobs. Work your way up.




3. RAISE BASE LEGS
Raise to almost 90° and then thghten knobs. lockdown ZBaseBones to base.



4. MOVE TOP ZBONES AND TABLE ASSEMBLY UP as shown



5. TILT UP ADJUST TABLETOP
as shown

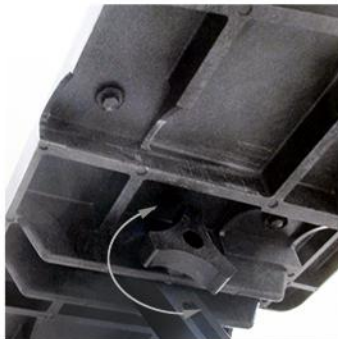

6. ADJUST TABLE TOP
Adjustment knob is located under tabletop.




7. UNLOCK MID-KNOBS . Adjust table hight and then re-tighten for sitting or standing modes.



8. SITTING POSITION: TABLET / TABLE position lower high for adjustable sitting mode



9. PUSH OUT TABLET BRACKET

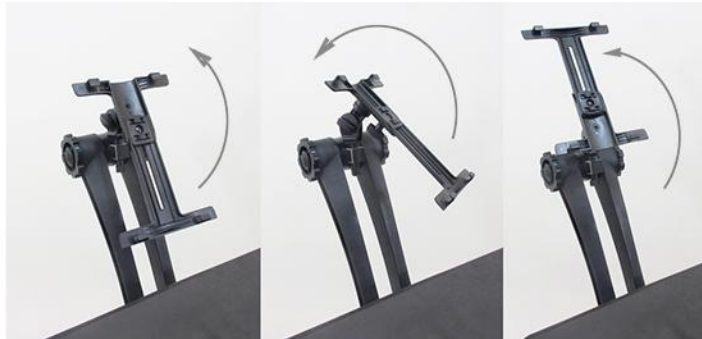

10. CHANGING TABLET BRACKET MODES
SPIN BRACKET FROM SITTING MODE TO STANDING MODE



12. ONLY AFTER TIGHTENED
can you then add electronics and equipment.

Combines a stylish appeal with affordability, portability, and versatility. The ZStand seamlessly fits into any office or home-entertainment room without compromising aesthetics. All ZStand models are ergonomically designed, are made from 100% recycled materials and are effortless to setup or take down.

>>>>> ! **WARNING** ! <<<<<<

FAILURE TO COMPLY WITH WARNING MAY RESULT IN PERSONAL INJURY AND EQUIPMENT DAMAGE.


1. Open and close with care. Keep fingers safe. Not made for children.
2. When loosening loosen only enough to move arm. Loosen too much and arm will disengage and will need reassembly. Note: Righty= tighty / Lefty= lucy rule. Not too tight and not too loose.
3. Put ZStand into the desired position and tighten before adding electronics or equipment.
4. Do not exceed working load limit of 30 lbs (Tablet, traccpad, keyboard, laptop, small projector...)
5. Remove computer tablet and electronics before closing or adjusting ZStand.
6. Do not stand on ZStand.
7. Regularly inspect the ZStand for loose knobs or missing screws or fatigue, cracks and general instability.

CLOSE ZSportsterPro

When turning knobs remember: *Righty tighty (not too tight), and Lefty Lucy (Just loose enough to re-position)*



1. REMOVE ALL ELECTONICS AND EQUIPMENT before disassembly

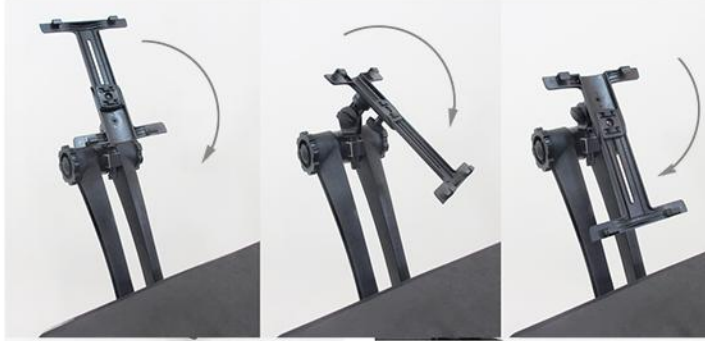

2. 10. CHANGING TABLET BRACKET TO CLOSING MODE



3. PUSH IN HEAD ASSEMBLY IN PLACE as shown. Then tighten knobs.



5. EXTEND TABLE PLATFORM UP



6. TILT TABLETOP FOR CLOSING by unlocking table knob under table then re-lock in correct close position



7. FLIP UP TABLE as shown in #.7. Then tighten ZTable knob



7. FLIP DOWN TABLE ASSEMBLY



9. FLIP DOWN TOP ZBONES and then tighten mid knobs.



10. LOOEN BASE KNOBS. FLIP DOWN BASE BONES and then re-tighten knobs.



11. MAKE SURE ALL KNOBS ARE TIGHTENED



12. ALL KNOBS ARE TIGHTENED and now you're ready to go!

Warranty: ZStands are durable and strong. In the unlikely event that a ZStand should fail within a year after the original purchase due to a manufacturing defect, ZStand is pleased to repair or replace that product.

DO NOT RETURN PRODUCT TO THE RETAILER. IF YOU NEED ASSISTANCE OR REPLACEMENT PARTS CALL US TOLL FREE: 323 376-0758

Limitation on Warranty and Claims. SELLER WARRANTS THAT THE GOODS SOLD AND DELIVERED BY THE SELLER TO THE BUYER SHALL BE FREE FROM DEFECTS IN WORKMANSHIP AND MATERIAL UNDER NORMAL USE AND SERVICE FOR A PERIOD OF ONE (1) YEAR FROM THE DATE OF DELIVERY. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, WHETHER STATUTORY OR OTHERWISE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Seller's liability for breach of warranty shall arise only upon the return of the defective parts at the buyer's expense after notice to the seller of claimed breach and shall be limited to furnishing a like quantity of such goods free from such defects or, at the seller's option to refund the purchase price. Notice to the seller of claimed defects discoverable by inspection must be given within ten (10) days after receipt of shipment. In no event shall the seller be liable to the buyer for indirect, incidental, collateral or consequential damages of any kind. The buyer indemnifies the seller, its successors and assigns from and against any and all losses, damages and expenses (including reasonable attorney's fees) which the seller may sustain or incur as a result of any claim of negligence, breach of warranty or strict liability in tort in connection with the use of the goods furnished hereunder, except such as may be wholly caused by the negligence of the seller.