

9012/ Z000 Definitive User manual

MAIN

Push the crown to change Mode.

TIME 1

TIME 1
00 01
07:38'22

TIME 2

TIME 2
00 01
03:38'22

ALARM

ALARM
-- 01
00:00'88

CHRONO

 
 
CHR
00 01
00'00"00

COMPASS


COMP
00 01
02:00'88

SYNCHRONIZING THE HANDS

From each mode, push the crown at least 3 seconds. Movement is going into synch mode for adjust and synchronize the hands position.

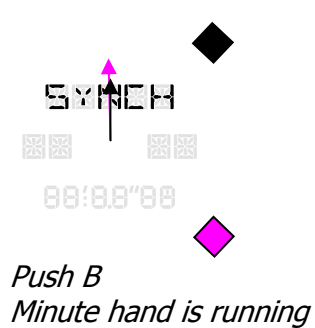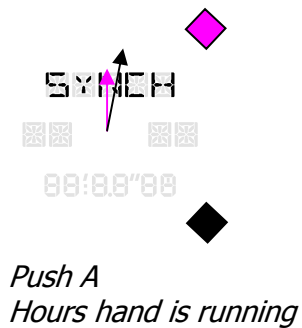


Push the crown to get out

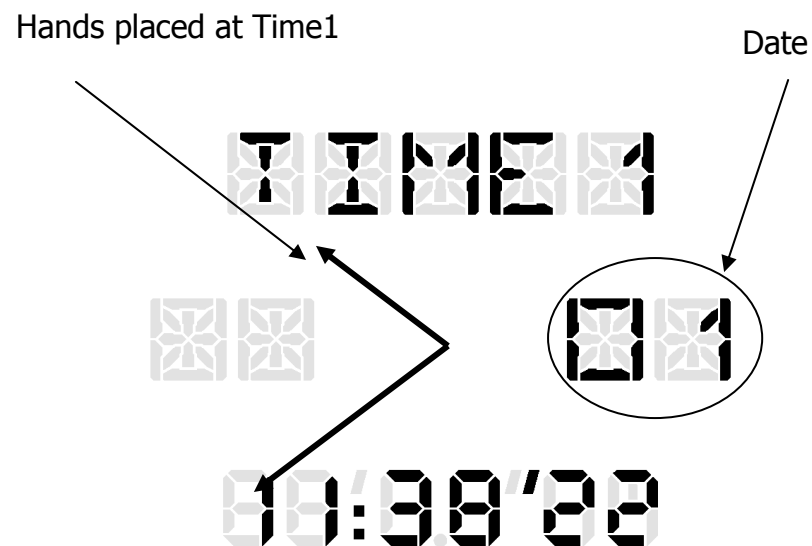 TIME 1 FUNCTION**Actions:**


- A: Exchange Local USA cities: New York, Chicago, Denver, Los Angeles. (Only in USA Version else not used)
- A 1 second: Not used
- B: Change Hands position (LCD viewing for 20 seconds or Time 1)
- B 1 second: Time 1, Date and parameters setting
- A + B: Not used

 To set Time 1, Date and parameters, pull the crown from each mode or press at least 1 second on B from Time 1 mode, hands are placed in LCD viewing mode. (In USA Version instead of TIME 1 : EST, CST, MST or PST following local time set)

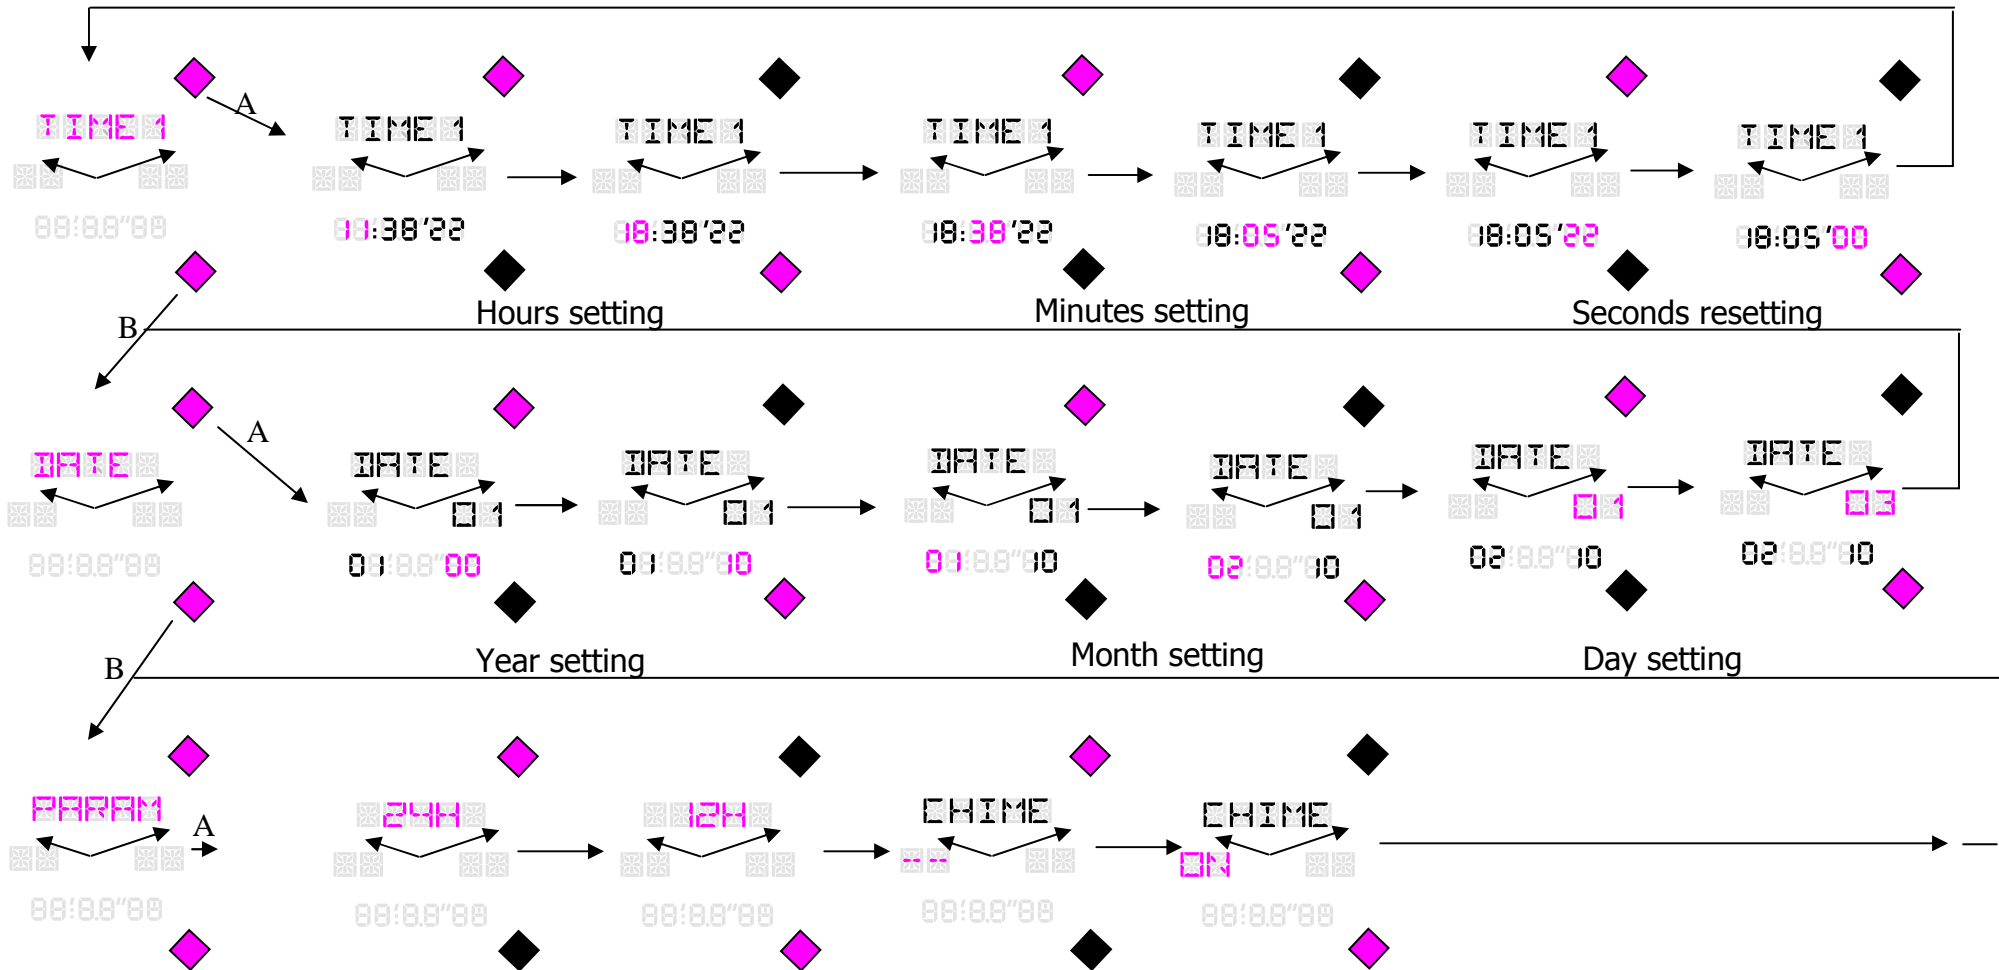

Note: To go out this mode: If B was pushed push the crown from any step or wait for 5 seconds or from "PARAM" push B.
 If crown was pulled, push it.

 
TIME 2 FUNCTION

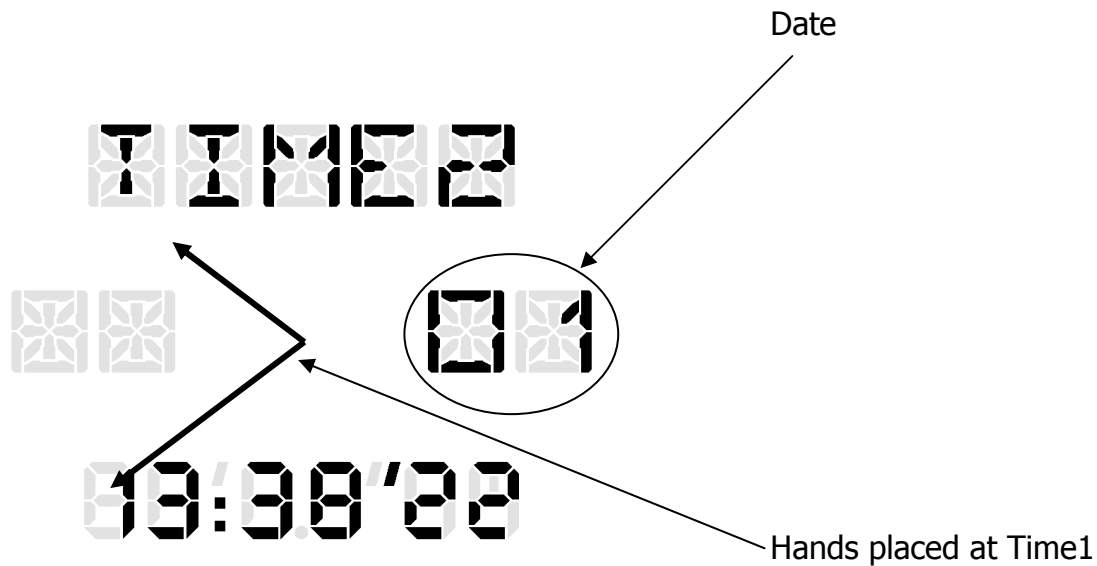

Actions:


- A: Not used
- A 1 second: Not used
- B: Change Hands position (LCD viewing for 20 seconds or Time 1)
- B 1 second: Time 2 setting
- A + B: Voyager Function

 To adjust Time 2 push B at least 1 second, hands are place in LCD viewing mode.

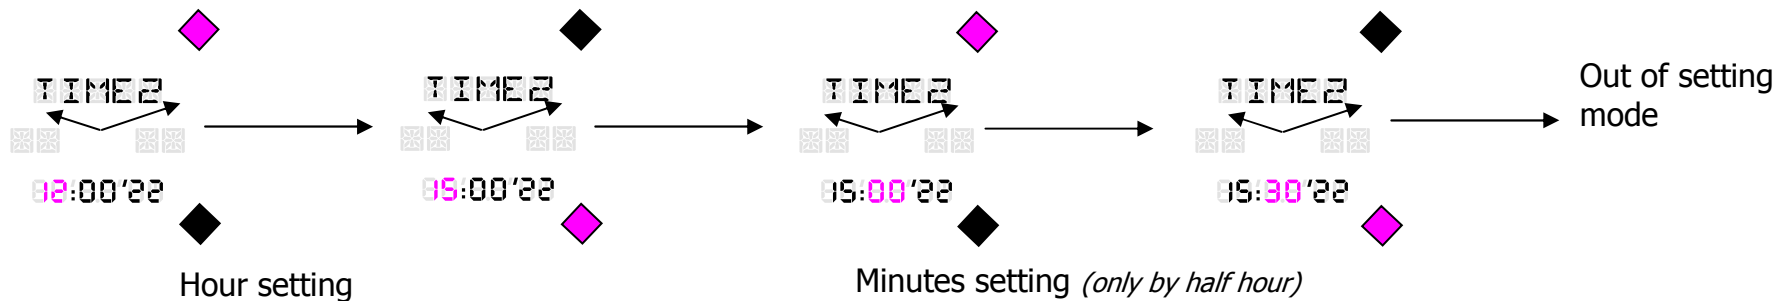

To go out of setting mode quickly, push the crown, else wait for 5 seconds.

 
ALARM FUNCTION

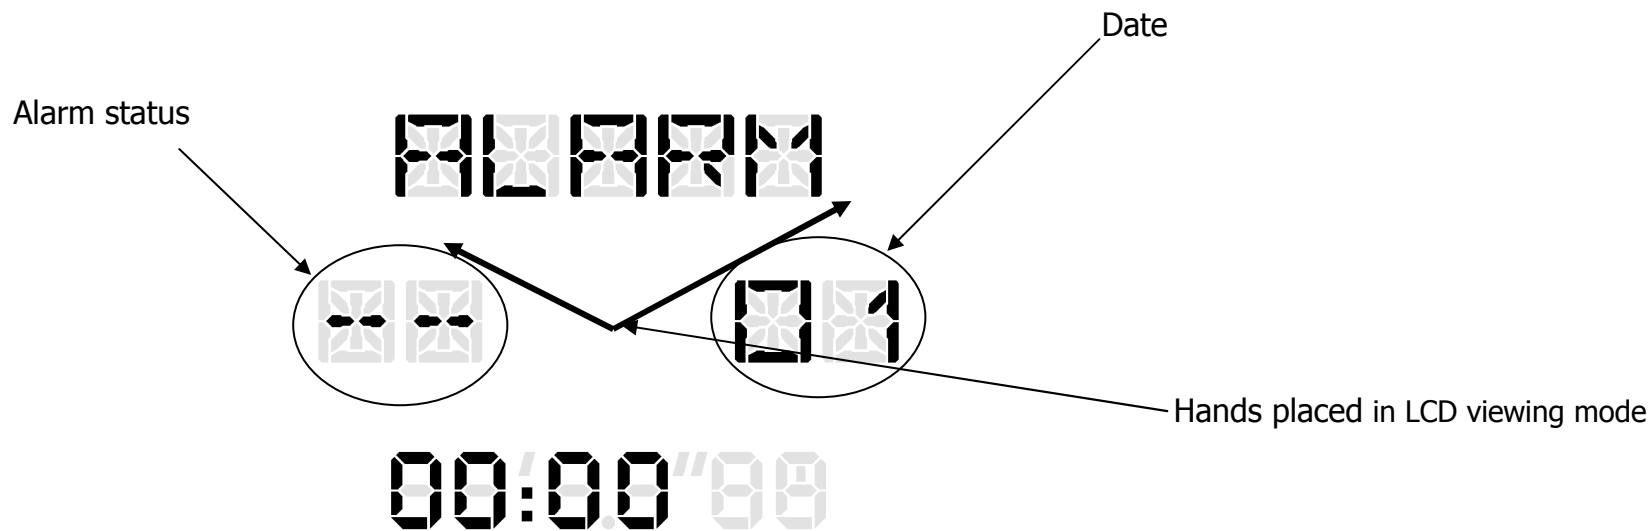

Actions:


- A: Change alarm status and place hands in LCD viewing mode
- A 1 second: Not used
- B: Change Hands position (LCD viewing for 20 seconds or Time 1)
- B 1 second: Alarm setting
- A + B: Not used

 To adjust Alarm push B at least 1 second, hands are place in LCD viewing mode.

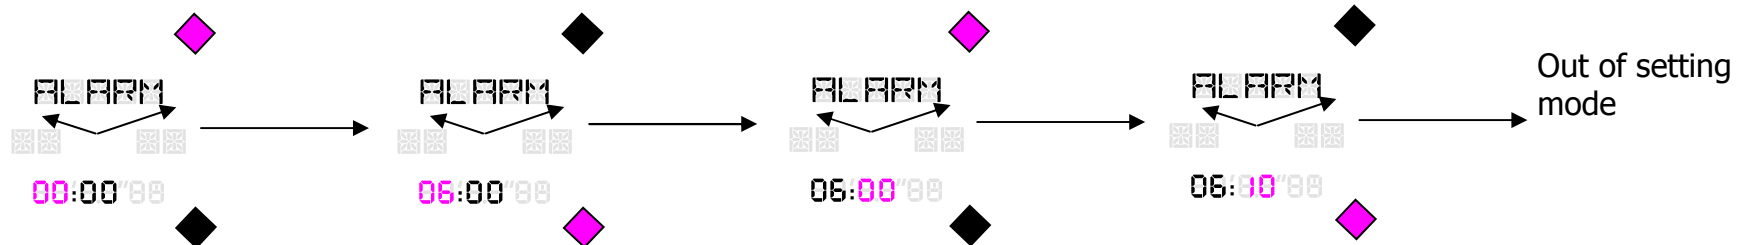

To go out of setting mode quickly, push the crown, else wait for 5 seconds.

 CHRONO FUNCTION

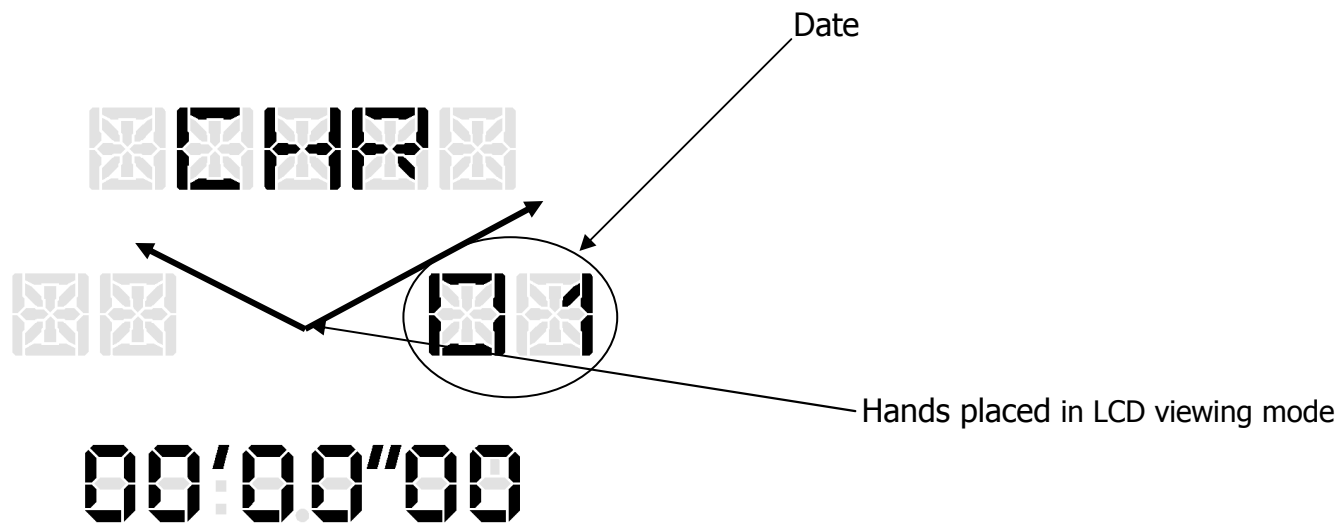

Actions:

Each action place hands in LCD viewing mode for 20 seconds
Read description down

1. Measure of elapsed time

Push on A to start the chrono. Push on A to stop the chrono, display shows the elapsed time.
Push on B to reset the chrono.

2. Measure of cumulated time

Same operations as **1.** but replace "push on B" by push on A to restart the chrono

3. Reading of a partial time when chrono display is frozen

 
Push on A to start the chrono.
Push on B to freeze the display.
Push on B to defreeze the display that gives again the time really elapsed.

4. Measure of a second time

This operation is a combination of the preceding points:

- Push on A to start the chrono
- Push on B to freeze the display (The chrono still count)
- Push on A to stop the chrono (pictograms don't blink because chrono is stop)
- Push on B to defreeze the display: display gives the time elapsed at the moment of chrono stop.
Push on B to reset the chrono


COMPASS FUNCTION

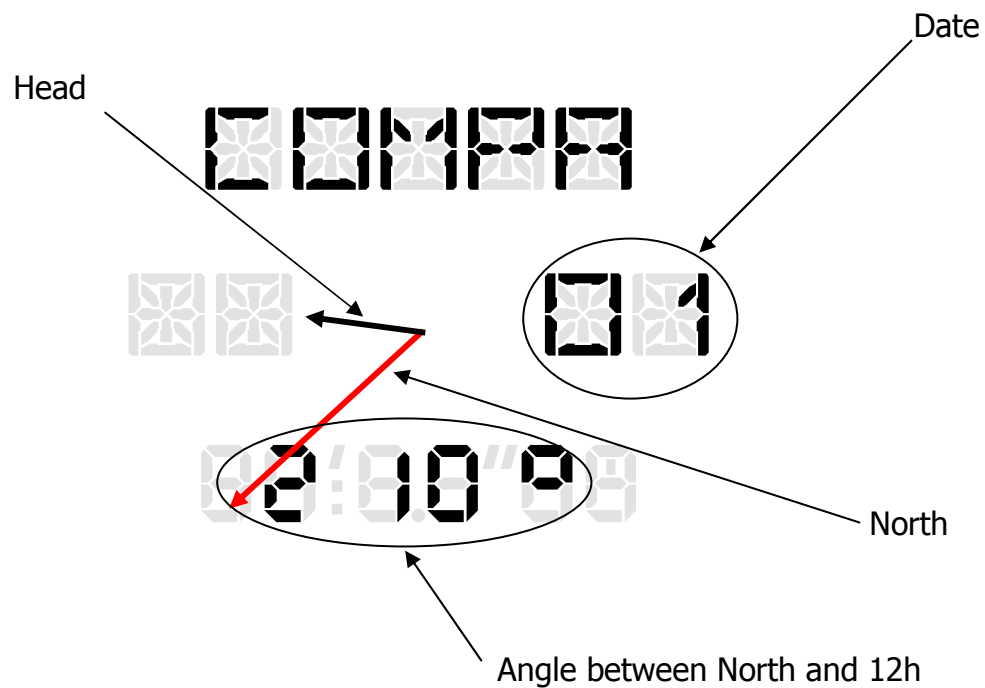

Actions:


- A: Restart measure for 20 seconds
- A 1 second: Head setting
- B: Not used
- B 1 second: Compass Declination and Calibration
- A + B: Not used
- When Compass is in standby mode hands are placed at Time 1

 To adjust Head push A at least 1 second, hands are place in viewing lcd mode.

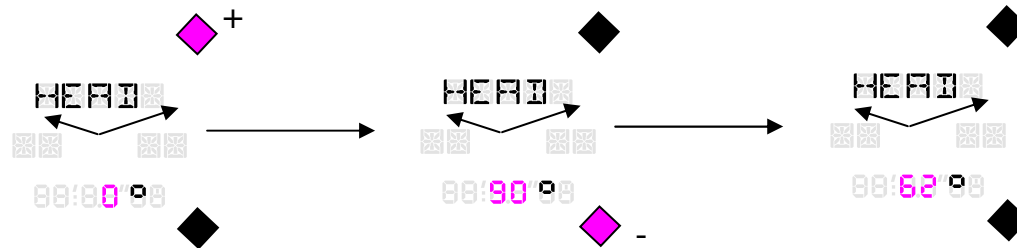

To go out of setting mode push the crown, else wait for 5 seconds.

 To calibrate compass push B at least 1 second, hands are place in viewing lcd mode.

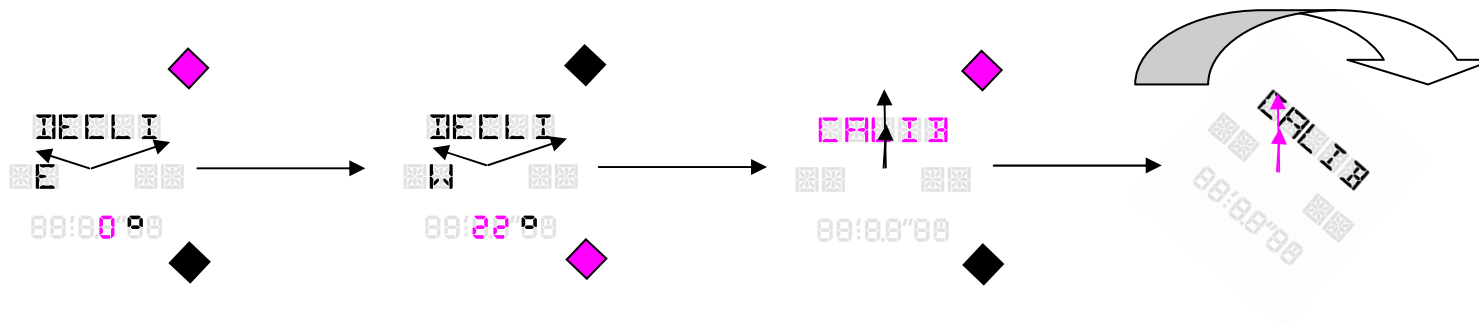

Declination can be set from 40°East to 40° West

To calibrate Compass Hands will run, turn the movement to keep hand in front of you. When calibration is finished the movement get out setting mode.

To go out of setting mode quickly, push the crown, else wait for 5 seconds.

LOW BATTERY

When Low battery is detected all functions are disabled, hands are placed at 12h00.

Batt blinks.

If Alarm was ON it will not be disabled until ring.

