COMPANIONS

TRUSTED SINCE 1941




OWNERS MANUAL

Part No. PCS12V

IMPORTANT: Read these instructions for use carefully. Familiarise yourself with the appliance before connecting to DC power source. Keep these instructions for future reference.


UNDERSTANDING YOUR APPLIANCE

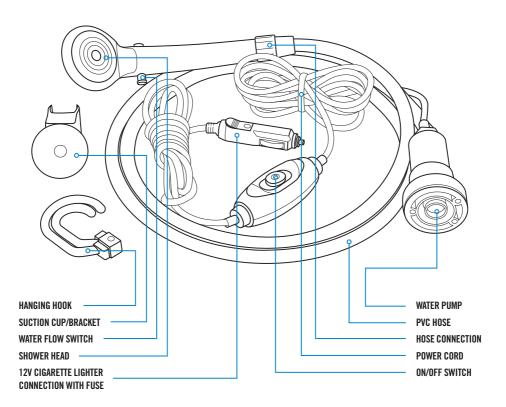

OPERATING INSTRUCTIONS


- Use clean water, do not use direct from river or lakes.
- Do not operate shower without water at any time.
- Ensure bucket is filled with sufficient water for intended use.

Step 1. Insert rubber washer in hose connection and connect hose to shower head.

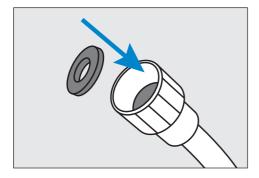


Step 2. Place shower pump in bucket.

Step 3. Insert cigarette lighter into suitable 12V DC outlet and switch on inline switch.

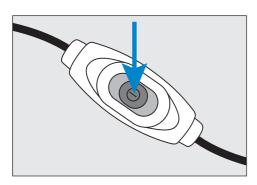

Step 4. Adjust flow of water as required using control on shower head.

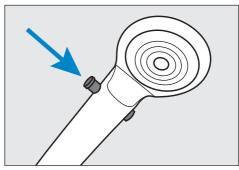

IMPORTANT

Do not take the pump out of the bucket while in use and ensure it is submerged in water before use.

TROUBLE SHOOTING

IF WATER DOES NOT FLOW

- Turn off pump.
- Lift pump from bucket and hold shower head vertical to draw water from shower.
- · Place pump in bucket and retry.

IF PUMP DOES NOT RUN

- Check sufficient 12V DC power is available.
- Check fuse in cigarette lighter fitting.

SPECIFICATIONS

Part no.	PCS12V
Water flow	4 L per minute
Power supply	12V DC
Power cord length	4 m
Hose length	2 m
Fuse	5A
Max. draw	3A
Weight	0.68 kg

WARRANTY - For details see www.companionleisure.com.au/warranty

Companion® is a registered trademark of **Primus Australia Pty Ltd**

Designed & Imported by:

Adventure Trading Australia Pty Ltd
71 Charles Ulm Place,
Eagle Farm, QLD 4009
AUSTRALIA

Made in China