

UNIVERSAL Ni-MH BATTERY CHARGER

User Manual

Please read through the instruction manual thoroughly before use and keep the manual for future reference. This universal charger can recharge 2 or 4 pieces of size AAA, AA, C or D and 1 or 2 pieces 9V Ni-MH/ Ni-Cd batteries.

CHARGING:

1. Place 2 or 4 pieces of AAA, AA, C, D or 1 to 2 pieces of 9V Ni-MH/ Ni-Cd batteries into the battery compartment. Please pay attention to the correct polarity + or -.
2. Now you can connect the charger to the 240V mains.
3. The LED's will switch on to indicate the correct charging status.
4. Observe the charging time. When the charging is completed, disconnect the charger from the mains and take out the batteries.
5. Unplug and re-plug the charger each time when you recharge the empty batteries.

SPECIFICATIONS:

Input :	240VAC, 50Hz
Charge Current :	2 or 4 PCS AA/AAA/C/D 180mA 1 – 2 PCS 9V 18mA
Operating temperature:	0°C - 45°C

CHARGING TIME TABLE:


Size	Capacity	Charging Time
AAA	500-550mAh	3 hours
AAA	600-800mAh	3.5-5 hours
AAA	900-1100mAh	5.5-7 hours
AA	1100-1500mAh	7-9 hours
AA	1600-1800mAh	10-11 hours
AA	2100-2700mAh	13-16 hours
C/ D	2500-3000mAh	16 hours
C/D	* 4000-6000mAh	2 x 16 hours
D	* 8000-10000mAh	3 x 16 hours
9V	110-160mAh	7-10 hours
9V	160-200mAh	10-12 hours

The charge time will vary depending on the brand, capacity and condition of batteries being charged.

* To ensure fully charged of higher capacity of batteries, these batteries can be recharged one more cycle in this charger. After the 1st 16 hours charging, the charger will switch off automatically and the LED will turn off. Unplug and then re-plug the charger for additional charging cycle.

IMPORTANT SAFETY INSTRUCTIONS

1. Before charging, read instruction.
2. This charger is intended for use with Nickel-metal-hydride and Nickel-Cadmium batteries rechargeable batteries. Attempting to charge other types of batteries may cause personal injury and damage to the charger.
3. Do not expose charger to rain or moisture. For indoor use only.
4. Remove from mains when not in use.
5. Never use an extension cord or any attachment not recommended by manufacturer, otherwise this may result in a risk of fire, electric shock or injury to persons.
6. Do not operate the charger if it has been subjected to shock or damage. Take it to a qualified serviceman for repair.
7. Do not disassemble the charger. Incorrect reassemble may result in a risk of electric shock or fire.
8. Unplug the charger from outlet before attempting any maintenance of cleaning.
11. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
12. Children should be supervised to ensure that they do not play with the appliance.
13. Before scrapping your charger, remove the batteries from the unit and they are disposed of safety.
14. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Correct Disposal of this product	
	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>
Directive 2012/19/EU	