


Loading Dock Pro

presents

HOW TO MEASURE YOUR DOCK LEVELER SPRING

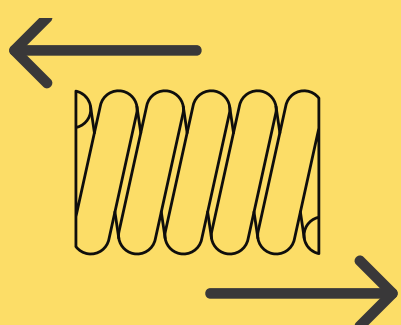

Find the Length

The length of your spring is measured from inside of hook - to - inside of hook. Some estimation may be required if your spring is broken.




Outside Diameter

Measure the outside diameter to the nearest 1/8". For large (main lifting) springs, the "OD" can measure up to 4".



Coil Count

Simply count the coils from one end to the other. Your count might be in-between if you end with a half wrap. Typical coil counts for main leveler springs is 20-30 coils.

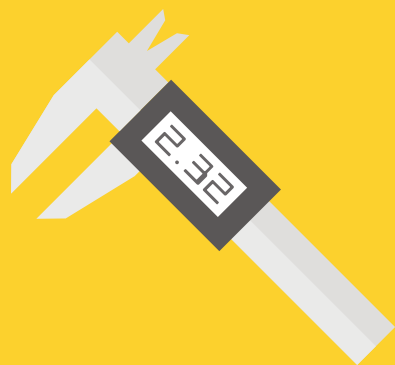

Coil Diameter

If you don't have a digital caliper handy, some basic math will do the trick. Count 20 coils and record the length of the 20 coils. Then divide your length by 20. For example - if 20 coils measures 8-3/4" then take $8.75/20 = 0.4375$



Double Check & Order

It's always a good idea to reference your owner's manual to confirm the part number. Remember to replace springs in pairs to ensure even pull & always follow safety precautions outlined by the equipment manufacturer.



Parts@LoadingDockPro.com