

SCAN Code for
Instructional Video



Or visit link below
<https://bit.ly/33IVMUc>

Luxury Pop-Up Gazebo


Item # 905443

Quick SET UP Instructions
& TEAR DOWN Instructions



Included in Box:

- (A) Folded Gazebo
- (B) Ground Stakes
- (C) Tie Downs Ropes
- (D) Storage Bag

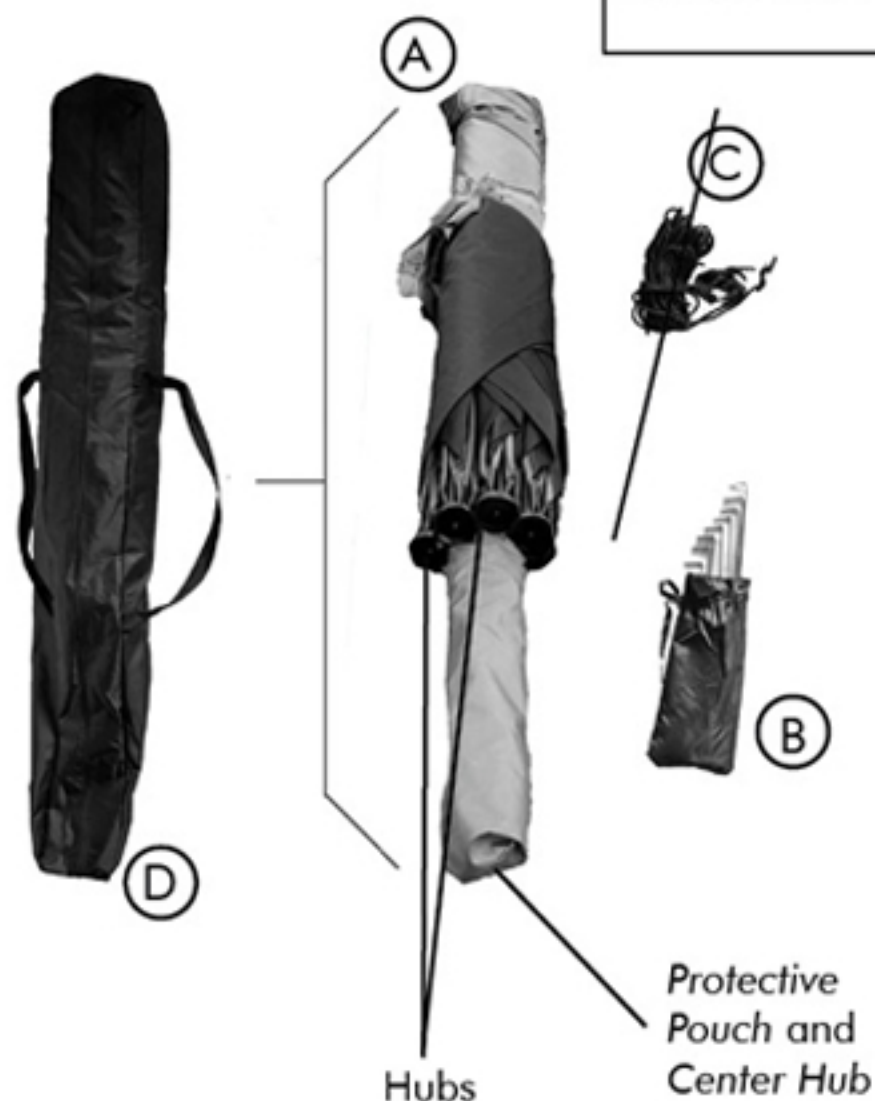

Congratulations on your new Backyard Expressions' Luxury Pop-Up Gazebo, please read these instructions thoroughly before attempting to set this structure up.

Large Luxury Hub Style Pop-Up Gazebo

Quick Set-Up Instructions

Before You Begin:

- Locate a level clear area free of debris to prevent tears while setting up.
- For easier set-up in windy conditions, make sure to position one corner of gazebo into the wind.
- If inclement weather exists, do not set up under any overhead objects that could fall onto structure.
- Never let children play unattended in structure.
- Practice setting this gazebo up a few times until comfortable.
- Do not discard foam from inside the box, you will use it to protect hubs when storing.
- Not intended for use as a permanent structure.

Step 1: Unzip the storage bag completely and remove stake/rope pouch. Remove tie straps and protective pouch (see image on left for location) from around unit.



Step 2: Pick the gazebo up directly from the carry bag and stand it on the center hub (see "Included In Box" image above for location) (bottom of hub will have a black circular piece on the tip).



NOTE: Folded structure will appear to be inside out.

Step 3: With the folded gazebo standing up on the center hub, hold one corner of the material and let the gazebo fall open until you see the roof lying flat on top, facing up.


CAUTION: DO NOT force shelter when folding or unfolding. Watch for entanglement of poles



NOTE: If it does not fall open naturally, unfold the gazebo until you can see the roof panel lying flat. At this point the poles should be on the inside of the tent with the roof facing up.

NOTE: In windy conditions, anchor the bottom of the leg poles firmly to ground with the provided stakes and tie ropes. This will prevent the tent from blowing away in the wind.

Step 4: With the poles on the inside, reach for the handle at the center of one wall and pull outward, in one fast/firm motion, until the section pops out, while holding the roof edge with the opposite hand.

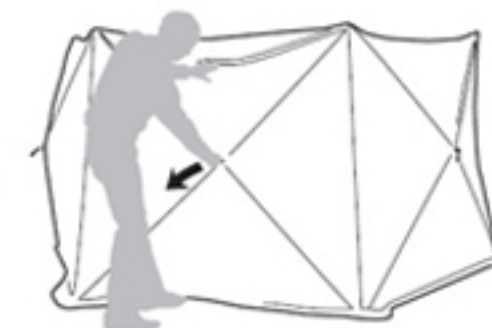

Step 5: Continue around the gazebo repeating the previous step until all wall panels are popped out.

Step 6: Unzip door and enter the door to push up on one of the ceiling supports or the center hub (see Included in Box image for location) until the ceiling pops up.




WARNING: This step should be done with caution, as there's a lot of tension on roof hub and pole assemblies.

Step 7: Exit the gazebo and anchor the loop - located on the bottom of poles on the inside edge, against the ground (to find them easily, just flip the edge of fabric on bottom of the outside of gazebo). Ensure the structure is firmly anchored to ground using the included stakes. Be sure the stakes are inserted into ground straight.

WARNING: For windy conditions, stake the tie down ropes to the ground and attach to the handle on the center side hubs. Use adjustment slides on the rope to confirm structure is secured well.

Enjoy your new/set-up Luxury Pop-Up Gazebo!

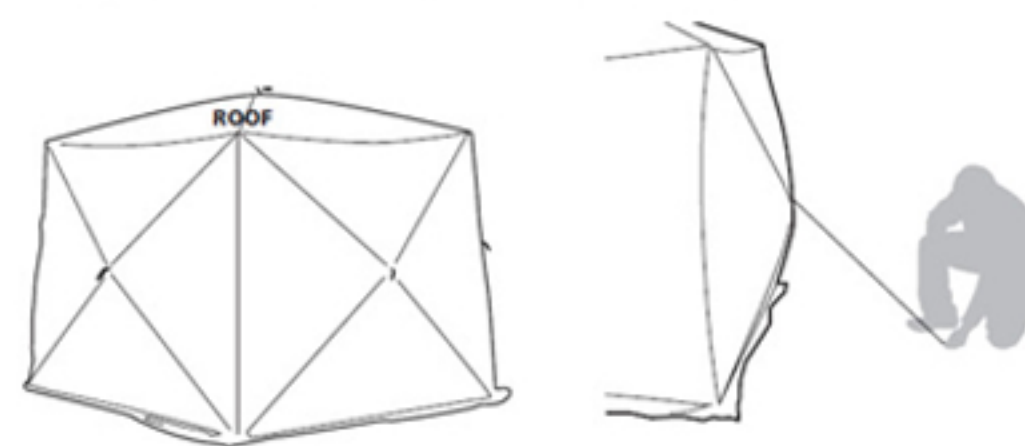


Large Luxury Hub Style Pop-Up Gazebo

Take Down Instructions


Step 1: Remove all stakes and tie downs.

Step 2: Using hand, pull down center hub until the roof collapses and tensions released. Exit structure and zip the door shut to reduce chance of poles getting tangled.

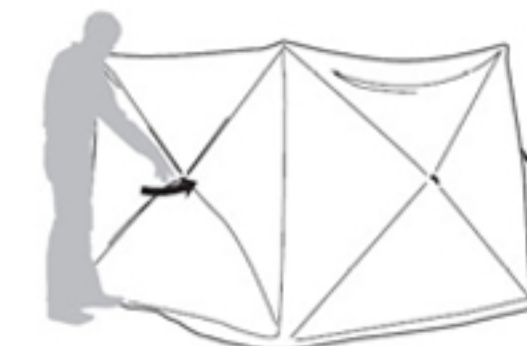

Step 3: Push inward on all the side walls to collapse them.

Step 4: Now the gazebo is laying flat, gather the corners together, taking caution not to force or tangle the poles.

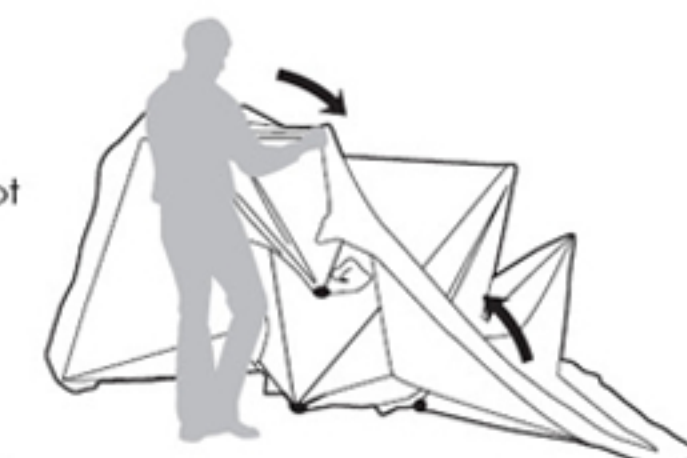

Step 5: Take the provided tie strap and wrap it around the folded structure to allow easier insertion into carrying bag. Place folded gazebo into carrying bag with the hubs toward bottom of bag. Place the stakes and tie down ropes into bag.



Maintenance & Storing:

- Take down when not in use.
- Use extra tie downs in windy or bad weather.
- Never put tent away wet.
- Store in dry cool place.
- Before storing your hub style gazebo in the bag, the manufacturer suggests covering each of the five HUBS with the provided shipping foam to avoid the hubs rubbing the top fabric and to preserve the life of your gazebo.

Dear Customer - To ensure the fastest possible service - Please email the information below and include photos when appropriate to ddiparts@ddicorp.com

Customer Name	
Email Address	
Mailing Address	
Phone number w/area code	
Item name and description	hub style pop up canopy
Item UPC code	begins with 681129054435
Date of purchase	
Name & Location of store purchased	
Specific Issue	
Part # needed	
Photos included	Yes / No

Please keep original purchase receipt for best service

Phone: 1-612-888-7550

Fax: 1-563-582-3680

WARNING:

Please read the following instructions carefully before setting up and tearing down your gazebo.

GAZEBO: KEEP GAZEBO FABRIC AWAY FROM ALL FLAME OR HEAT SOURCES. This gazebo fabric meets CPAI-84 (SOR/90-245 in Canada) fire resistance specifications. The application of any foreign substance to fabric may render the flame resistant qualities ineffective. The fabric is not fire proof. Fabric will burn if left in contact with continuous source of flame.