

Before you Start:

1. Unwrap all packaging materials and make sure you have all the parts listed.
2. Prepare the necessary tools and have plenty of space for assembly.
3. It is recommended to have 2 people available for assembly.

Warnings:

1. This product is intended for a maximum weight capacity of 500 lbs. Do not exceed this weight limit.
2. Do not stand on the product.
3. This product should be assembled and used on firm, level ground. If used on unlevel ground, tipping may occur. Frame should remain in contact with the ground at all times.
4. Keep small parts out of reach of children.
5. Check all screws and/or bolts regularly to ensure they are tight and secure. It is recommended to check screws and/or bolts monthly.
6. Do not use product if parts are missing, damaged or worn.
7. Care should be taken when sitting down with sharp objects. This could cause tears to fabric or sling material.
8. Individual seat areas are designed to be used by one person at a time.
9. Do not place objects directly in front of or behind the swing when in use.
10. Do not put arms or legs between seat and frame when in use.
11. Manufacturer is not responsible for weather related damages due to winds and adverse weather conditions.

Care Instructions:

1. To clean, wipe with a sponge and warm soapy water. Then wipe with a dry, clean cloth. Do not use solvent based cleaners or detergents as they can bleach or damage the product.
2. Never use a pressure hose or washer to clean the product.
3. Never use scourers, abrasives or chemical cleaners on the product.
4. Store product in a cool dry place. Before storage, ensure frame and seats are clean and dry.
5. It is recommended to use furniture covers to protect your product when not in use.
6. It is recommended to store product in a cool dry place during bad weather and during winter months.
7. The frames are manufactured using a powder coated steel tubing. When steel is exposed to air and moisture it will rust. Touch up any scratches with touch up paint to prevent further exposure and rusting.



Please help us give you the best possible service by emailing your parts & service needs to: ddiparts@ddicorp.com

Emails are responded to daily and are the most accurate way to communicate item/parts needs.

This form is also available online at: <http://ddiretail.com/contact-us/>



Customer Name	
Mailing address	
Phone number	
Email address	
Item name	Iron Swing Chair - Bronze
Item UPC Code	Begins with 6-81129-06729
Date of purchase	
Name of Store	
Specific Issue	
Part needed – please identify from assembly instructions	
Please keep original purchase receipt for best service	
– if you prefer you may also leave a message or send a text to this number: 1-612-888-7550– Your message will be replied to in the order received.	

Many parts are available to purchase from our website:

<https://backyard-expressions.com/collections/replacement-parts>




906729 Iron Swing Chair Instruction

PARTS & HARDWARE LIST



ASSEMBLY INSTRUCTIONS

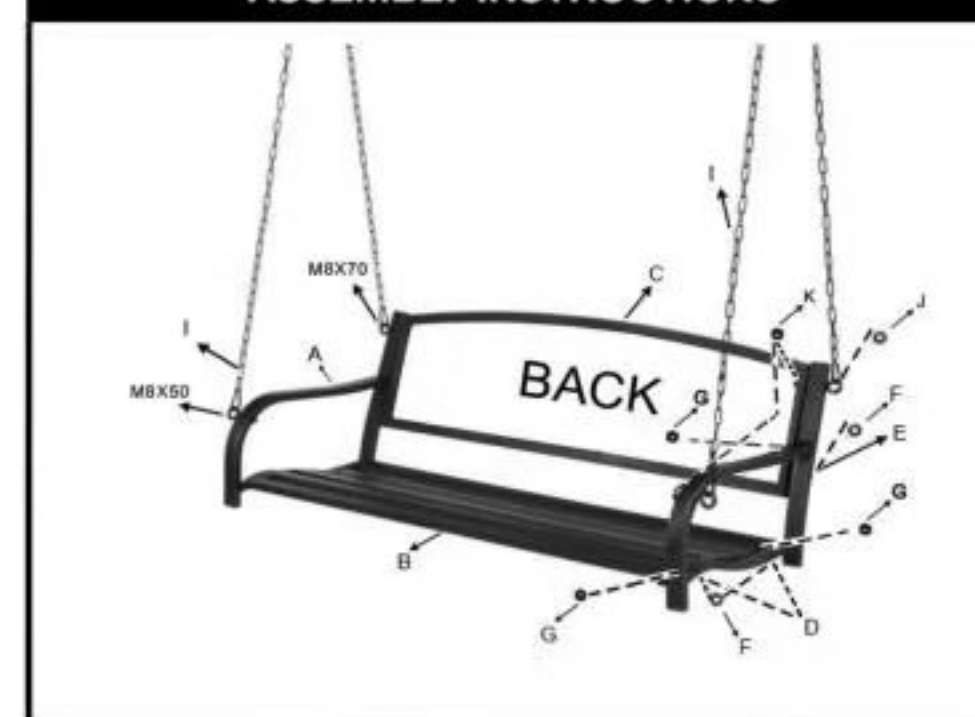

CAUTION: Do not over tighten fasteners.

1. Attach Seat (B) to Legs (A) by aligning holes in the leg crossbar with corresponding holes in the seat frame. Use the Hex Key (H) secure Screws (D), flat Washers (F) and Hex Nuts (G). Do not fully tighten fasteners.

2. Slide Back (C) between Legs (A) and align holes. Insert Screws (E) through holes. Use the Hex Key (H) secure Screws (E), flat Washers (F) and Hex Nuts (G). Insert Chain Screws (M8X70) through holes, secure with Washers (J) and Hex Nuts (K).

3. Insert Chain Screws (M8X50) through holes in the Legs (A).

4. Tighten all fasteners.