


913280 INSTRUCTIONS

PARTS LIST:

Unpack parts making sure all pieces are present before attempting to assemble No. Qty. Part:

- A 1Adjustable grill
- B 1Turn lock screw
- C 1Grill support post with handle
- D 1Grill support post with stake

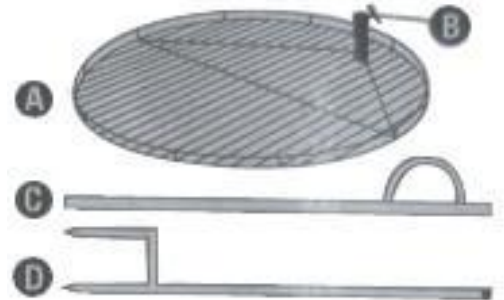

INSTALLATION:

Step 1

Slide adjustable grill (A) onto grill support post with handle (C). Screw grill support post with handle (C) into grill support post with ground stake (D).

Step 2

Use the turn lock screw (B) on the adjustable grill (A) to adjust the height of the grill. Make sure the turn lock is tight and secure.

Step 3


Push the ground stake into a hard compact surface or secure between several rocks. Make sure ground stake is well into the ground. Loosen the turn lock screw (B) and swing grill into open fire pit. Add grilling items.

Helpful Hints:

- Turn grill slowly to avoid rolling the food off the grill
- Be cautious, the grill will be hot if placed over a fire. Use hand protection.
- Do not place the grill in an area where it could be easily tripped over

Cleaning Instructions

The swing-a-way grill should be cleaned periodically using warm, soapy water. Use a wire brush, steel wool or a scouring pad to remove stubborn or loose spots.

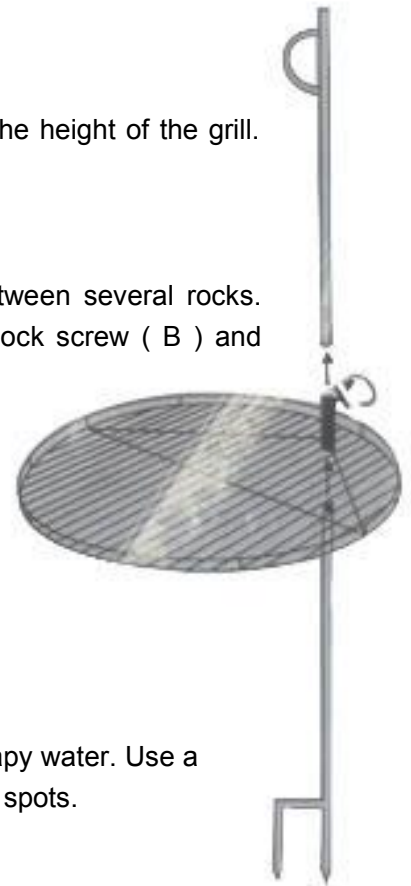

Dear Customer – To ensure the fastest possible service – Please email the information below and include photos when appropriate to ddiparts@ddicorp.com

Customer Name	
Email Address	
Mailing Address	
Phone number w/area code	
Item name and description	
Item UPC code	Begins with 681129 -
Date of purchase	
Name & Location of store purchased	
Specific Issue	
Part # needed	
Photos included	Yes / No

Please keep original purchase receipt for best service

Phone: 1-612-888-7550

Fax: 1-563-582-3680