



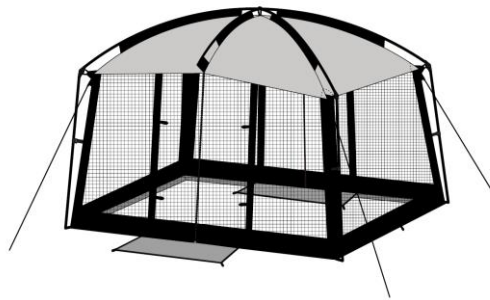

BACKYARD *expressions*

PATIO • HOME • GARDEN

11'X9' Screen House

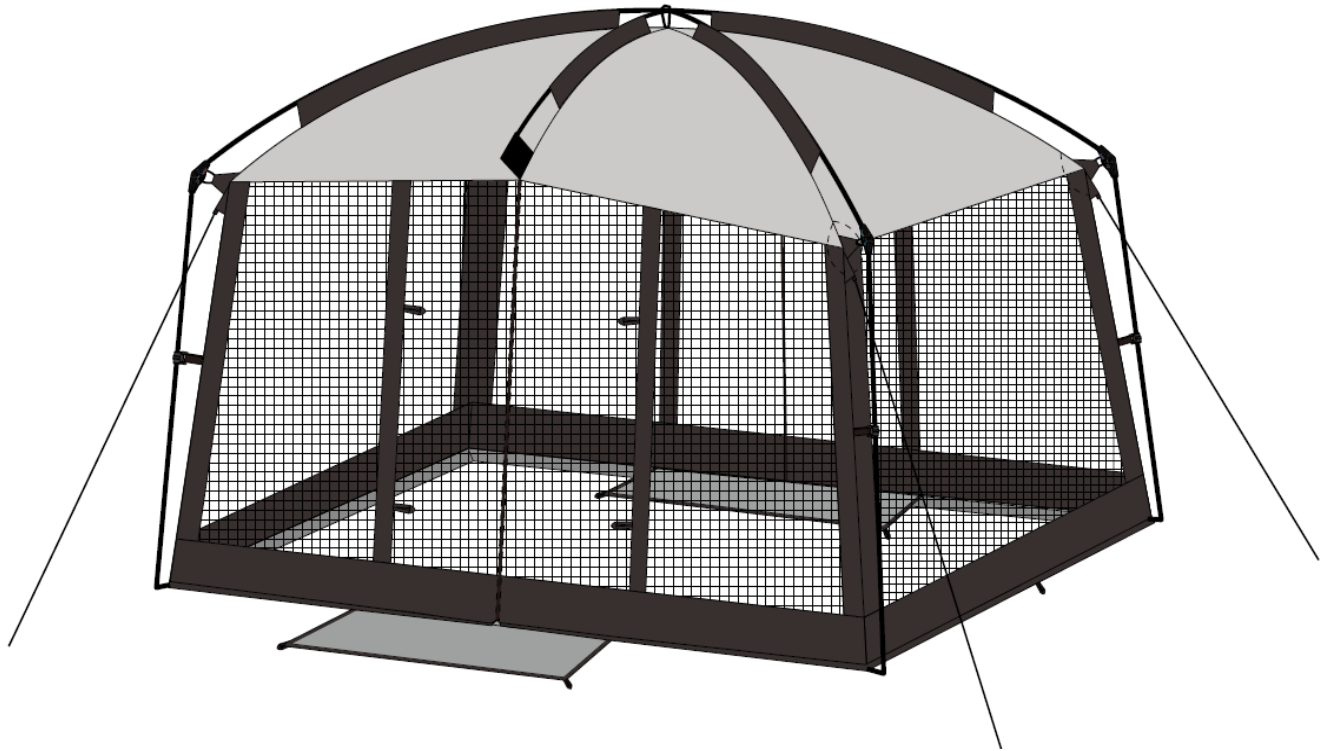

11'X9' Screen House (Light Grey Top and Brown Bottom)

UPC#: 6-81129-14890-5

11'X9' Screen House(Light Grey Top and Blue Bottom)

UPC#: 6-81129-14891-2

11'X9' Screen House(Light Grey Top and Black Bottom)

UPC#: 6-81129-14892-9

11'X9' Screen House(Light Grey Top and Green Bottom)

UPC#: 6-81129-14893-6



BACKYARD *expressions*


PATIO • HOME • GARDEN

11'X9' Screen House Packing List

B

stake bag x 1.

A

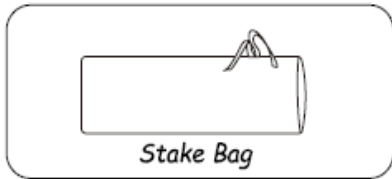

Stake Bag


9 Section Fiberglass pole x 2--Longer

F



pole bag x 1.

B

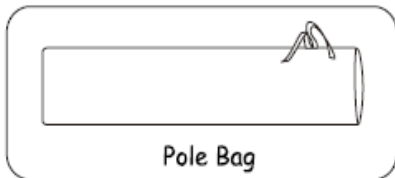

Pole Bag

7 Section Fiberglass pole x 1--Shorter

G



steel stake x 16.

C



Steel Stake

steel pole x 4.

H

3 Section steel pole x 4



guy rope x 4

D



welcome mat x 2.

I



Welcome Mat

carry bag x 1.

E




tent x 1.

J



Tent

suggested tool:
rubber mallet or hammer(not included)

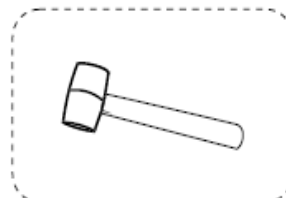


ASSEMBLY INSTRUCTIONS

CAUTION: THIS RECREATIONAL PRODUCT REQUIRES TWO ADULTS TO ASSEMBLE.

STEP 1: Assemble The Top

Select a smooth level site. Lay all parts of the structure out on a flat open area. Extend poles and sort into groups to simplify assembly process.


Using the roof fiberglass poles through the pole sleeves and insert the ends into elbow connector & pockets to shape the top. Gently flex each pole and place ends into elbow connector which is located on the roof corners.

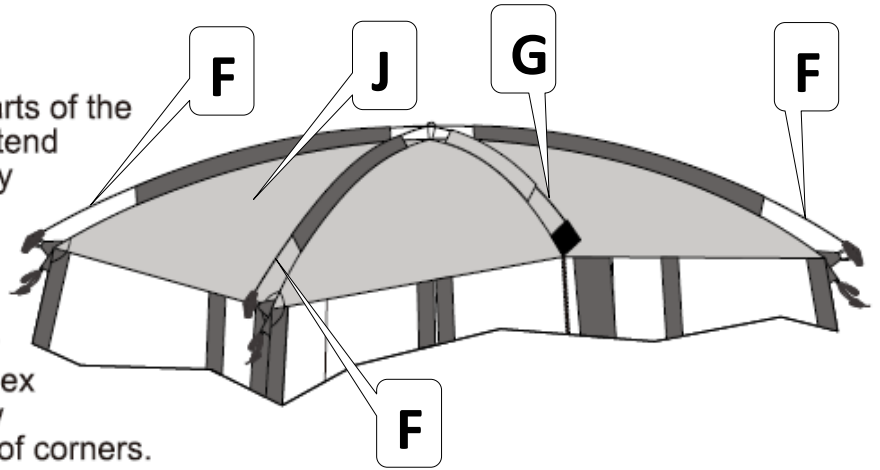

REMARK: PUT SHORTEST ROOF POLE ON TOP OF THE OTHERS TO MAKE A BETTER ROOF SHAPE.


STEP 2: Setup The Steel Leg Poles

Insert a steel leg pole into the smooth end of elbow connector and insert the other end into its pin and ring assembly. Repeat for all leg poles.

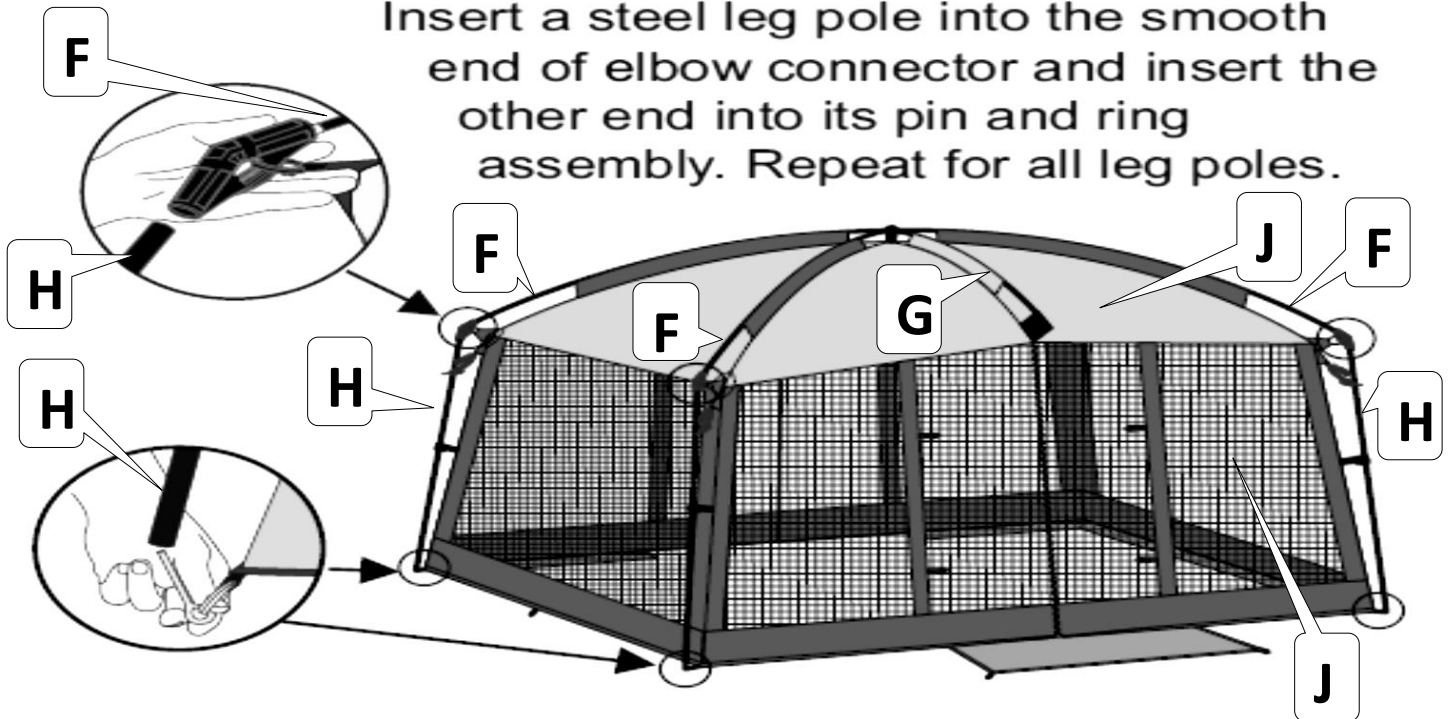


STEP 3: Close the Clips

Close the clips on the pole. Repeat on all 4 leg poles.

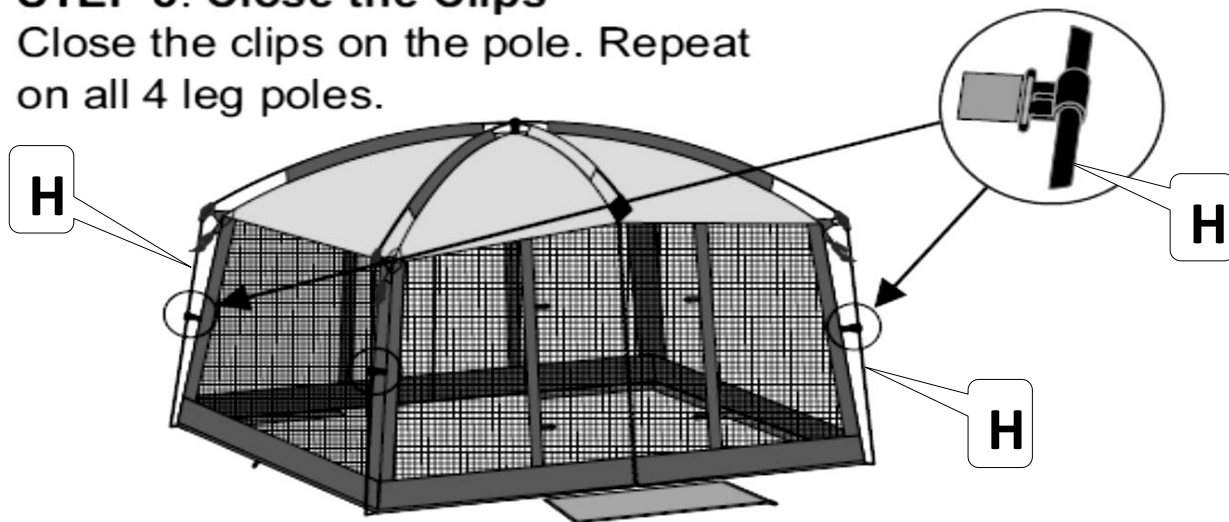


STEP 4: Stake The Screen Mesh

Stake the mesh by driving stakes through the pin and rings on 4 corners and the middle of the 4 sides of the tent, tie the guy lines to the loops on the eave. Extend guy line to the ground and stake securely. Repeat for all guy lines.

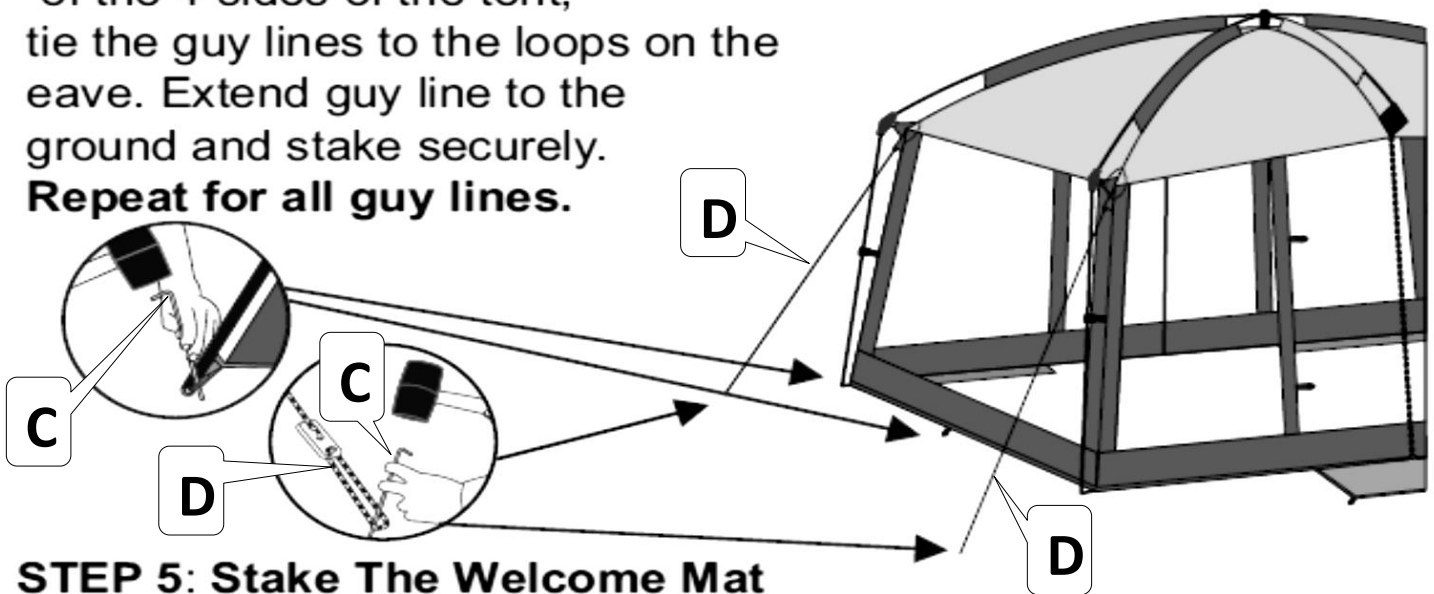

STEP 5: Stake The Welcome Mat

Hang the welcome mat to door, and stake the welcome mat through the loops on 2 corners of the mat.

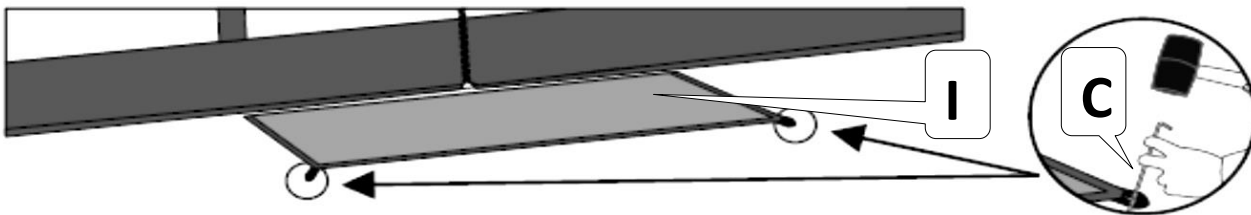

DISASSEMBLY INSTRUCTIONS

 **CAUTION: MAKE SURE DOORS ARE ZIPPED NEARLY CLOSED BEFORE DISASSEMBLY.**

STEP 1: Remove The Stakes

Carefully remove stakes by pulling out the ends. Do not pull or tug at the stake loops sewn onto the fabric body. Remove excess soil from the stakes and store them in their bag.

STEP 2: Take Down the Screen House

- A) Release the fabric tie from one leg pole. Lift screen and pull pin-ring out from the leg pole. Repeat for each leg pole.
- B) Pull one leg pole out from roof elbow. Set down gently. Repeat for each leg pole.

- C) Gently release one roof pole from the elbow connector, slide completely out of pole sleeve. Repeat for each pole.
- D) Remove poles from pockets.
- E) Collapse all poles and store them in the pole bag.

STEP 3: Fold The Screen House

Fold the tent into a rectangular shape the same width as the pole bag. Lay the pole bag at one end of the tent and roll them tightly together, slowly squeeze air out as you go. Store the screen in carry bag provided.



WARNING

- 👉 **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC, THIS FABRIC IS NOT FIREPROOF!** The fabric may burn if left in continuous contact with any flame source. Never use any fuel burning, oxygen consuming devices, or any device that produces fumes (including, but not limited to cooking stoves, lanterns, candles, or heaters) in or around your product. Inhalation of fumes may result in carbon monoxide poisoning, injury and/or death.
- 👉 Additional precautions may be necessary during inclement or “surprise” weather conditions. Use guy lines to help secure your structure during periods of heavy winds. Storms or steady rains may collect in water pockets on the roof. This will add weight, which can weaken the overall structure causing the uprights to collapse. Maintain a watchful eye and remove any water accumulation that may occur.
- 👉 Your product must be stored dry. One of the easiest ways to damage your product is storing it while it is wet. Once mildew sets in, the stains are permanent. Stains caused by improper storage is not covered

- 👉 When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to the product.
- 👉 Please read instructions prior to assembly and use.
- 👉 Some parts may contain sharp edges. Wear protective gloves if necessary. It is recommended to have 2 people available for a safe assembly.
- 👉 Keep all children and pets away from assembly area.
- 👉 Begin assembly no less than 8 ft. from any obstruction such as a fence, house, overhanging branches, or electrical wires.
- 👉 Install on level ground.
- 👉 The screen tent is intended for sunshade and enjoyment purposes and is not considered a permanent structure. It is not meant to withstand extreme weather conditions, including high wind, heavy rain or snow. Weather related damages will not be covered by the manufacturer.
- 👉 The canopy is not waterproof and may leak during exposure to precipitation. Keep all flame and heat sources away from material. It is not fireproof. It will burn if left in contact with any flame source.
- 👉 The application of any foreign substance to the canopy may render the flame-resistant properties ineffective.
- 👉 It is recommended to dry and disassemble and store screen tent when not in use. Screen tent is not meant as a year round structure. It is recommended to be taken down and stored in a dry location when not in use. Wipe down and dry off metal parts. Canopy should be dried prior to storage.



BACKYARD expressions

PATIO • HOME • GARDEN



Please help us give you the best possible service by emailing your parts & service needs to: CustomerService@DDIcorp.com

**Emails are responded to daily and are the most accurate way to communicate item/parts needs.
Purchase receipt is necessary for any warranty claim or assistance.**

In addition to your purchase receipt please include the following information in your email:

Item Name	11'X9' Screen House
Item UPC Code	See Page 1
Specific Issue	
Part Needed—Please Identify from Assembly Instructions	
Your Shipping Address	

Parts and parts listings for many of our products can be found at:
<https://backyard-expressions.com/collections/replacement-parts>

PRODUCT WARRANTY SHALL NOT APPLY TO ANY PRODUCT OR ANY PART THEREOF, WHICH HAS BEEN SUBJECT TO ACCIDENT, NEGLIGENCE, WEATHER RELATED DAMAGE, ALTERATION, ABUSE, OR MISUSE OR TO PRODUCT SOLD AS-IS, END OF SEASON, OPEN BOX OR OTHER SUBSTANTIALLY DISCOUNTED PRODUCT.

DDI MAKES NO WARRANTY WHATSOEVER IN RESPECT TO ACCESSORIES OR PARTS NOT SUPPLIED BY US.

DDI IS NOT RESPONSIBLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHICH MAY ARISE OUT OF THE PURCHASE OR USE OF ANY DDI PRODUCT.

PRODUCT LIABILITY FOR ANY BREACH OF THIS WARRANTY SHALL BE AT THE DISCRETION OF DDI AND LIMITED TO REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT.

WARRANTY CLAIMS RECEIVED 90 DAYS AFTER PURCHASE DATE (RECEIPT REQUIRED) MAY BE SUBJECT TO ADDITIONAL COSTS AND ARE ASSESSED BY THE WARRANTY CLAIM DEPARTMENT.