

914920 Assembly Instructions

DO NOT RETURN THIS PRODUCT TO THE STORE. FOR MISSING PARTS OR QUESTIONS ABOUT THIS PRODUCT, PLEASE EMAIL US AT ddiparts@ddicorp.com or call us at 612-888-7550

PARTS LIST

2 x ① Base	5 x ④ Bolt	2 x ⑦ Wingnut
1 x ② Crossbar	2 x ⑤ Hook	1 x ⑧ Hammock
2 x ③ Hammock Frame Bar	2 x ⑥ Washer	1 Camping Carry Bag


1. Connect the crossbar (2) with the bases (1), screw the bolts (4) tightly into place.

Connect the hammock frame bar (3) to the bases (1), screw the bolts (4) tightly into place.

- 2.
3. Insert the hook (5) into the appropriate hole to suit the hammock size.
4. Attach the washer (6) and screw on the wing nut (7) to secure the hook.
5. Attach the hammock (8) to the hooks (5); adjust hooks as necessary.

WARNING: Do not leave children unattended while on the hammock. Not to be used as a swing. Always enter your hammock in the middle. Do not sit or lean past the base legs. Check the hook and wing nuts are positioned correctly and tightened prior to each use.

Maximum weight capacity: 550 lbs.

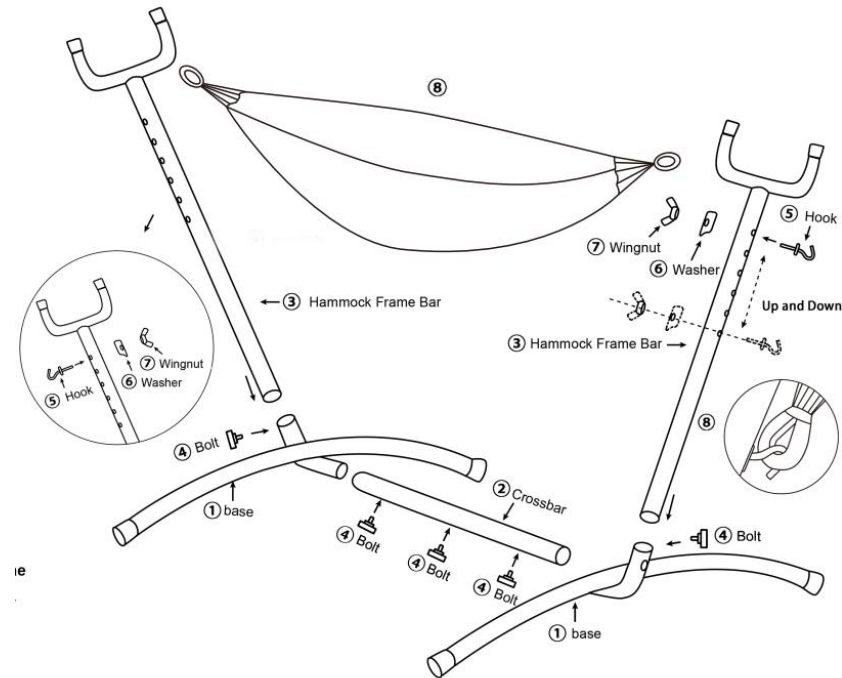



BACKYARD *expressions*
 PATIO • HOME • GARDEN

Please help us give you the best possible service by emailing your parts & service needs to:

ddiparts@ddicorp.com

<http://ddiretail.com/contact-us/>

Customer Name	
Mailing address	
Phone number	
Email address	
Item name	
Item UPC Code	Begins with 6-81129-
Date of purchase	
Name of Store	
Specific Issue	
Part needed – please identify from assembly instructions	

Please keep original purchase receipt for best service

Emails are responded to daily and are the most accurate way to communicate item/parts needs.

This form is also available online at: <http://ddiretail.com/contact-us/>



– if you prefer you may also leave a message or send a text to this number: 1-612-888-7550–
 Your message will be replied to in the order received.