

RINSE PLUS K

Rinse Aid for Machine Dishwashing

Rinse Plus is a drying agent which is added to the final rinse water of glass or dishwashing machines, by means of a specially designed feeder. It dramatically reduces drying time and markedly improves the finished appearance of crockery, glassware and cutlery by eliminating water spotting. Rinse Plus also eliminates the need for manual towelling, thus reducing the possibility of spreading pathogenic organisms. This product is equally effective in both soft and hard water as it contains a water softener and anti-scaling agents. Rinse Plus is safe on all metals found in the construction of dish and glass washing machines.

Procedure:

Washing:

- 1. Wash or scrape surplus waste food from plates.
- 2. If required, PRE-SOAK cutlery and stained cups or crockery.
- 3. Stack dishes carefully and correctly into racks.
- 4. Be sure scrap trays are properly positioned in wash tank.
- 5. Place racked dishes into machine.
- 6. Start and operate dishwasher according to manufacturers directions.
- 7. When washing and rinsing is complete, allow dishes to dry completely before removing from racks.

Dishwashing Machine Maintenance:

- 1. Empty water in wash tanks.
- 2. Clean interior of wash tank with brush & small amount of Sink Washing detergent.
- 3. Rinse the tank with clean water.
- 4. Remove curtains (if fitted) and scrub with brush and Sink Washing detergent.
- 5. Remove wash arms and remove debris from jets.
- 6. Reassemble.
- 7. Refill wash tank.
- 8. Clean exterior of machine with fine non-scratch pad and Rapid Sink Washing detergent.

KITCHEN