


MA-170

operation instructions

Machine connection:

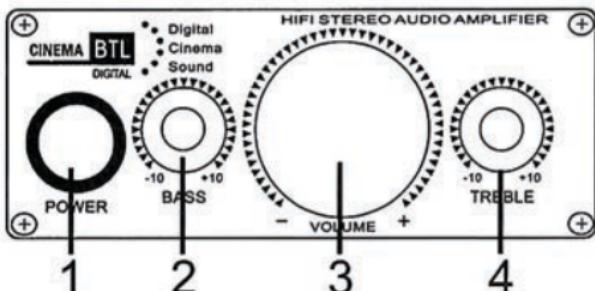


1:POWER POWER ON/OFF

2:BASS - To control low frequency sound

3:VOLUME - Loudness control

4:TREBLE - To control high frequency sound

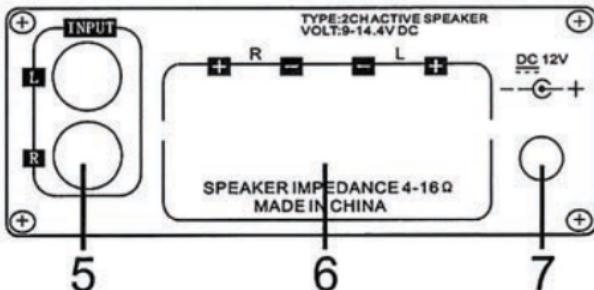

5:AUX input RCA

6:SPK-R speaker right

7:DC 12V INPUT

SPK-L speaker left