



REALTEK
RTD2013B

OSD MANUAL

This document is an OSD operation reference, the OSD and functions may be different from your TV and maybe changed without notice, and this is not a TV manual for your product, please check up carefully.

REALTEK RTD2013B

AUTOR: 王伟

CHECKED BY: 谢敏

APPOVE BY: 任锐

PUBILISH DATE: 2008.8.5.

KEY BOARD FUNCTION

- **[AUTO]** :Auto adjust the picture ; Exit.
- **[MENU]** : Enter the main menu ;Enter.
- **[+/-]** :Up ;Left/Down;Right.
- **[POWER]** :On;Off.

MENU SPECIFICATION

1. AUTO ADJUST


Press **[AUTO]** to adjust the picture.The menu as following will appear.A few seconds later,the menu will disappear.

Auto Adjust


2.MAIN MENU

•CLOUR

Press **[MENU]** for enter the main menu,

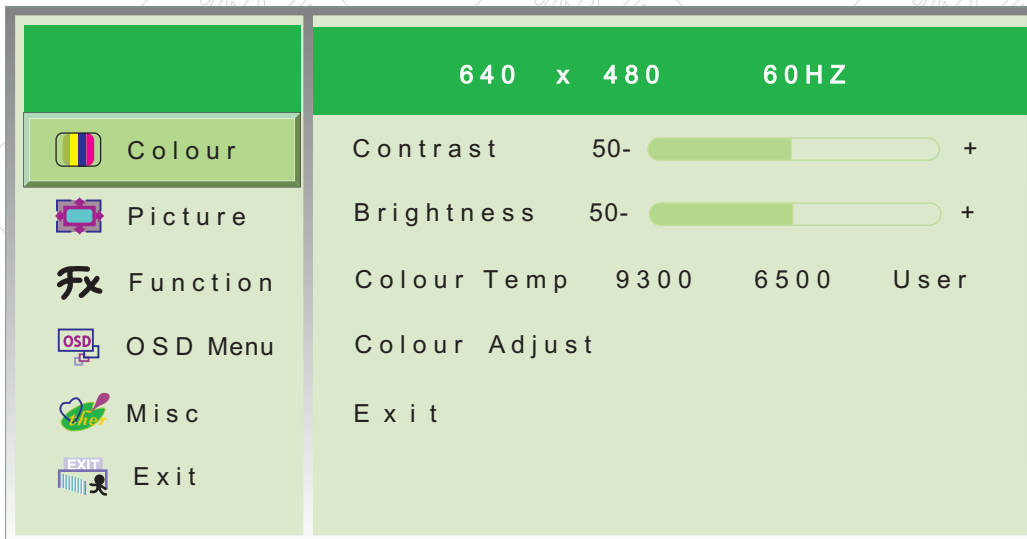

Press **[MENU]** again to enter the colour menu,press **[+/-]** to select among contrast/brightness\colour temp \colouradjust and exit.Press **[MENU]** to enter which you want to adjust .press **[+/-]** to adjust.Press the **[AUTO]** to exit.

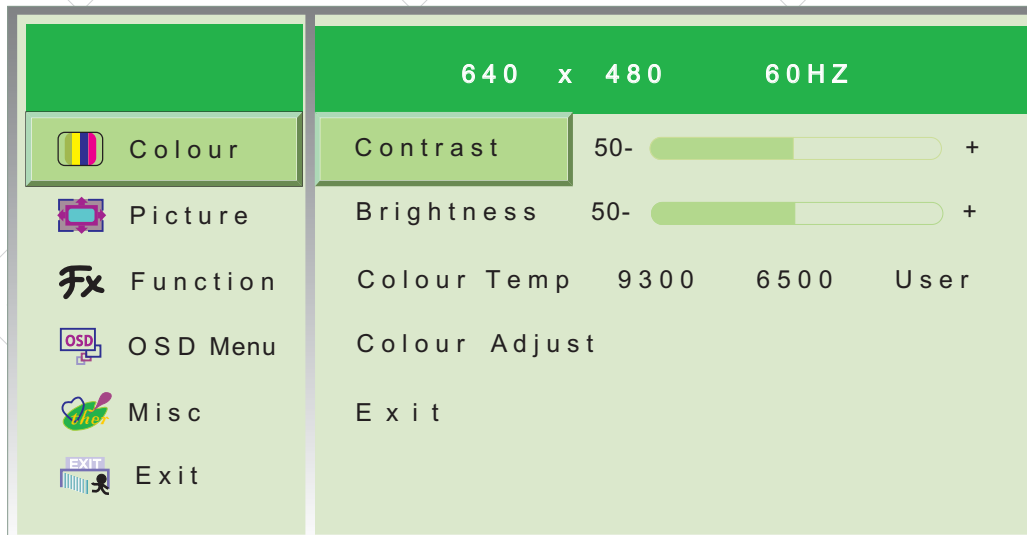

Press the colour adjust.press **【+/-】** to select .Press the **【MENU】** to enter .Press the **【AUTO】** or select "EXIT" to exit..



• **PICTURE**

The manipulation is as the same as forgoing.


H. Position: Press **【+】** to move the picture left. Press **【-】** to move the picture right.

V. Position: Press **【+】** to move the picture up. Press **【-】** to move the picture down.



• **FUNCTION**

The manipulation is as the same as forgoing.

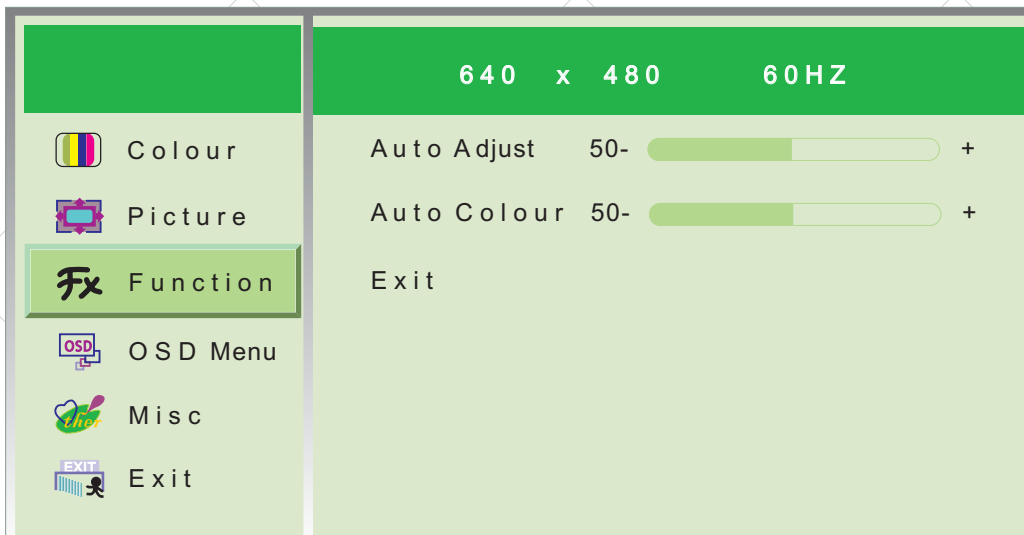


• OSD MENU


The manipulation is as the same as forgoing.

OSD H. Pos: Press **【+】** to move the menu left. Press **【-】** to move the menu right.

OSD V. Pos: Press **【+】** to move the menu up. Press **【-】** to move the menu down.

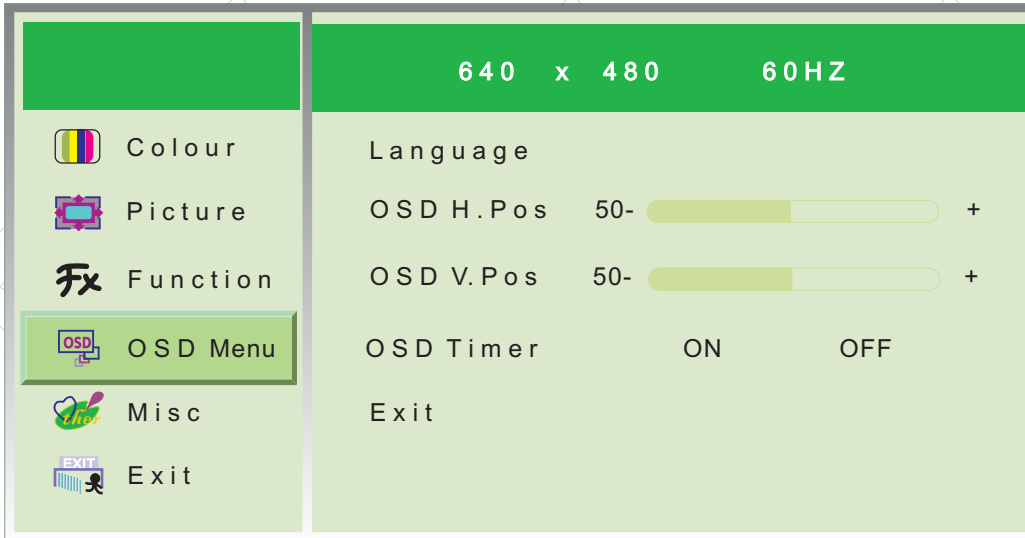


Enter "language" to select the right language.

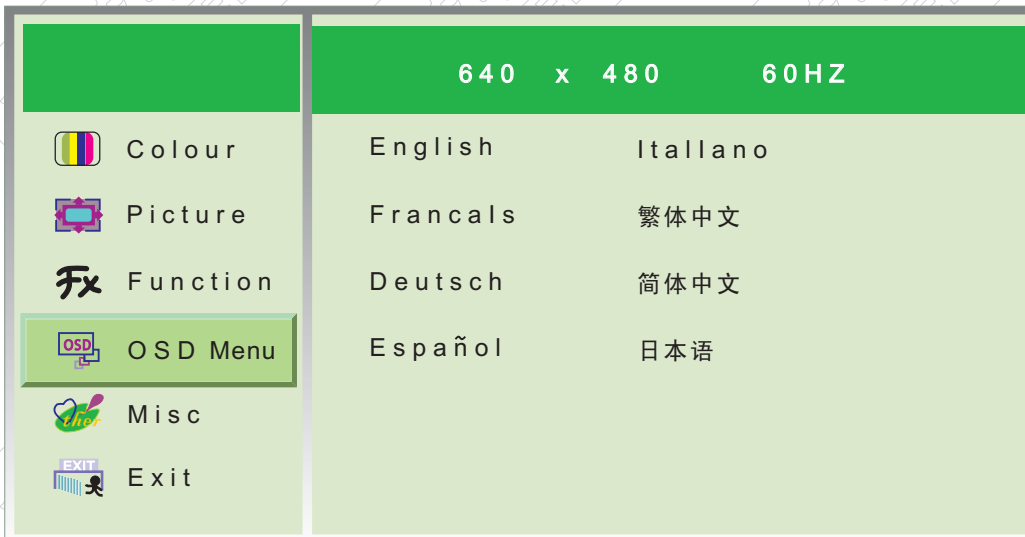

• MISC

The manipulation is as the same as the manipulation of "COLOUR".

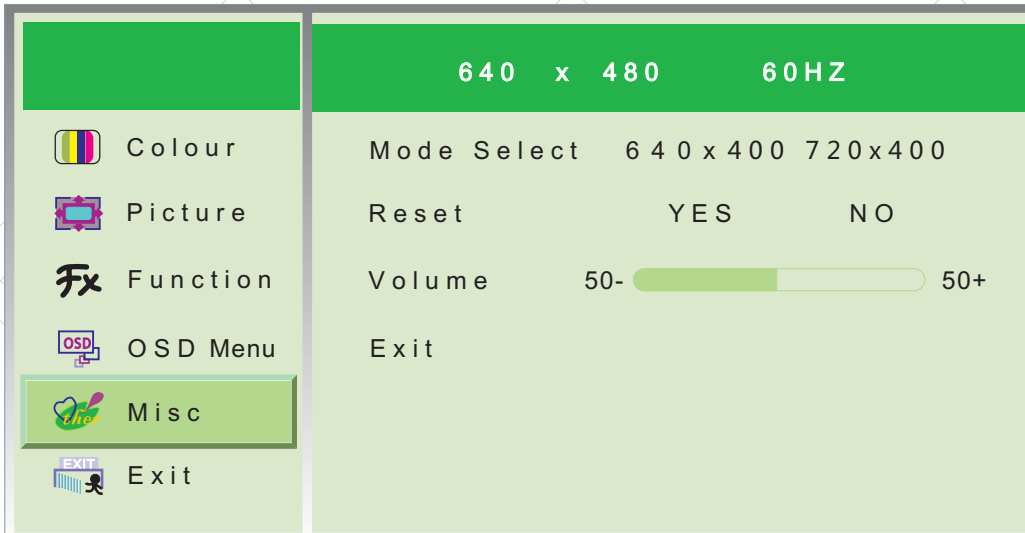

Press **[+/-]** to enter volume menu. Press **[+/-]** to adjust the volume.

