

Instruction manual

travel bag



To avoid damage to your buggy, please read these instructions before using this product.

NEVER allow a child to play with this product.

oscar & otis
(for all model years)

EDWARDS & CO

Final assembly



Once packed, your buggy should look like this.

Best method to pack your buggy



1. Dismantle your buggy. Remove the seat unit, canopy frame, bumper bar and all wheels. The rear wheels go into the wheel bag provided.



2. Place the rear wheels, canopy frame and bumper bar inside the seat unit.

Adjust the foot rest into a vertical position.

Best method to pack your buggy cont.



3. Place the front wheel inside the back of the shopping basket.



4. On the buggy frame, adjust the handle bar height 1 click above parallel (this helps the travel bag stand upright when in use).



5. Put the buggy frame inside the bag, with the handle bar at the bottom of the bag (where the travel bag wheels are). At the front of the bag, pull up the fabric of the bag to cover the front of the buggy frame (where the fold hinge is located).



7. Place the seat unit on top of the frame with the foot plate at the top of the bag.

IMPORTANT - for an easy fit, don't connect the seat with the frame. See next picture.

Best method to pack your buggy cont.



8. The foot plate adjuster button should sit in line with the front of the bag

Don't connect the seat unit with the frame as it will be hard to zip the bag up



9. Your travel bag is now ready to zip up!

Storage and cleaning



Storage

Your travel bag can be compacted (as pictured).

Cleaning

Spot clean with mild detergent. (A solution of 1 part white vinegar and 10 parts water works well).

Dry flat and away from direct sunlight before re-use or storage.

Warranty information

All Edwards & Co products are guaranteed for two years from the date of purchase against defects in material and workmanship.

If we determine that the product has a manufacturing fault, we will repair or replace it free of charge to you. The decision to repair or replace is solely at the discretion of Edwards & Co. Proof of purchase must be provided.

The warranty is “return to base” and not a free in-home service. This means the customer is responsible for any inwards freight charge to return the product to an Edwards & Co representative for warranty or service.

Our warranty excludes claims resulting from misuse, abnormal use, overloading, general wear and tear, child outgrowing the product, not following instructions, transportation damage (including airline or freight damage), poorly maintained product, dropped goods, negligence, second-hand product, modified product, colour fading, over inflation, mould, damage to handle foam in use or fabric cuts and tears. Our warranty also does not cover tyre punctures or corrosion to frames or fasteners as a result of atmospheric or environmental conditions.

Any replacement will not give the right for the warranty period to be extended.

Edwards & Co does not cover warranty if the product has been purchased second hand or from an unauthorised reseller.

For the complete terms and conditions of our warranty, please visit our website - edwardsandcobaby.com/warranty

Edwards & Co
PO Box 35-445
Browns Bay, Auckland 0753
NEW ZEALAND

e: hello@edwardsandcobaby.com
p: 0800 ED AND CO
(0800 33 263 26)



edwardsandcobaby.com