


EDWARDS & CO

Use + Care Guide

Snack Tray

For Olive / Oscar M strollers

EC227-100

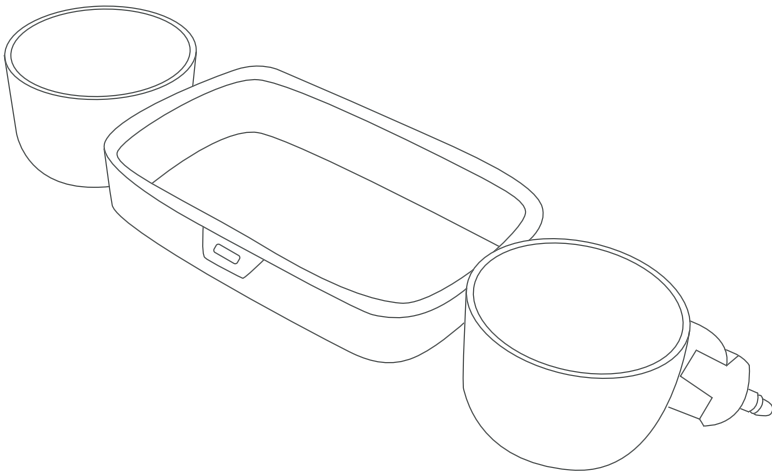



IMPORTANT

- Keep these instructions for future reference.
- Always follow the manufacturer's instructions.
- Read all instructions carefully before assembly and use of this Snack Tray.
- The correct use and maintenance of this product is essential.

Contents

Warnings	4
What's in the box	5
Snack Tray components	6
How to install the Snack Tray	7
How to remove the Snack Tray	8
How to remove the Food Tray	9
How to remove the Cup Holders	9
How to care for and maintain your Snack Tray	10
WARRANTY	11

Warnings



TO AVOID INJURY OR DEATH

NEVER leave a child unattended with this product.

The maximum weight limit for the Snack Tray is 1kg. Excessive weight may affect the stability of your stroller or damage your Snack Tray.

For use with approved Edwards & Co strollers only.

DO NOT carry your stroller by the Snack Tray.

NEVER use with children under 9 months of age.

NEVER use the Snack Tray with the footrest in the upright position.

NEVER place any hot drinks in the Cup Holders.

All components of the Snack Tray are **NOT** microwave safe.

NEVER use the Snack Tray when the seat is reclined.


NEVER leave any beverage containers in the Cup Holders when disengaging the seat from the frame.

DO NOT use if any part of the Snack Tray is loose, missing or broken.


Using the Snack Tray on uneven or rough terrain may result in leaks or spills.

What's in the box


Use + Care Guide
(this instruction
manual)

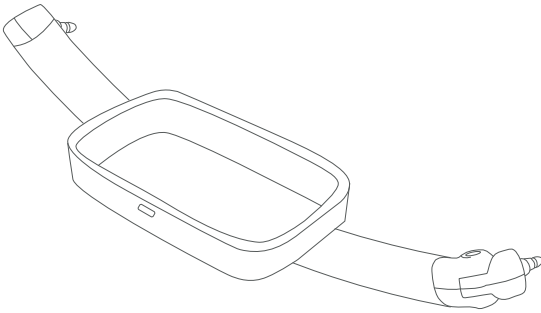


1 x Snack Tray

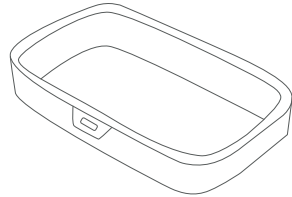

1 x Food Tray

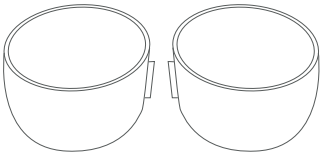


2 x Cup Holders

 


2 x Cup Holder Lids

Snack Tray components

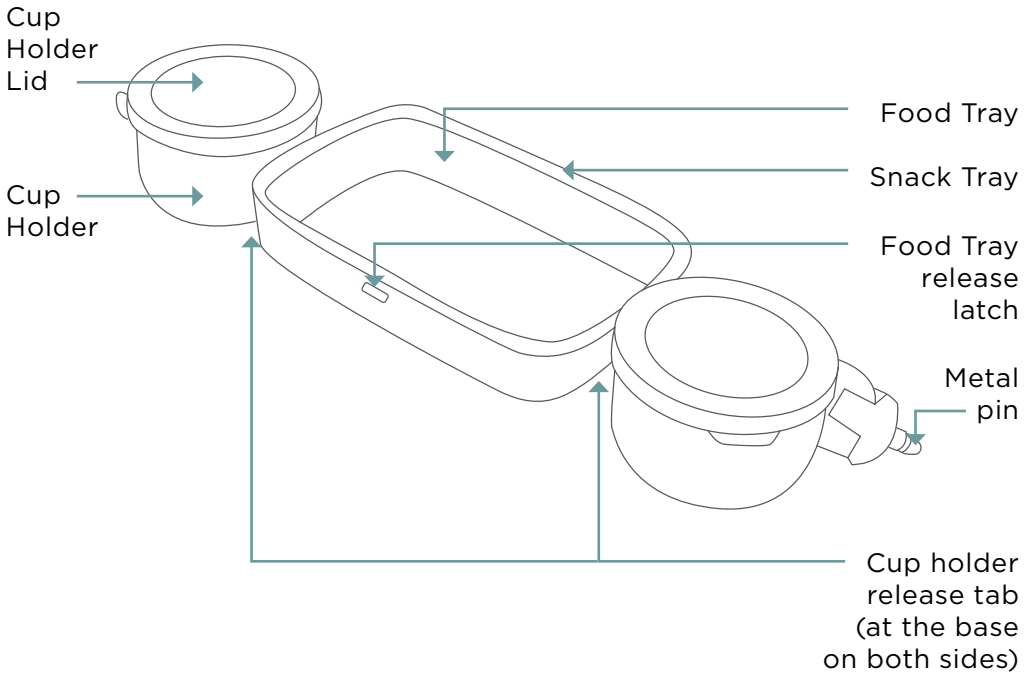


How to install the Snack Tray


1. Remove the bumper bar.

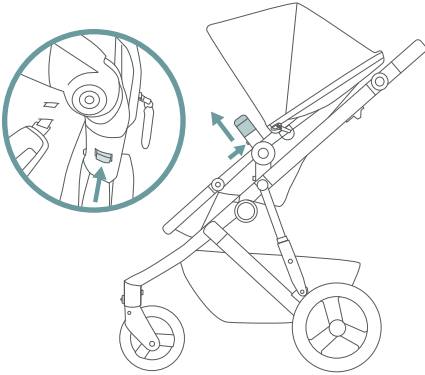

2. Locate the metal pins on either end of the Snack Tray.

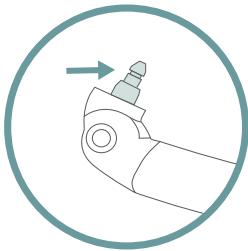

3. Insert the metal pins into the connection points on either side of the seat unit until they click into place. Pull the Snack Tray to ensure it is securely connected.

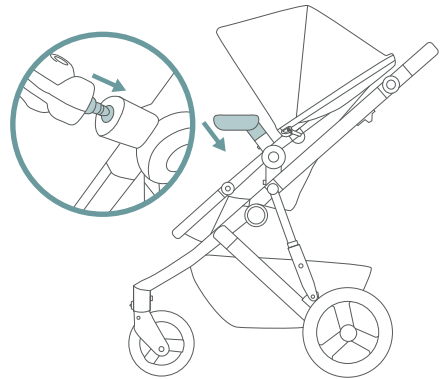

- ✓ You will hear a click when the pins connect securely within the housing.


How to remove the Snack Tray

Recommendation: Remove food and drinks before removing the Snack Tray.

1. Locate the black release buttons below the Snack Tray's two connection points.




2. Press and hold one button while pulling the end of the Snack Tray out. Repeat on the other side.

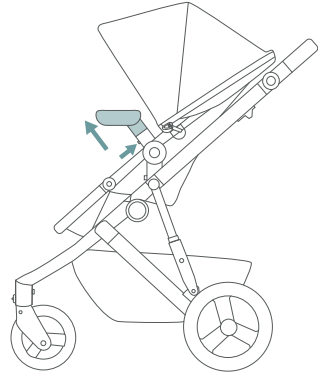


How to remove the Food Tray

1. Locate the Food Tray release tab at the front and back of the Food Tray.

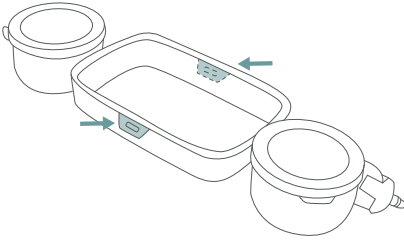


2. Lift the front tab first and then the back tab to release the Food Tray.

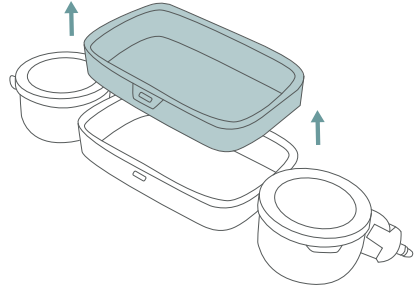


How to remove the Cup Holders

1. Locate the release tab at the base of the Cup Holder connection point.

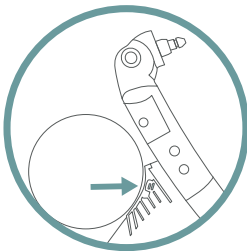

2. Press the release tab inwards and slide the Cup Holder upwards to guide the Cup Holder from the connection point.

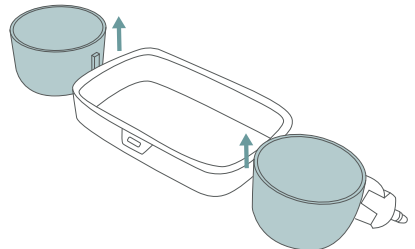

How to care for and maintain your Snack Tray

Clean your Snack Tray carefully

The removable Food Tray and Cup Holders are dishwasher safe. The Cup Holder Lids are **NOT** dishwasher safe.

The base can be wiped clean with a clean cloth.

NEVER put the base into the dishwasher.

NEVER clean any part of the Snack Tray with abrasive, ammonia-based, bleach-based or spirit-based cleaners.

Store your Snack Tray carefully

Store inside in a well-ventilated, dry area.

Store when dry, not damp or wet.

Store away from direct sunlight.

DO NOT place heavy objects on top of your Snack Tray or accessories.

Warranty

All Edwards & Co products are guaranteed for two years from the date of shipping against defects in material and workmanship.

If we determine that the product has a manufacturing fault, we will repair or replace it free of charge to you. The decision to repair or replace is solely at the discretion of Edwards & Co. Proof of purchase must be provided.

The warranty is “return to base” and not a free in-home service. This means the customer is responsible for any inwards freight charge to return the product to an Edwards & Co representative for warranty or service.

Our warranty excludes claims resulting from misuse, abnormal use, overloading, general wear and tear, child outgrowing the product, not following instructions, transportation damage (including airline or freight damage), poorly maintained product, dropped goods, negligence, second-hand product, modified product, colour fading, over inflation, mould, damage to handle foam in use or fabric cuts and tears. Our warranty also does not cover tyre punctures or corrosion to frames or fasteners as a result of atmospheric or environmental conditions.

Any replacement will not give the right for the warranty period to be extended.

Edwards & Co does not cover warranty if the product has been purchased second hand or from an unauthorised reseller.

For the complete terms and conditions of our warranty, please visit our website — edwardsandco.nz/pages/warranty

Edwards & Co New Zealand

Unit 5
30 Foundry Road
Silverdale 0932
NEW ZEALAND

NZ: (09) 869 8950

hello@edwardsandcobaby.com

Edwards & Co Australia

952 Mt Alexander Road
Essendon
VIC 3040
AUSTRALIA

 
AU: (02) 9066 6702

Designed with love

Watch helpful
instructional videos



Come along
on the journey



Visit our comprehensive support centre online

edwardsandcobaby.zendesk.com/hc/en-us