

Ergoplan Bow-Front Desk

Assembly Instructions

 
Tools Required: Powered Screwdriver









Ergoplan Bow-Front Desk

Assembly Instructions


- To prevent possible scratches or damage, assemble the desk upside down on a soft surface such as a blanket, carpet or packaging.
- Attach leg to the top assembly by using bolts, spring washer, flat washer. Tighten using the allen wrench.




**Recommended
2-person Step**

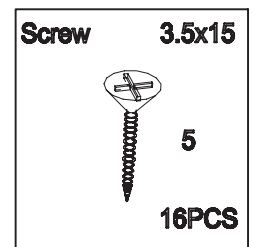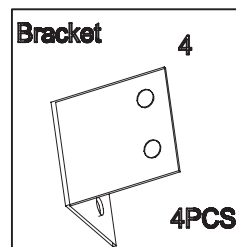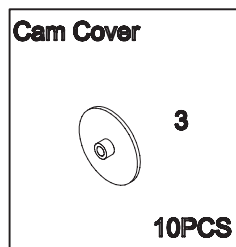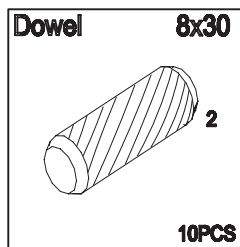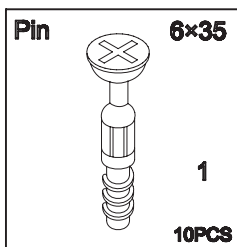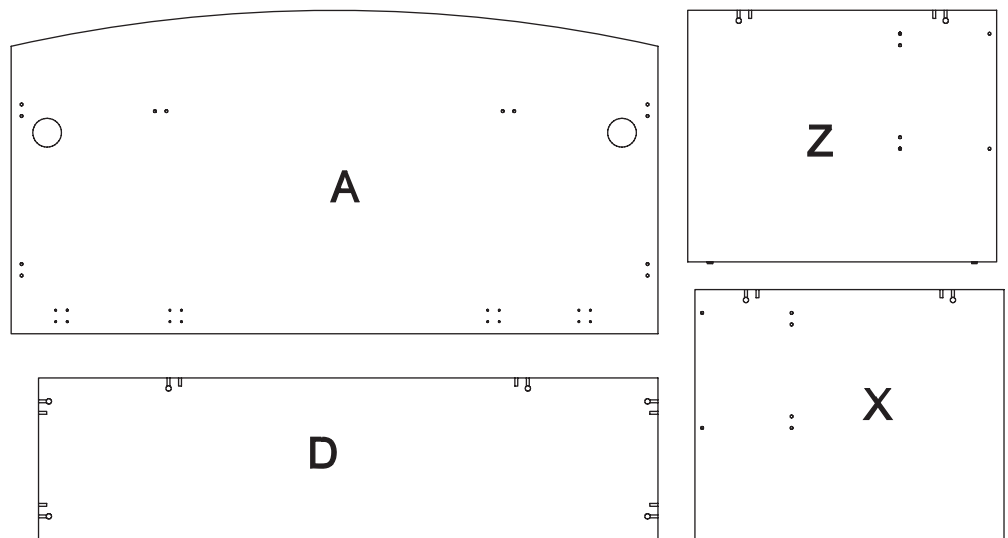


Step 1

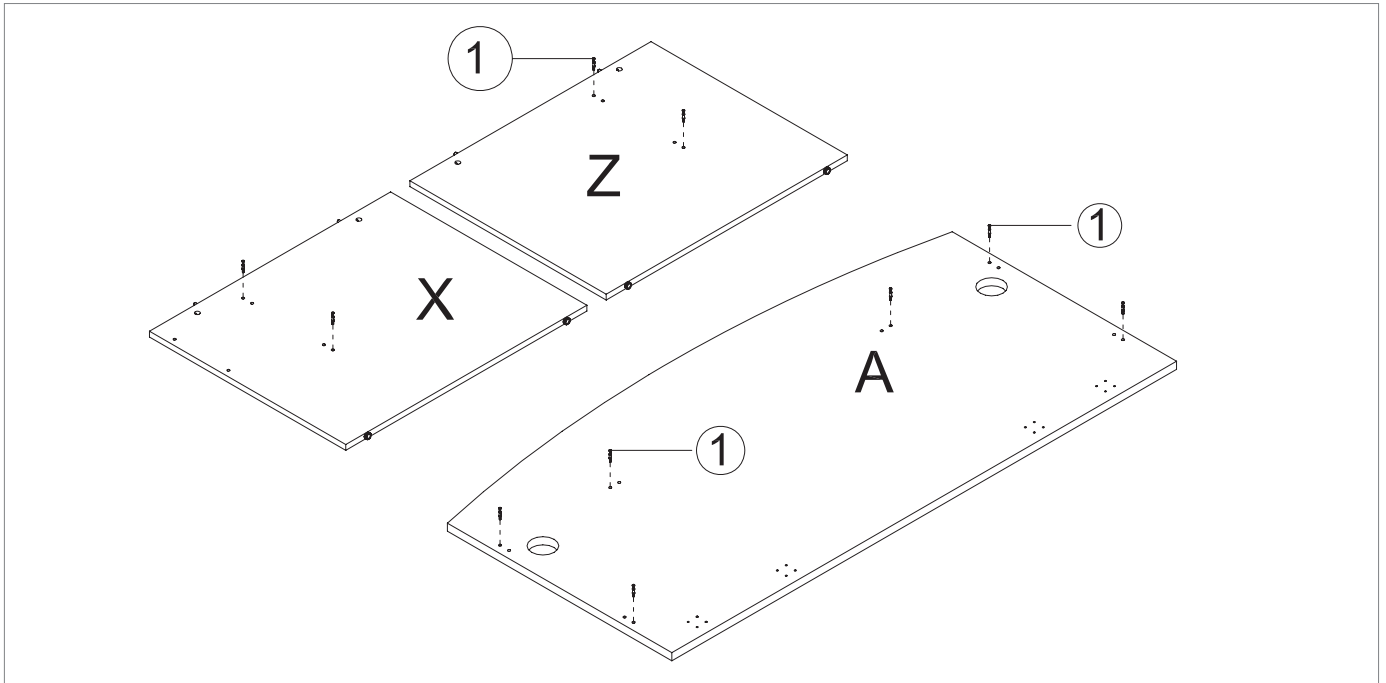

Step 2

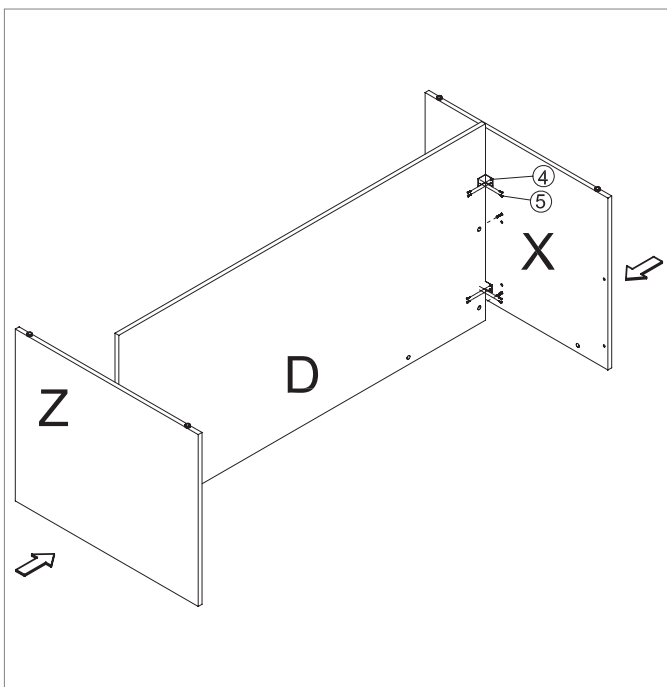

Step 3

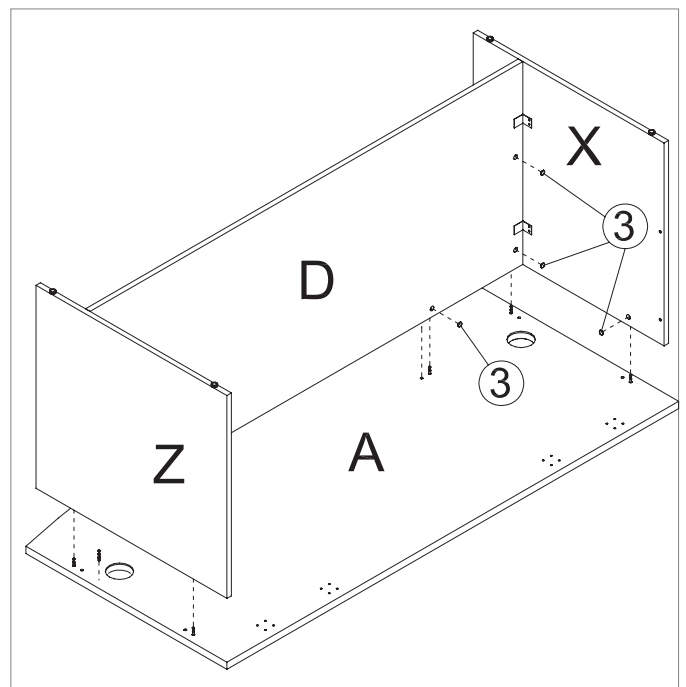

Complete

