



Button A

Button B

Button C

TWO YEAR WARRANTY

California Watch Co. (CA) gladly offers a limited warranty covering defects in materials and manufacturing for a period of two (2) years after the original purchase date from an authorized CA retailer. This warranty does not cover batteries, case, crystal, crown, pushers, straps, or any changes that occur during use and not from manufacturing or assembly. This warranty is considered void if you open your caseback, push the buttons underwater, or expose your watch to moisture beyond the recommended water resistance rating. Proof of purchase is required for all warranty claims, so please save a copy of your receipt. CA reserves the right to not accept a warranty claim if a watch has evidence of excessive wear or misuse. CA reserves the right to repair or replace any watch returned for service at our option.

Set the Minute Disc

Press and hold the C key for about 3 seconds, then the "minute hand" dial will move in clockwise direction, please continue to press and hold the C key until the "minute hand" reaches the selected local time, then release the key (the "minute hand" has been set).

Set the Hour Disc

Press and hold the "A" key for 3 seconds and the "hour hand" will move in the direction of the "hour hand", please continue to press and hold the "A" key until the "hour hand" reaches the selected local time and then release the key ("Hour hand" has been completed setting).

Backlight Function

Please release the button immediately after pressing the "B" button, the light will be on for 4 seconds and then turn off automatically.

** The operators of the above A" and C" keys must use sharp hardware tools to adjust them.

****If you find that the hr/min discs are out of alignment after the adjustment, please complete "Factory Reset", and then repeat "Setting the Minute and Hour Discs" ****

BATTERY TYPE

3V Coin Cell : CR2016

Press and hold the "B" keys for about 10 seconds, all the discs will return to the default position. Make sure the discs show the following factory standard:

"Hour disc" is 12 o'clock

"Minute disc " is 00 minutes

If it is on the right point, wait 5 seconds for the watch to return to normal time mode.

1. If the above pointer is not in the factory setting position, press the "B" button again for about 10 seconds.
2. The "hour disc" will generate an vibrate signal, at this moment you can use the "A" button or the "C" button to adjust back to the factory setting.
3. After the "hour disc" is adjusted, press the B button again, the "minute disc" will vibrate as signal, and then you can use the "A" button or the "C" button to adjust back to the factory square.
4. After completing the above action, you can return to "Setting the Time" steps to set the local time.

WATER RESISTANCE

3 ATM	Splash Resistant. Not intended for any prolonged exposure to water.
Do not expose your watch to high temperature water (i.e. hot tubs/showers) as this will void the warranty.	