 



CALIFORNIA WATCH CO.

INSTRUCTION MANUAL

LAGUNA 34

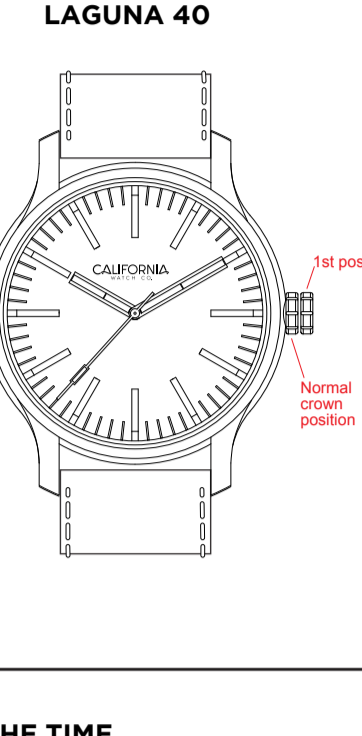

 
LAGUNA 40

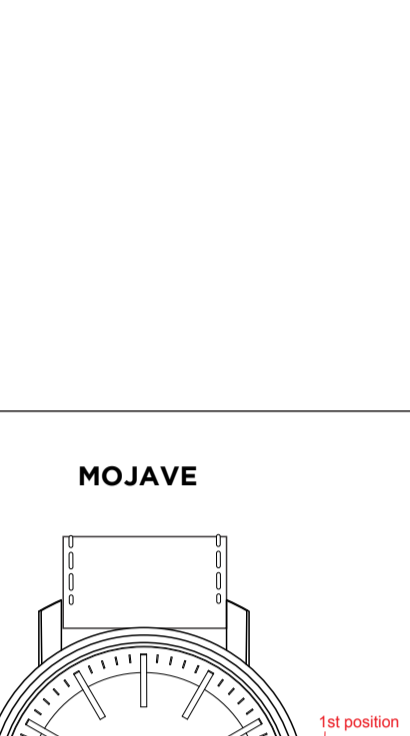

SETTING THE TIME

1. Pull the crown out to the 1st position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, the second hand will begin to run.

MOJAVE

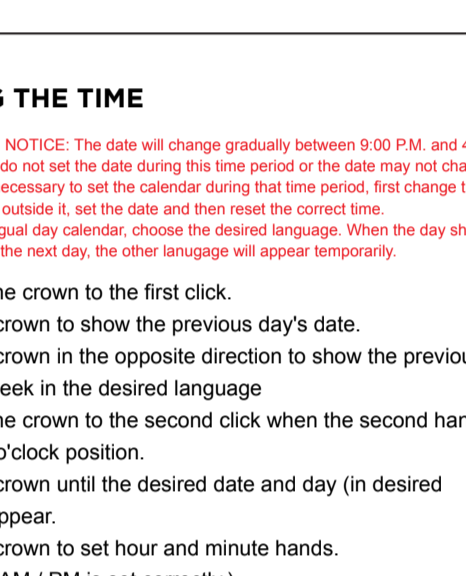


SETTING THE TIME

*** IMPORTANCE NOTICE:** The date will change gradually between 9:00 P.M. and 4:00 A.M. Therefore, do not set the date during this time period or the date may not change properly. If it is necessary to set the calendar during that time period, first change the time to any time outside it, set the date and then reset the correct time.


* In case of bilingual day calendar, choose the desired language. When the day shifts automatically to the next day, the other language will appear temporarily.

- 1) Pull out the crown to the first click.
- 2) Turn the crown to show the previous day's date.
- 3) Turn the crown in the opposite direction to show the previous day of the week in the desired language
- 4) Pull out the crown to the second click when the second hand is at the 12 o'clock position.
- 5) Turn the crown until the desired date and day (in desired language) appear.
- 6) Turn the crown to set hour and minute hands. (Check that AM / PM is set correctly.)
- 7) Push the crown back in to normal position in accordance with the time signal.

 GOLDEN GATE CHRONO

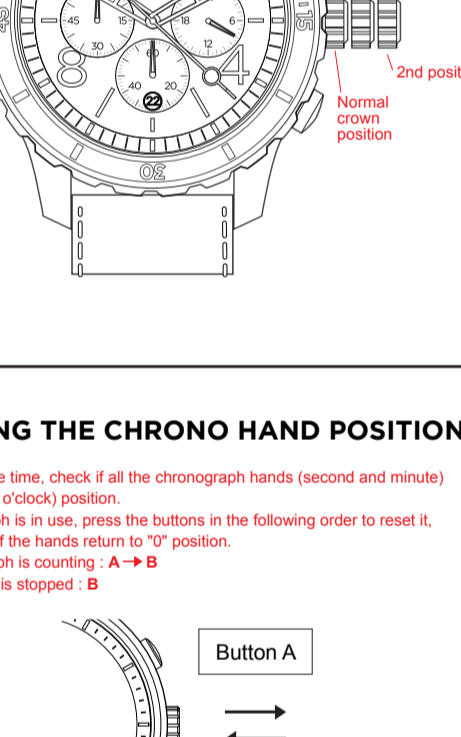

MAVERICKS CHRONO

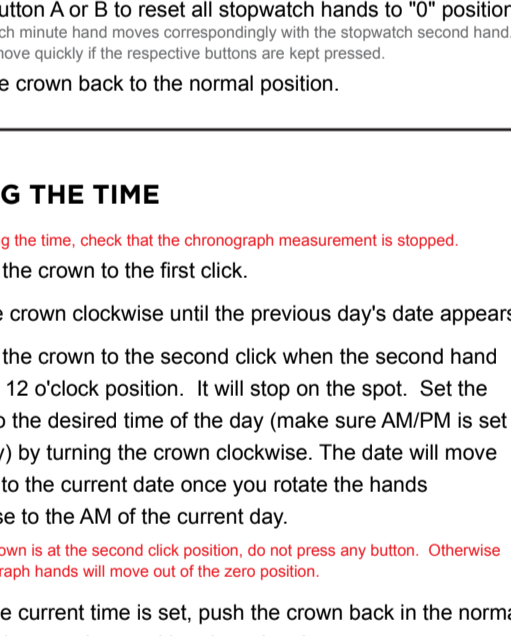


ADJUSTING THE CHRONO HAND POSITION

* Before setting the time, check if all the chronograph hands (second and minute) are at the "0" (12 o'clock) position.

* If the chronograph is in use, press the buttons in the following order to reset it, and then, check if the hands return to "0" position.

• If the chronograph is counting : **A → B**

• If the stopwatch is stopped : **B**

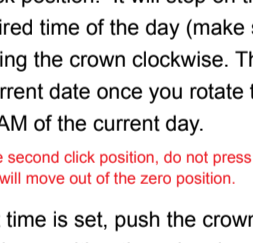

If either of the chronograph hands are not in the "0" position, reset them by following these instructions.

- 1) Pull the crown out to the second click
- 2) Press button A or B to reset all stopwatch hands to "0" position.
 - * The stopwatch minute hand moves correspondingly with the stopwatch second hand.
 - * The hands move quickly if the respective buttons are kept pressed.
- 3) Push the crown back to the normal position.

SETTING THE TIME

* Before setting the time, check that the chronograph measurement is stopped.

- 1) Pull out the crown to the first click.
- 2) Turn the crown clockwise until the previous day's date appears.
- 3) Pull out the crown to the second click when the second hand is at the 12 o'clock position. It will stop on the spot. Set the hands to the desired time of the day (make sure AM/PM is set correctly) by turning the crown clockwise. The date will move forward to the current date once you rotate the hands clockwise to the AM of the current day.

* When the crown is at the second click position, do not press any button. Otherwise the chronograph hands will move out of the zero position.

- 4) Once the current time is set, push the crown back in the normal position in accordance with a time signal.

* Do not set the date between 9:00 P.M. and 1:00 A.M., otherwise the day may not change properly. If it is necessary to set the date during the time period, firstly change the time to any time outside it, set the date and then reset the correct time.


HOW TO USE THE CHRONOGRAPH

* The measurement time is indicated by the stopwatch hands that move independently of the center hands (and 24-hour hand where applicable).

* The stopwatch can measure up to 60 minutes.


Standard measurement (e.g. 100m race)

Press the buttons in the following order

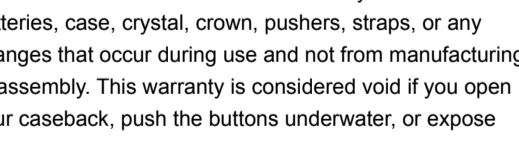

Accumulated elapsed time measurement (e.g. soccer game)

Press the buttons in the following order

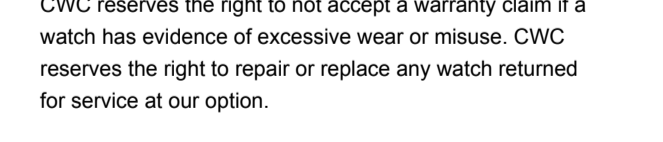

* Restart and stop of the stopwatch can be repeated as many times as necessary by pressing button A.

WARRANTY

California Watch Co. (CWC) gladly offers a limited warranty covering defects in materials and manufacturing for a period of two (2) years after the original purchase date from an authorized CWC retailer. This warranty does not cover batteries, case, crystal, crown, pushers, straps, or any changes that occur during use and not from manufacturing or assembly. This warranty is considered void if you open your caseback, push the buttons underwater, or expose your watch to moisture beyond the recommended water resistance rating. Proof of purchase is required for all warranty claims, so please save a copy of your receipt. CWC reserves the right to not accept a warranty claim if a watch has evidence of excessive wear or misuse. CWC reserves the right to repair or replace any watch returned for service at our option.

BATTERY TYPE

LAGUNA 34	SR626SW
LAGUNA 40	SR626SW
MOJAVE	SR621SW
GOLDEN GATE	SR920SW
MAVERICKS	SR920SW

WATER RESISTANCE CHART

3 ATM	Splash Resistant. Not intended for any prolonged exposure to water.
5 ATM	Normal Daily Wear. Suitable for washing hands or light rain.
10 ATM	Water Sports. Suitable for swimming, surfing, etc.
30 ATM	Scuba Diving. Suitable for extreme ocean depths.

Do not expose your watch to high temperature water (i.e. hot tubs/showers) as this will void the warranty.