



8GB

About your MP3 Waterproof Music Player

- **IPX8:** withstands submersion to 10ft (3m)
- **USB plug-and-play:** no drivers required
- **Rechargeable internal lithium battery**
- **Works on Mac and Windows systems**
- **Supports MP3, WMA, APE, FLAC, and WAV**
- **Music Manager for desktop computer**

Warranty: Your Swimbuds MP3 Wearable Headphones has a 1-year warranty that covers manufacturer’s defects. The warranty does not cover lost or stolen items.

Download the SwimbudsMP3 music manager here!

www.underwateraudio.com/pages/music-manager

Why use the music manager? It goes hand-in-hand with your SwimbudsMP3 headphones! Organize all your music, create playlists, and upload them to your SwimbudsMP3 headphones right from your desktop computer!

FEATURES OF MUSIC MANAGER:

- Finds music on your computer
- Back up the music on your SwimbudsMP3
- Makes it easy to put your songs in the right order.
- Automatically converts music files to MP3
- Puts music in the highest quality MP3 format possible

Player Parts and Controls:

- ①

Shuffle: Press to turn on/off (LED light pattern will change)
Battery Level: Press and hold for 2 seconds. Three chimes means full charge, two chimes means half charge, one chime means low battery.
- ②

 
Volume up: Press once. As volume increases, BEEP will occur at 70% to warn of dangerous volume levels. Continue to press to increase volume.
Press and hold to quickly raise volume.
- ③

Volume down: Press once. Press and hold to quickly lower volume.
- ④

On/Off: Press and hold for about 1 second, then wait for music to play.
Pause: Press once.
- ⑤

Next Track: Press once.
Fast forward: Press and hold.
Previous Track: Press once, before 5 seconds of playing the current track.
- ⑥

Rewind: Press and hold.
Restart Current Track: Press after 5 seconds of playtime.

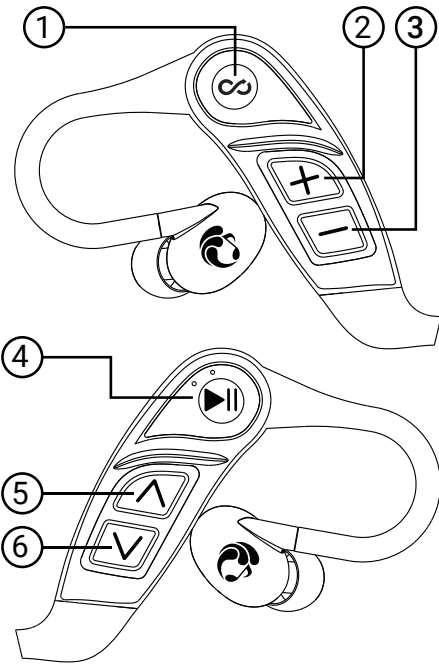

LED Light Messages:

Playback Mode:

Ordered: blue light blinks once per second
Shuffled: blue light blinks once per three seconds
Paused: solid blue light (light turns off in 3 minutes)
Fast Forward/Rewind: blue light blinks once per 1/2 sec
Low Battery: very quick blinking light

USB Mode:

Charging: solid red light
Charged: red light turns off

Transferring Files: on a PC

1. Run “Windows® Explorer” from the Task Bar.
2. Using the USB cable, connect the player to a USB port on your computer.
3. Open the new “Removable Disk” folder under “This PC” in the left sidebar.
4. Copy files to the “Removable Disk” folder in the order in which you want them to play.
5. In the left sidebar, right-click the “Removable Disk” folder and select “Eject” from the menu.
6. Wait until the computer confirms a safe ejection before you unplug the USB cable.

Continued...

Charging the Player

1. Make sure the headphones are COMPLETELY dry, then fully clasp the 4-pin charger to the charging plates on the headphones.
2. Plug the USB end of the charger cable into the USB port on your computer or wall-charger unit. There will be a solid red LED light when charging.
3. Charge for about 1 hour, you will see a solid red light, light will go off when fully charged.
4. The player turns off by itself when unplugged.

PLEASE NOTE: Charging for longer than 3 hours at a time can cause damage to the device’s battery. Red light turns off when fully charged.

TIP: To conserve battery life, turn off the player when you are done. If playing, it will run until out of charge. If paused, it will turn off in 3 minutes. If the light is blinking, the player is running.

Troubleshooting

Player does not turn on

1. Make sure the battery is charged. Red light will be off when fully charged.
2. Connect to computer and check for response. (LEDs will light up if computer recognizes device).

No sound is heard

1. Turn up volume (press/hold volume up button).
2. Make sure the audio file format is supported. (MP3, WMA, APE, FLAC, and WAV)
3. Check if files play correctly on computer.

Files do not transfer

1. Make sure the player is correctly connected to the computer (LED should be glowing).
2. Check on computer if there is enough memory available on the player to store the files.

Light is on, but buttons do not respond

1. Turn off player and reset (press and hold the Play/Pause button for 8 seconds).
2. Turn on the player and check for response.

Technical Specifications

Waterproof Standard IPX-8: submersible to 10ft(3m)
Noise Ratio: 85 dB
Headphone Output: 8mW x 2 channels (at 16 Ohms)
Working Temperature: 32°-104° F (0°-40° C)
Materials: plastic + rubber injection
Dimensions: 14.6 x 2.8 x 0.9 in (370 x 72 x 23 mm)
Weight: 0.73 oz (20.8 g)
Battery: internal rechargeable Li-Polymer 3.7V 115mAh
Operating Systems: Mac OS 9.2 & up; Windows ME, 2000, XP, Vista, 7, 8, 8.1, & 10
Built-in Memory: 8GB
USB jack: USB 2.0; compatible with USB 1.1 and 1.0
File Formats: MP3, WMA, APE, FLAC, and WAV
Sampling rate: 8-48KHz
Read ≥ 4 Mbps; Write ≥ 2 Mbps
Music Playback: about 7 hours (at medium volume)

WARNINGS:

Do not charge the device when wet or damp.

Always consult your physician before beginning any exercise program. Use caution when listening to your player during any activity that requires your full attention. Listening to music at high volumes (+85 Db) can permanently damage your hearing. To avoid the risk of serious injury, do not use below 10ft depth (3.05m).

CHOKING HAZARD—Not a toy!

This item contains small parts and is for ages 12 and up. **Do not incinerate!** Internal battery may burst or leak.

Disclaimer

This product’s software, user manual, and technical parameters may change without notice. This manual is a general description of the product. The manufacturer and distributor do not assume responsibility for any errors in this user’s manual. Except where prohibited by law, in no event will Underwater Audio be liable to you for any indirect, consequential, exemplary, incidental or punitive

damages, including lost profits, even if Underwater Audio has been advised of the possibility of such damages. If, notwithstanding the other provisions of these Terms of Use, Underwater Audio is found to be liable to you for any damage or loss which arises out of or is in any way connected with your use of the product, Underwater Audio’s liability shall in no event exceed the total cost of the product. Some jurisdictions do not allow limitations of liability, so the foregoing limitation may not apply to you.

Correct disposal of player:

Do not throw this item away with other household waste!

To safely dispose of your device, please use your community’s waste collection and recycling systems. You may take the product back to the store, where the retailer will recycle it in accordance with environmental safety regulations. **Please recycle this MP3 player responsibly to promote the sustainable reuse of material resources!**

7. Player turns off by itself when unplugged.
8. Swimbuds mp3 device plays songs in the order in which they are loaded from computer.

Transferring Files: on a Mac®

1. Run “Finder®” from the Dock.
2. Using the USB cable, connect the player to a USB port on your computer.
3. Open the new “Untitled” folder that appears under “Devices” in the left sidebar.
4. Copy files to the “Untitled” folder in the order in which you want them to play.
5. Click the “Eject” icon next to “Untitled” in the left sidebar.
6. Wait until the “NO NAME” folder disappears before you unplug the USB cable.
7. Player turns off by itself when unplugged.
8. Swimbuds mp3 device plays songs in the order in which they are loaded from computer.

Windows is a trademark of Microsoft Corporation. Mac is a trademark of Apple Inc.



Questions?
Problems? Contact us!

underwateraudio.com
help@underwateraudio.com
Toll-free: 1-877-849-0750

Manufactured in China

All rights reserved. Windows is a trademark of Microsoft Corporation. Mac is a trademark of Apple Inc.



swimbuds[®]MP3

By  UNDERWATER audio

100% WATERPROOF
WEARABLE MP3 PLAYER

8GB

About your MP3 Waterproof Music Player

- IPX8: withstands submersion to 10ft (3m)
- USB plug-and-play: no drivers required
- Rechargeable internal lithium battery
- Works on Mac and Windows systems
- Supports MP3, WMA, APE, FLAC, and WAV
- Music Manager for desktop computer

Warranty: Your Swimbuds MP3 Wearable Headphones has a 1-year warranty that covers manufacturer's defects. The warranty does not cover lost or stolen items.

Download the SwimbudsMP3 music manager here!

www.underwateraudio.com/pages/music-manager

 
 
Why use the music manager? It goes hand-in-hand with your SwimbudsMP3 headphones! Organize all your music, create playlists, and upload them to your SwimbudsMP3 headphones right from your desktop computer!

FEATURES OF MUSIC MANAGER:

- Finds music on your computer
- Back up the music on your SwimbudsMP3
- Makes it easy to put your songs in the right order.
- Automatically converts music files to MP3
- Puts music in the highest quality MP3 format possible

Player Parts and Controls:

- ① { Shuffle: Press to turn on/off (LED light pattern will change)
Battery Level: Press and hold for 2 seconds. Three chimes means full charge, two chimes means half charge, one chime means low battery.
- ② { Volume up: Press once. As volume increases, BEEP will occur at 70% to warn of dangerous volume levels. Continue to press to increase volume.
Press and hold to quickly raise volume.
- ③ — Volume down: Press once. Press and hold to quickly lower volume.
- ④ { On/Off: Press and hold for about 1 second, then wait for music to play.
Pause: Press once.
- ⑤ { Next Track: Press once.
Fast forward: Press and hold.
Previous Track: Press once, before 5 seconds of playing the current track.
- ⑥ { Rewind: Press and hold.
Restart Current Track: Press after 5 seconds of playtime.

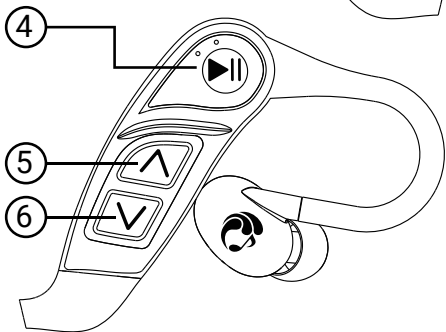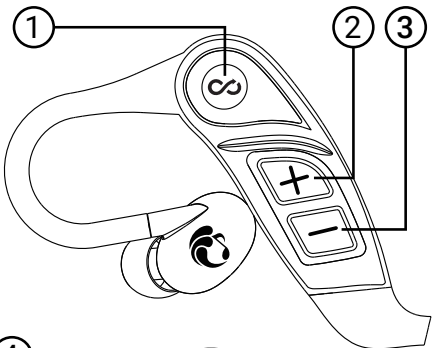

swimbuds MP3



Scan this QR code with
your phone and visit our
YouTube channel.

View our
instructional videos
and more!

Questions?
Problems? Contact us!

underwateraudio.com
help@underwateraudio.com
Toll-free: 1-877-849-0750

Manufactured in China

All rights reserved. Windows is a trademark of Microsoft Corporation.
Mac is a trademark of Apple Inc.



RoHS



Charging the Player

1. Make sure the headphones are COMPLETELY dry, then fully clasp the 4-pin charger to the charging plates on the headphones.
2. Plug the USB end of the charger cable into the USB port on your computer or wall-charger unit. There will be a solid red LED light when charging.
3. Charge for about 1 hour, you will see a solid red light, light will go off when fully charged.
4. The player turns off by itself when unplugged.

PLEASE NOTE: Charging for longer than 3 hours at a time can cause damage to the device's battery. Red light turns off when fully charged.

TIP: To conserve battery life, turn off the player when you are done. If playing, it will run until out of charge. If paused, it will turn off in 3 minutes. If the light is blinking, the player is running.

Troubleshooting

Player does not turn on

1. Make sure the battery is charged. Red light will be off when fully charged.
2. Connect to computer and check for response. (LEDs will light up if computer recognizes device).

No sound is heard

1. Turn up volume (press/hold volume up button).
2. Make sure the audio file format is supported. (MP3, WMA, APE, FLAC, and WAV)
3. Check if files play correctly on computer.

Files do not transfer

1. Make sure the player is correctly connected to the computer (LED should be glowing).
2. Check on computer if there is enough memory available on the player to store the files.

Light is on, but buttons do not respond

1. Turn off player and reset (press and hold the Play/Pause button for 8 seconds).
2. Turn on the player and check for response.

Technical Specifications

Waterproof Standard IPX-8: submersible to 10ft(3m)

Noise Ratio: 85 dB

Headphone Output: 8mW x 2 channels (at 16 Ohms)

Working Temperature: 32°-104° F (0°-40° C)

Materials: plastic + rubber injection

Dimensions: 14.6 x 2.8 x 0.9 in (370 x 72 x 23 mm)

Weight: 0.73 oz (20.8 g)

Battery: internal rechargeable Li-Polymer 3.7V
115mAh

Operating Systems: Mac OS 9.2 & up; Windows ME,
2000, XP, Vista, 7, 8, 8.1, & 10

Built-in Memory: 8GB

USB jack: USB 2.0; compatible with USB 1.1 and 1.0

File Formats: MP3, WMA, APE, FLAC, and WAV

Sampling rate: 8-48KHz

Read ≥ 4 Mbps; Write ≥ 2 Mbps

Music Playback: about 7 hours (at medium volume)

WARNINGS:

Do not charge the device when wet or damp.

Always consult your physician before beginning any exercise program. Use caution when listening to your player during any activity that requires your full attention. Listening to music at high volumes (+85 Db) can permanently damage your hearing. To avoid the risk of serious injury, do not use below 10ft depth (3.05m).

CHOKING HAZARD—Not a toy!

This item contains small parts and is for ages 12 and up. **Do not incinerate!** Internal battery may burst or leak.

Disclaimer

This product's software, user manual, and technical parameters may change without notice. This manual is a general description of the product. The manufacturer and distributor do not assume responsibility for any errors in this user's manual. Except where prohibited by law, in no event will Underwater Audio be liable to you for any indirect, consequential, exemplary, incidental or punitive

damages, including lost profits, even if Underwater Audio has been advised of the possibility of such damages. If, notwithstanding the other provisions of these Terms of Use, Underwater Audio is found to be liable to you for any damage or loss which arises out of or is in any way connected with your use of the product, Underwater Audio's liability shall in no event exceed the total cost of the product. Some jurisdictions do not allow limitations of liability, so the foregoing limitation may not apply to you.

Correct disposal of player:

Do not throw this item away with other household waste!

To safely dispose of your device, please use your community's waste collection and recycling systems. You may take the product back to the store, where the retailer will recycle it in accordance with environmental safety regulations. **Please recycle this MP3 player responsibly to promote the sustainable reuse of material resources!**

LED Light Messages:

Playback Mode:

Ordered: blue light blinks once per second

Shuffled: blue light blinks once per three seconds

Paused: solid blue light (light turns off in 3 minutes)

Fast Forward/Rewind: blue light blinks once per 1/2 sec

Low Battery: very quick blinking light

USB Mode:

Charging: solid red light

Charged: red light turns off

Transferring Files: on a PC

1. Run "Windows® Explorer" from the Task Bar.
2. Using the USB cable, connect the player to a USB port on your computer.
3. Open the new "Removable Disk" folder under "This PC" in the left sidebar.
4. Copy files to the "Removable Disk" folder in the order in which you want them to play.
5. In the left sidebar, right-click the "Removable Disk" folder and select "Eject" from the menu.
6. Wait until the computer confirms a safe ejection before you unplug the USB cable.

Continued...

7. Player turns off by itself when unplugged.
8. Swimbuds mp3 device plays songs in the order in which they are loaded from computer.

Transferring Files: on a Mac®

1. Run “Finder®” from the Dock.
2. Using the USB cable, connect the player to a USB port on your computer.
3. Open the new “Untitled” folder that appears under “Devices” in the left sidebar.
4. Copy files to the “Untitled” folder in the order in which you want them to play.
5. Click the “Eject” icon next to “Untitled” in the left sidebar.
6. Wait until the “NO NAME” folder disappears before you unplug the USB cable.
7. Player turns off by itself when unplugged.
8. Swimbuds mp3 device plays songs in the order in which they are loaded from computer.

Windows is a trademark of Microsoft Corporation. Mac is a trademark of Apple Inc.