 



# UKU

Wireless Receiver + mp3  
MANUAL

## Player Parts and Controls

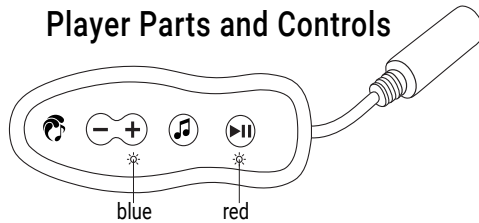

 - [Previous Track] press once  
Volume Down: press and hold
- + [Next Track] press once  
Volume Up: press and hold
- 🎵 [Wireless/Memory] press once to toggle  
[Shuffle/Loop] hold for 1 second to toggle  
Play in Order and Shuffle modes
- ▶ [On] hold 2 seconds; Uku will enter wireless mode automatically  
[Play/Pause] press once to toggle  
[Off] hold 2 seconds, red LED will flash and turn off
- \* — LED Light Indicators: blue and red

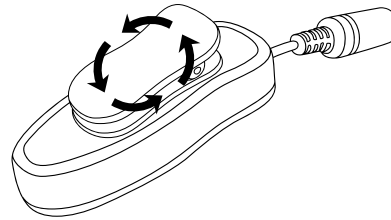

**Rotating Clip:** Clip rotates 360° to allow easy attachment to clothing, goggle strap, etc.

**Charge/Sync:** plug in USB cable  
Listen: plug in headphones

## LED Light Messages

Flashing blue and red: pairing in progress

**Rapid blue flashes:** pairing successful

**Blue flashes:** playing in bluetooth mode

**Blue double-flashes:** paused in bluetooth mode

**Red flashes:** playing in mp3 mode

**Solid red light:** paused in mp3 mode

## WARNINGS:

Listening to headphones while driving can be dangerous and is illegal in some areas. Use caution when using your headphones during any activity that requires your full attention. Gently place earbuds in ear. Earbuds may detach from headphones and remain in ear canal if inserted too forcefully. Consult your physician before starting any exercise program. Listening to music at high volumes (+85 Db) can permanently damage your hearing. To avoid the risk of serious injury, do not use below 10ft (3.05m).

## CHOKING HAZARD—Not a toy!

This item contains small parts and is for ages 12 and up. Do not incinerate! Internal battery may burst or leak.

## Disclaimer

This product's software, user manual, and technical parameters may change without notice. This manual is a general description of the product. The manufacturer and distributor do not assume responsibility for any errors in this user's manual. Except where prohibited by law, in no event will Underwater Audio be liable to you for any indirect, consequential, exemplary, incidental or punitive damages, including lost profits, even if Underwater Audio has been advised of the possibility of such

## Transferring Files: on a PC

1. Run "File Explorer" (from Task Bar or Start Menu).
2. Using the included USB cable, connect UKU to a USB port on your computer.
3. Open the new "Removable Disk" folder under "This PC" in the left sidebar.
4. Copy files to the "Removable Disk" folder in the order in which you want them to play.
5. In the left sidebar, right-click "Removable Disk" and select "Eject" from the menu.
6. Wait until the computer confirms a safe ejection before you unplug the USB cable.
7. Player turns off by itself when unplugged.

## Transferring Files: on a Mac®

1. Run "Finder®" (from the Dock).
2. Using the included USB cable, connect UKU to a USB port on your computer.
3. Open the new "Untitled" folder that appears under "Devices" in the left sidebar.

Continued...

4. Copy files to the "Untitled" folder in the order in which you want them to play.
5. Click "Eject" (▶) next to "Untitled" in the sidebar.
6. Wait until "Untitled" has disappeared from the sidebar before unplugging UKU.
7. Player turns off by itself when unplugged.

## Charging the Player

Make sure the headphone jack is clean and dry. FULLY insert the included black USB charge/sync cable into the jack. Plug the other end into a USB port. The red LED will turn on to indicate the player is charging. When UKU is fully charged (~75 minutes), the red LED will turn off and the blue LED will turn on. Disconnect and turn off UKU after charging. Use only the included charge/sync cable. Do not charge overnight.

**PLEASE NOTE: Charging for longer than 3 hours at a time can cause damage to the device's battery.**



Scan this QR code with your phone and visit our YouTube channel.

Find our instructional videos and more!

**QUESTIONS?  
PROBLEMS? CONTACT US!**

[underwateraudio.com](http://underwateraudio.com)

[help@underwateraudio.com](mailto:help@underwateraudio.com)

Toll-free: 1-877-849-0750

Your UKU Wireless Receiver + MP3 has a 1-year warranty that covers manufacturer's defects. The warranty does not cover lost or stolen items.

Manufactured in China



All rights reserved.  
Windows is a trademark of Microsoft Corporation.  
Mac is a trademark of Apple Inc.

# UKU

## Wireless Receiver + mp3 MANUAL

**Waterproof Standard IPX-6:** Withstands heavy water spray for 3 minutes

**File Formats:** MP3, WMA, WAV

**USB jack:** USB 2.0; compatible with USB 1.1

**Compatibility:** Mac and PC

**Dimensions:** 2.2x0.9x0.9 in (58x22x22mm)

 
**Working temperature:** 32–122° F (0–50 °C)

**Weight:** 0.9 oz (25 g)


**Battery:** built-in rechargeable li-polymer battery, 180mAh

**Music Playback:** up to 10 hours (8GB)

# Player Parts and Controls

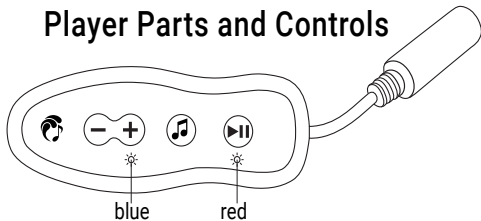

- { **Previous Track:** press once  
**Volume Down:** press and hold
- + { **Next Track:** press once  
**Volume Up:** press and hold
- ♪ { **Wireless/Memory:** press once to toggle  
**Shuffle/Loop:** hold for 1 second to toggle  
Play in Order and Shuffle modes
- ▶|| { **On:** hold 2 seconds; Uku will enter wireless  
mode automatically  
**Play/Pause:** press once to toggle  
**Off:** hold 2 seconds, red LED will flash and  
turn off
- ☀ — **LED Light Indicators:** blue and red

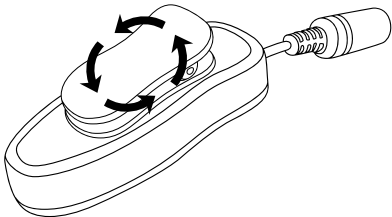 

**Rotating Clip:** Clip rotates 360° to allow easy attachment to clothing, goggle strap, etc.

**Charge/Sync:** plug in USB cable  
**Listen:** plug in headphones

## **LED Light Messages**

**Flashing blue and red:** pairing in progress

**Rapid blue flashes:** pairing successful

**Blue flashes:** playing in bluetooth mode

**Blue double-flashes:** paused in bluetooth mode

**Red flashes:** playing in mp3 mode

**Solid red light:** paused in mp3 mode

## **Transferring Files: on a PC**

1. Run "File Explorer" (from Task Bar or Start Menu).
2. Using the included USB cable, connect UKU to a USB port on your computer.
3. Open the new "Removable Disk" folder under "This PC" in the left sidebar.
4. Copy files to the "Removable Disk" folder in the order in which you want them to play.
5. In the left sidebar, right-click "Removable Disk" and select "Eject" from the menu.
6. Wait until the computer confirms a safe ejection before you unplug the USB cable.
7. Player turns off by itself when unplugged.

## **Transferring Files: on a Mac®**

1. Run "Finder®" (from the Dock).
2. Using the included USB cable, connect UKU to a USB port on your computer.
3. Open the new "Untitled" folder that appears under "Devices" in the left sidebar.

Continued...

**TIP:** To conserve battery life, turn off the player when you are done. If playing, it will run until out of charge. If paused, it will turn off in 3 minutes. If the light is blinking, the player is running.

## **Wireless Pairing:**

Pair your device with UKU before entering water. UKU must remain close to the device (within 2 inches of your device) for wireless to work underwater. Enable wireless function on the device you want to pair with UKU (usually in Settings). With UKU turned OFF, hold down the Play/Pause button (▶||) until both LED lights blink and you hear “enter pairing”. Choose uku01 from the list of available wireless devices. Agree to any pairing requests that appear on your device. You will hear “Connection successful” when you have finished pairing UKU.

# **Troubleshooting**

## **Player does not turn on**

1. Make sure the battery is charged (the red LED will turn off, blue will turn on).
2. Connect to computer and check for response. (LED lights up if computer recognizes player).

## **No sound comes from headphones**

1. Turn up volume (hold down Next Track button).
2. Gently clean out headphone jack.
3. Make sure the audio file format is supported.
4. Check if files play correctly on computer.

## **Files do not transfer**

1. Make sure the player is correctly connected to the computer (LED should be glowing).
2. View on computer if the Uku has enough memory to store additional music.

Light is on, but buttons do not respond

1. Turn off player (press and hold the Play/Pause button for 3 seconds).
2. Turn on the player and check for response.

## **WARNINGS:**

Listening to headphones while driving can be dangerous and is illegal in some areas. Use caution when using your headphones during any activity that requires your full attention. Gently place earbuds in ear. Earbuds may detach from headphones and remain in ear canal if inserted too forcefully. Consult your physician before starting any exercise program. Listening to music at high volumes (+85 Db) can permanently damage your hearing. To avoid the risk of serious injury, do not use below 10ft (3.05m).

### **CHOKING HAZARD—Not a toy!**

This item contains small parts and is for ages 12 and up. Do not incinerate! Internal battery may burst or leak.

### **Disclaimer**

This product's software, user manual, and technical parameters may change without notice. This manual is a general description of the product. The manufacturer and distributor do not assume responsibility for any errors in this user's manual. Except where prohibited by law, in no event will Underwater Audio be liable to you for any indirect, consequential, exemplary, incidental or punitive damages, including lost profits, even if Underwater Audio has been advised of the possibility of such



damages. If, notwithstanding the other provisions of these Terms of Use, Underwater Audio is found to be liable to you for any damage or loss which arises out of or is in any way connected with your use of the product, Underwater Audio's liability shall in no event exceed the total cost of the product. Some jurisdictions do not allow limitations of liability, so the foregoing limitation may not apply to you.

## Correct disposal of player

Do not throw this item away with other household waste! To safely dispose of your device, please use your community's waste collection and recycling systems. You may take the product back to the store, where the retailer will recycle it in accordance with environmental safety regulations. Please recycle this MP3 player responsibly to promote the sustainable reuse of material resources!



All rights reserved.

Windows is a trademark of Microsoft Corporation.  
Mac is a trademark of Apple Inc.



Scan this QR code with your phone and visit our YouTube channel.

Find our instructional videos and more!

**QUESTIONS?  
PROBLEMS? CONTACT US!**

**[underwateraudio.com](http://underwateraudio.com)**

**[help@underwateraudio.com](mailto:help@underwateraudio.com)**

**Toll-free: 1-877-849-0750**

**Your UKU Wireless Receiver + MP3 has a 1-year warranty that covers manufacturer's defects. The warranty does not cover lost or stolen items.**

**Manufactured in China**

4. Copy files to the “Untitled” folder in the order in which you want them to play.
5. Click “Eject” (▶||) next to “Untitled” in the sidebar.
6. Wait until “Untitled” has disappeared from the sidebar before unplugging UKU.
7. Player turns off by itself when unplugged.

## **Charging the Player**

Make sure the headphone jack is clean and dry. FULLY insert the included black USB charge/sync cable into the jack. Plug the other end into a USB port. The red LED will turn on to indicate the player is charging. When UKU is fully charged (~75 minutes), the red LED will turn off and the blue LED will turn on. Disconnect and turn off UKU after charging. Use only the included charge/sync cable. Do not charge overnight.

**PLEASE NOTE: Charging for longer than 3 hours at a time can cause damage to the device's battery.**