User Guide HAP-70




PRODUCT OVERVIEW

- 1. Microphone 2. Earphone
- 3 Volume Control Knob
- 4. Ear Tip
- 5. ON/OFF Switch
- 6. Battery Cover
- · Power ON · Power OFF
- : Positive electrode of battery
- : Negative electrode of battery
- : Volume (0=min:4=max)

INSTALLING BATTERY

- 1. Open the "Battery Cover".
- 2. Insert 1 pc AG13 / LR44 battery. Battery must be placed according to the polarities indicated.
- 3. Close the "Battery Cover ".



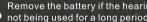

Remove the battery if the hearing aid is not being used for a long period of time.

HOW TO OPERATE

- 1 Turn the volume to minimum before use
- 2. Insert the hearing aid over the top of your ear.
- 3. Switch ON the hearing aid. Adjust the volume.
- * Choose a correct ear tip size. A whistling sound may occur if the tip is not firmly inserted into your ear



TROUBLE SHOOTING

In case of no sound, please check the followings:

- 1. If the volume is turned up;
- 2. If the battery is inserted correctly:
- 3. If the battery has run dry;
- 4. If the earphone is damaged.

MAINTENANCE

Clean your hearing aid regularly:

- 1. Remove the ear tip.
- 2. Wipe the hearing aid body with a clean, dry cloth.
- 3. Soak the ear tip in warm, soapy water. Remove any earwax built-up that may block the passage of the ear tip.
- 4. Rinse the ear tip with clean water.
- 5. Allow the ear tip to dry before installing it.

SAFETY INSTRUCTIONS

sound amplification.

- 1. This product is not suitable for patients with tympanitis or ear pyogenesis.
- 2. Avoid listening at high volume for a long period of time to avoid possible hearing damage.
- 3. Stop using immediately if you feel any discomfort.
- 4. Please maintain your hearing aid all the time. Avoid the ear tip and microphone being blocked by foreign objects, as it will affect the result of
- 5. Avoid shaking or dropping your hearing aid.
- 6. Do not keep your hearing aid in an environment of high humidity or high temperature.

SPECIFICATIONS

- 1. Max sound output: 130 ± 5dB
- 2. Volume input: ≥ 50dB
- 3. Total harmonic distortion: ≤ 5%
- 4. Frequency range: 300 ~ 40000Hz
- 5. Input noise: ≤ 30dB
- 6. Voltage: DC 1.5V
- 7. Current: ≤4mA



hopewell / since 1985

hopewell-living.uk

© hopewell. All right reserved. The hopewell logo is a registered trademark of Norm Design Ltd. Information in this document is subject to change without notice.

