



SAFETY INSTRUCTIONS

- Thank you for purchasing this product. Please read and follow the instructions carefully and keep this manual for future reference.
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the device by a person responsible for their safety.
 - Keep this device out of reach of children. Do not let them play with the device.
 - In case of malfunction, get the device repaired by the authorised service centre.
 - Make sure the batteries are installed according to the polarity (+/-) indicated.
 - Check regularly and replace the batteries immediately if they run out.
 - Remove all batteries from the device when not in use or before cleaning.

GETTING STARTED

1 Insert batteries.

2 Switch power ON.

3 Plug in your headphones.
* Unplug to listen via speaker.

LISTEN TO RADIO

4

1. Switch to select FM or AM. Red indicator ON.
2. Rotate to tune frequency.

5

Rotate to adjust volume.

6

Pull antenna out for better reception.

LISTEN TO TF CARD MUSIC

7

Switch power OFF.

8

Insert TF card. Push gently until it locks into place.
* To eject TF card, lightly push it once.

MP3 Up to 32GB
File Format : MP3

9

Switch power ON.

10

Switch to select TF. Blue indicator ON.

11

- Short Press : Previous
Long Press : Fast backward
- Play / Pause
- Short Press : Next
Long Press : Fast forward

CARE AND CLEANING

- NOTES**
- Switch off and unplug the device before cleaning.
 - Never immerse the device, plug or cord in water.
 - The electrical connections or switches must not come into contact with water or liquid.
 - Wipe dust off the surface of the device using a dry, soft cloth. If necessary, use a damp well-wrung cloth containing a few drops of mild detergent to remove persistent stain, then clean and dry.
 - Do not use abrasive tools, they will scratch the device surface.

PROPER DISPOSAL

To help protect the environment, dispose of your device separately from household waste at the end of its working life. It can be taken to appropriate collection points provided in your country. Product marked with a crossed-out wheeled dustbin means that it must be disposed of properly according to local laws and regulations.

TECHNICAL SPECIFICATION

Power	1.5V AA battery x 2
Power Output	Max. 150mW
Speaker	50mm 8Ω 0.5W
FM / AM Frequency	88-108MHz / 530-1600kHz
Playback Media	TF card (up to 32GB)
File Format	MP3 (32 - 320kpbs)