

E


SAFETY INSTRUCTIONS

Thank you for purchasing this product. Please read and follow the instructions carefully and keep this manual for future reference.


- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the device by a person responsible for their safety.
- Keep this device out of reach of children. Do not let them play with the device.
- In case of malfunction, get the device repaired by the authorised service centre.

PRODUCT OVERVIEW

• **Front**

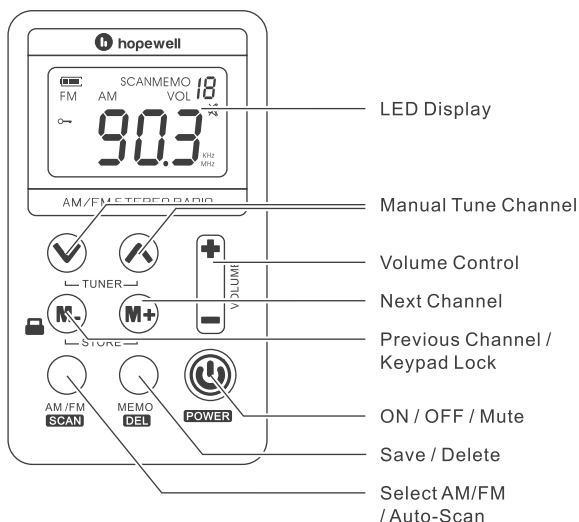

• **Top**

 

CHARGING BATTERY

- Charging Battery** Status Indicator is shown or flash means low battery.
1. Switch the device OFF.
 2. Plug the power adaptor into the Charging Port.
- * Power adaptor not included.



- Battery icon flashes while charging.
- Battery is shown when charging is complete.
- Charge time : approx. 4 hours.
- Usage time : approx. 14 hours.

HOW TO OPERATE

- Power ON / OFF** Press and hold the button repeatedly to turn the device ON / OFF.
- Volume** Press the button repeatedly to adjust the volume.
- Using Headphone** Plug the headphone into the Headphone Jack.
- Select AM / FM** Press the button repeatedly to select " AM " / " FM " .
- Auto-Scan Channels** Press and hold the button until the LED Display shows " SCAN ". Channels will be scanned and saved.
* Existing memories will be replaced by new ones.
- Select Channel** Press the button to select previous or next channel while radio is playing.
- Manual Tune and Save Channels** Press the button to tune the frequency manually. Press the button to save the channel. LED Display shows " MEMO ". Press the button repeatedly when " MEMO " blinks to select the storage location. Press the button to confirm.
* Existing memories will be replaced by new ones.
* Up to 29 memories
* Memory is full if " FUL " is shown. Please delete existing memory in order to save new one.

Delete Channel Press and hold the button until the next channel is shown while radio is playing.

Keypad Lock Press and hold the button until LED Display shows " ", the keypad is locked. Press and hold the button again until " " disappears, the keypad is unlocked.

Mute Press the button while radio is playing. LED Display shows " ", the radio muted. Press the button again, " " disappears, the radio is unmuted.

CARE AND CLEANING

- NOTES**
- Switch off and unplug the device before cleaning.
 - Never immerse the device, plug or cord in water.
 - The electrical connections or switches must not come into contact with water or liquid.
-
- Wipe dust off the surface of the device using a dry, soft cloth. If necessary, use a damp well-wrung cloth containing a few drops of mild detergent to remove persistent stain, then clean and dry.
 - Do not use abrasive tools, they will scratch the device surface.
-

PROPER DISPOSAL

To help protect the environment, dispose of your device separately from household waste at the end of its working life. It can be taken to appropriate collection points provided in your country. Product marked with a crossed-out wheeled dustbin means that it must be disposed of properly according to local laws and regulations.

TECHNICAL SPECIFICATION

Operating Voltage	DC 3.7V
Charging Voltage	DC 5V
Battery Type	Rechargeable Li-ion battery (500mAh)
AM / FM Frequency	522-1710kHz / 64-108MHz
Working Temperature	-5 ~ 40°C