



## ENERSOL HEADER REPLACEMENT

- 1. DISCONNECT HEADERS**  
by removing black clip.

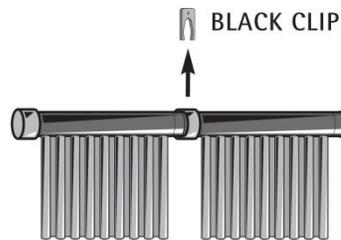


- 2. INSERT ORANGE INSTALLATION TOOL.**  
Pull Headers apart.

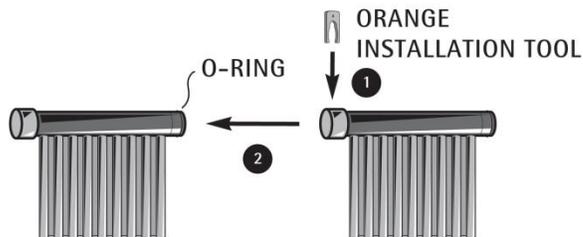


- 3. REMOVE RUBBER**  
by gently prying rubber off using a flat screwdriver. Start at one end and work across the header.



- 4. RE-ATTACH RUBBER**  
by dipping ends of rubber into warm soapy water and pushing on to header. *(When connecting different versions of headers, you may need to cut off Locator Tab).*

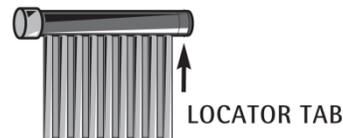

- 5. RECONNECT HEADERS**  
first by lubricating the O-ring with "O-ring Lubricant" (white lithium grease), then use Orange Installation Tool to slide together and secure with the Black Clip.

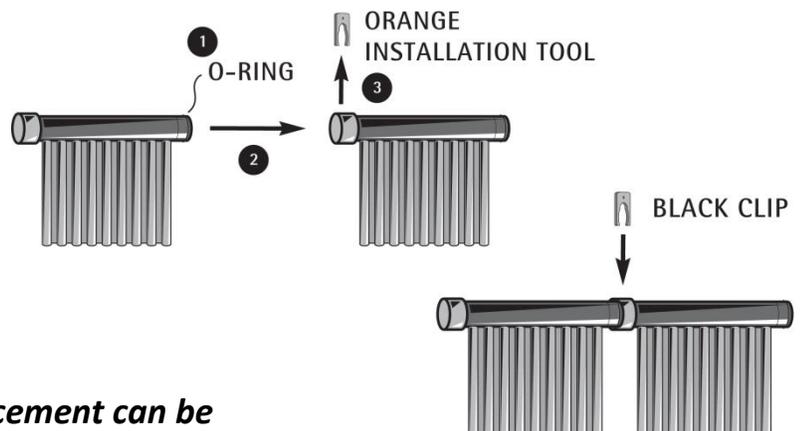

**All parts required to perform a header replacement can be purchased from your local dealer or at [www.solarthermal.com](http://www.solarthermal.com).**