


↑ ↑ ↑ ↑ ↑ ↑
**TO FIRST SLAVE
FCU (FS OR HW MODELS)**

FACTORY JUMPER

**COIL TEMP.
PROBE**

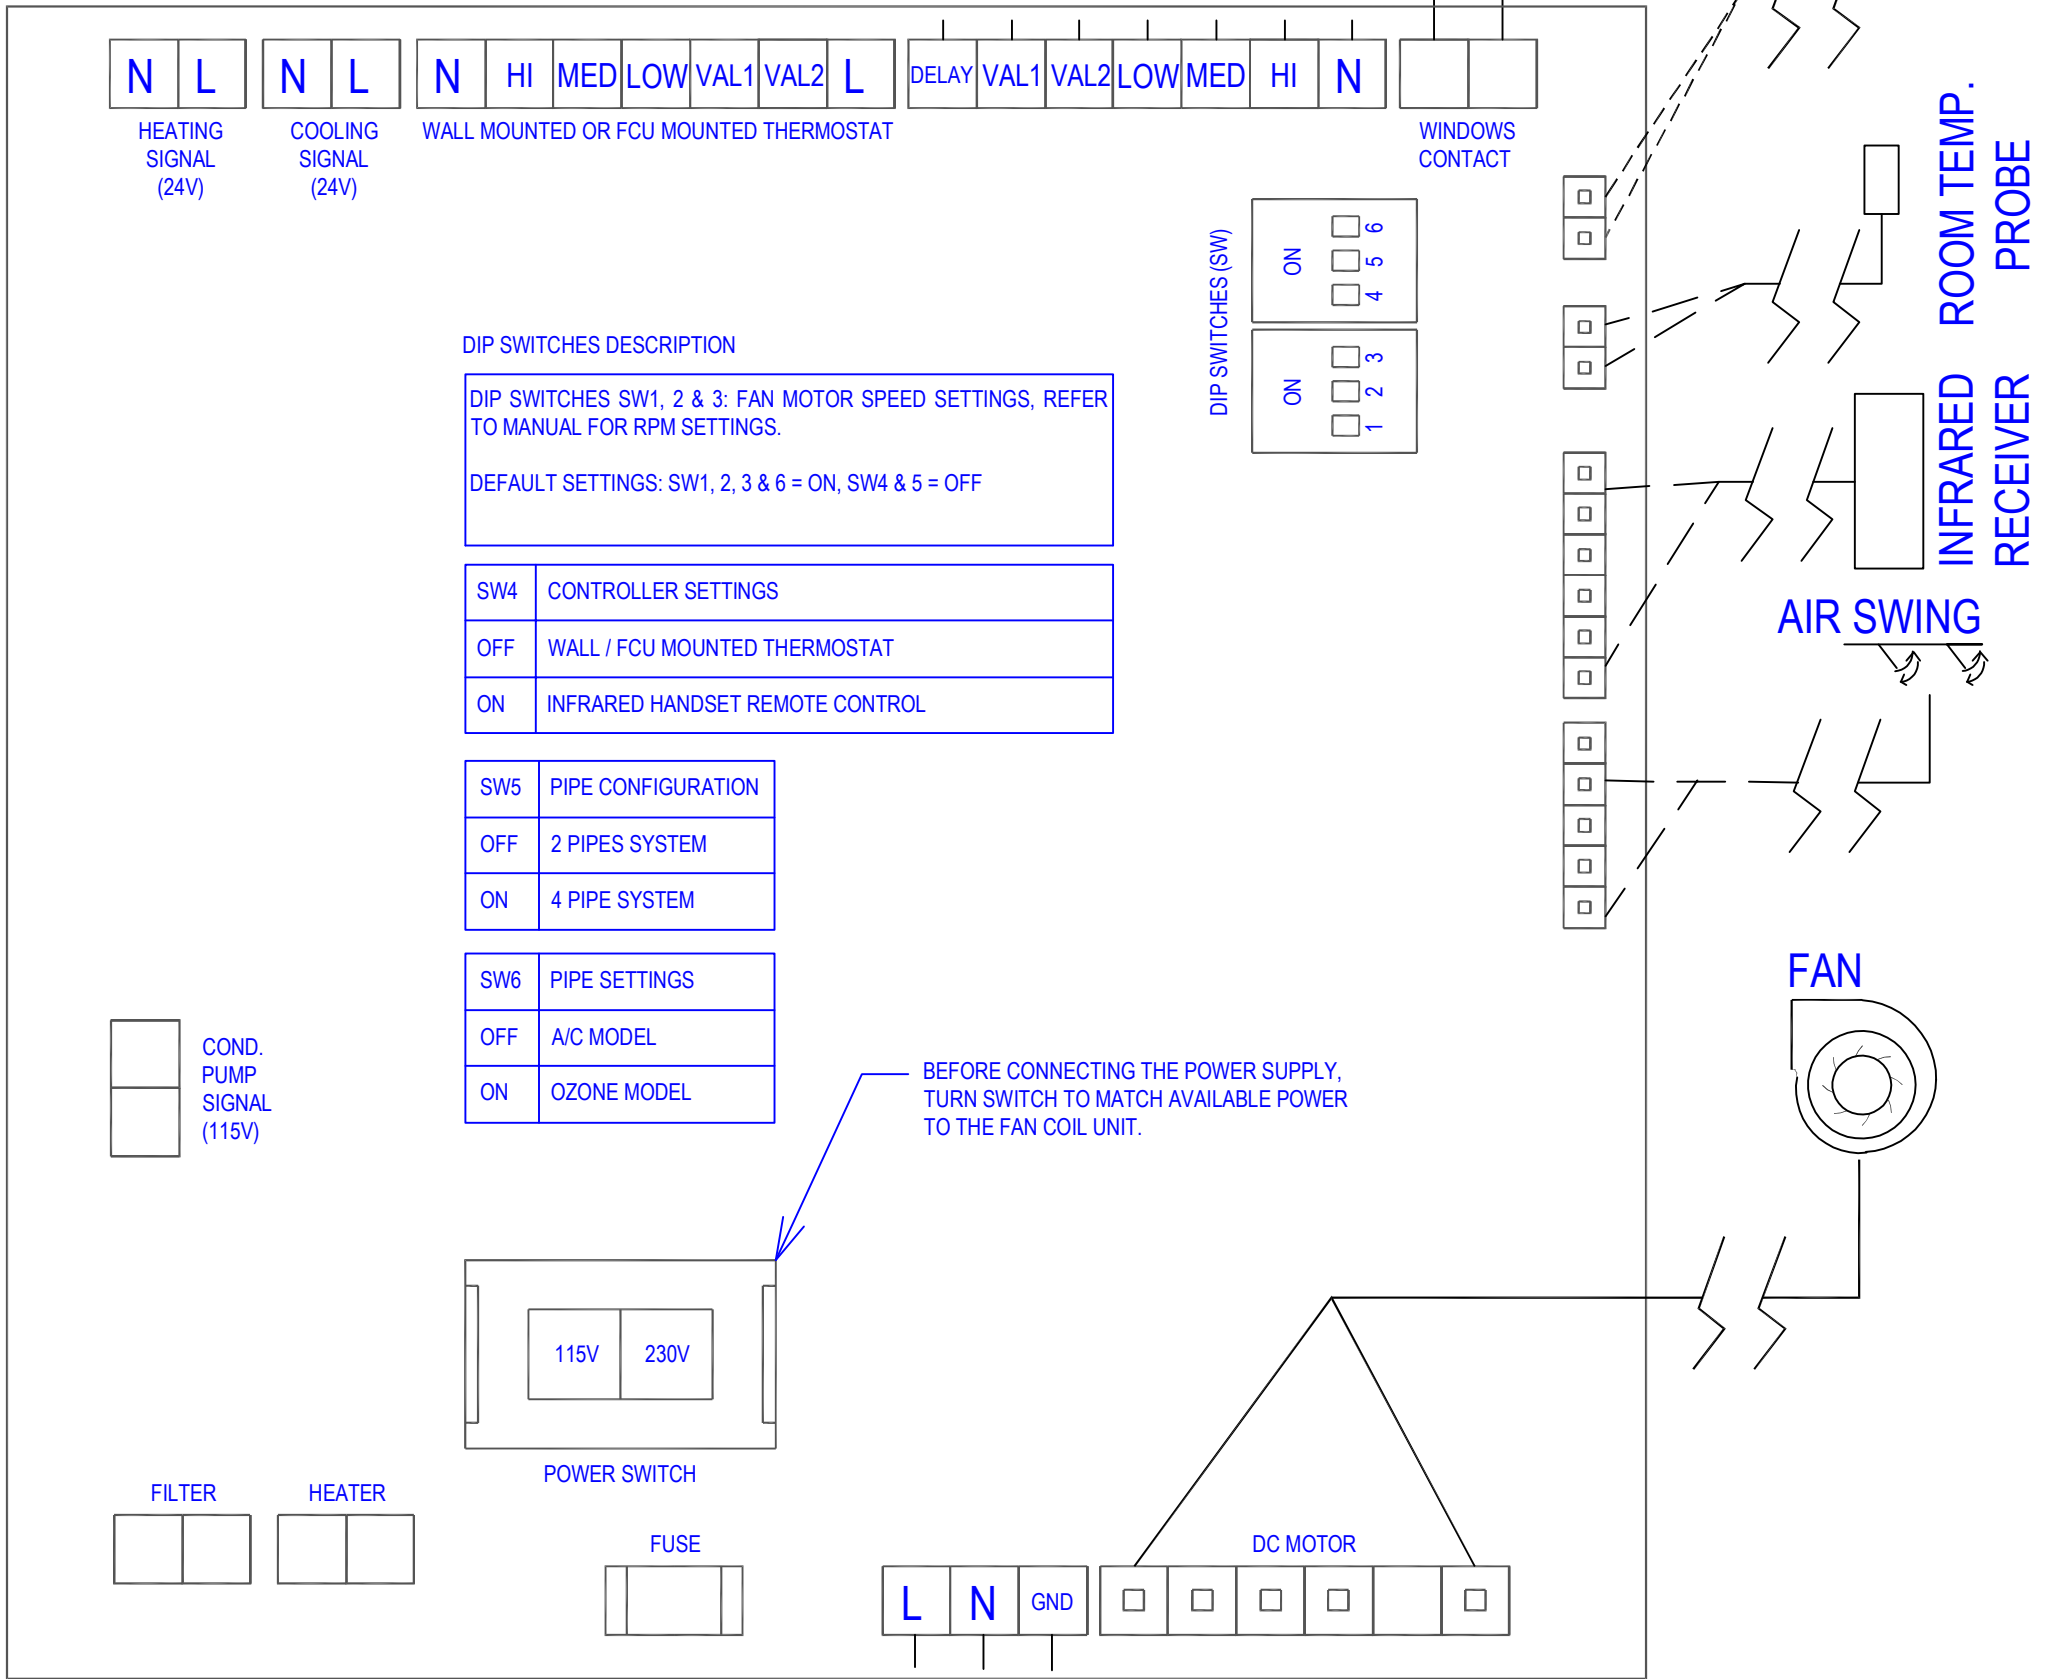

BEFORE CONNECTING THE POWER SUPPLY,
TURN SWITCH TO MATCH AVAILABLE POWER
TO THE FAN COIL UNIT.

**115V-1PH-60Hz
POWER SUPPLY**

Air Flow DIP Switch Settings			Fan Speed (RPM)		
1	2	3	Min / Low	Med	Max / High
OFF	OFF	OFF	200	400	650
ON	OFF	OFF	200	500	850
ON	ON	OFF	400	800	1300
ON	ON	ON	600	900	1500
OFF	ON	ON	600	900	1600
OFF	OFF	ON	600	900	1800
OFF	OFF	ON	600	900	1900
ON	OFF	ON	600	900	2000

XX: Default DIP Switch Settings (Factory Set).