

# Gravity Feed Tank Watering Instructions



## Battery Watering Technologies

**ONLY WATER BATTERIES AFTER CHARGING OR ACID SPILLAGE MAY OCCUR DURING CHARGE.**

Tank should be positioned 3 feet (.91 m) or more above the batteries to ensure proper water flow.

1. Unscrew and remove small white cap before connecting to the system (replace after watering).
2. Tap or shake the line to force the air out of the line. This will help to optimize water flow.
3. Insert the male connector on the watering system into the female connector on the gravity tank fill line.
4. The flow indicator will begin spinning indicating that water is flowing into the battery.
5. Watering is complete when the flow indicator stops spinning **OR** all indicator eyes rise to the top. Indicator eyes should be viewed from the side, not directly above.
6. **Always** disconnect the tank after watering and replace the dust cap on the system to keep dirt and debris from entering the watering system. Never leave the tank attached to the watering system, doing so could result in over-filling.

**CAUTION: ONLY WATER BATTERIES AFTER THEY HAVE BEEN FULLY CHARGED  
OR ACID SPILLAGE MAY OCCUR DURING CHARGE**

Phone: 336-714-0448 | Toll Free: 1-877-522-5431 | [www.batterywatering.com](http://www.batterywatering.com)