LED T8 PLUG & GO™


INSTALL INSTRUCTIONS - ELECTRONIC BALLAST REQUIRED (UL TYPE A)

PLEASE READ OVER ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING THE LAMPS AND KEEP THIS SHEET FOR FUTURE REFERENCE. WARNING:

- Risk of Shock Disconnect power before installation.
- Risk of Fire Do not install this lamp in a preheat luminaire.
- Risk of Fire Use only in place of fluorescent lamps specified on label.
- Operates on Electronic Ballast only.
- · Check the lamp before installation, if there is any damage caused during transportation, do not install.
- · Maintenance should be carried out by technical personnel only.
- Do not stare at the light source with unprotected eyes for extended periods of time.
- · Do not place any objects on lamp.
- Keep the lamp away from flames or high temperature objects.
- · Suitable for Damp Locations.
- Some lamps may not be compatible with dimming or emergency ballasts, please check the ballast compatibility chart for further details.




WARNING DISCONNECT POWER BEFORE INSTALLING OR SERVICING.

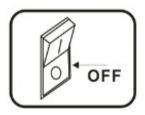

1. Turn off the power to the luminaire before removing the lamp.



2. Remove the diffuser lens/cover (if applicable).

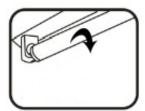


3a. Remove the fluorescent lamp. First, rotate the lamp 90° degrees.



3b. Then, remove the lamp from lampholder.




4a. Insert the LED replacement lamp.

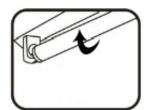

4b. Then, rotate the lamp 90° degrees.



5. Replace the diffuser lens/cover (if applicable).

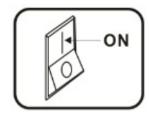

6. Turn the power to the luminaire back on.

Make sure that the pins are completely seated in the lampholders. Repeat steps 3 and 4 as need for each fluorescent lamp.

CAUTION: IF THE LAMP OR LUMINAIRE EXHIBITS UNDESIRABLE OPERATION (BUZZING, FLICKERING ETC.) IMMEDIATELY TURN OFF POWER. REMOVE LAMP FROM LUMINAIRE AND CONTACT THE MANUFACTURER.

CAUTION: RISK OF FIRE. DO NOT INSTALL IN A PREHEAT LUMINAIRE.

THIS LAMP OPERATES ON ELECTRONIC BALLASTS. IF LAMP DOES NOT LIGHT WHEN THE LUMINAIRE IS ENERGIZED, REMOVE THE LAMP FROM THE LUMINAIRE AND CONTACT THE MANUFACTURER OR QUALIFIED ELECTRICIAN.