


Sunco

Lighting made better.

User Manual
**Outdoor LED
Emergency Light**

SKU:ODS_2H_BBT-WH-6500K

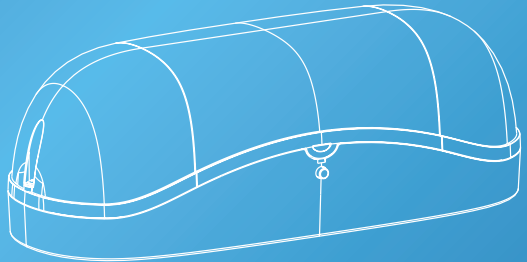


support@sunco.com
(844) 334-9938



AMERICAN
COMPANY

Whats in the Box?

Exit Sign

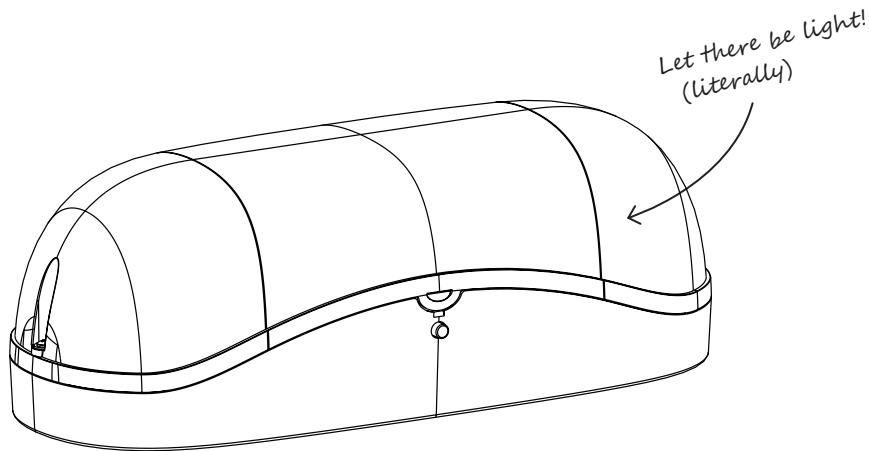


Components




x2

Crescent trim plate

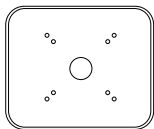


x1

 Sqaure trim plate



x3

 Wire Nuts




x2

M4X25 Screws

What You Need

 Get Your Gear



Drill



Pliers



Screwdriver



Ladder

IMPORTANT: Prior to fixture installation, install junction box in ceiling or wall. When re-lamping, use only lamps specified in the fixture. Using other lamp types may result in transformer damage or unsafe conditions. The battery in this unit may not be fully charged upon unboxing. After electricity is hooked up to the unit, let the battery charge for at least 24 hours. It is then ready for normal operation. Unused wires must be capped with a wire nut.

Before You Start

Safety Information

- Turn off circuit breaker before installing this fixture.
- Suitable for use in damp environments at temperatures ranging from 32°F to 104°F. Not for use where directly exposed to water.
- Not compatible with photo controls.
- Not compatible with occupancy sensors.
- Not compatible with 3rd party sensors.
- Not compatible with dimmers.
- Not compatible with timing devices.
- All electrical connections must be in accordance with local and National Electric Code (N.E.C.) standards.
- Please review installation manual carefully before proceeding. Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.


 **WARNING:**
Cancer & Reproductive Harm- www.P65Warnings.ca.gov

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:


1.) This device may not cause harmful interference.

2.) This device must accept any interference that may cause undesired operation. Please review all instructions carefully prior to installation.

Dimensions

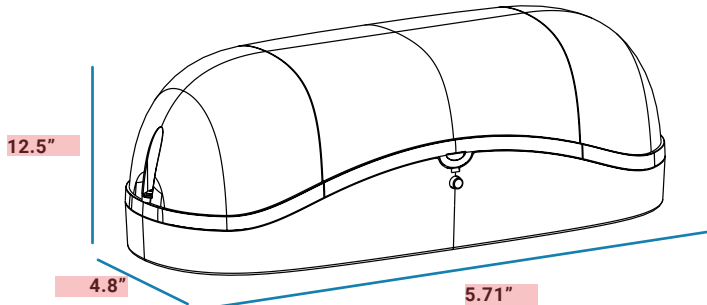


Installation Guide

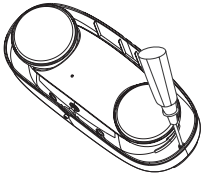


STEP 1

 Using a Phillips screwdriver (not included) to unscrew the two screws on the side of the lamp cover.




STEP 2

Insert a flathead screwdriver (not included) along a notch on the side of the lamp cover to prise open the lamp cover. Repeat on the opposite side to unlatch the lamp cover.

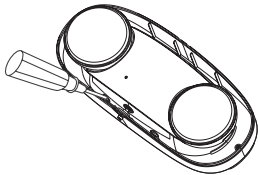

STEP 3


Using a screwdriver, press against the lamp's buckle, and using the other hand, hold and lift the unit up while the buckle is pressed in. Continue holding the unit to keep the buckle open and then press open the other buckle in the same way. Remove the unit from the housing.

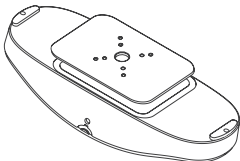

STEP 4


Drill a hole on the back of the housing and attach the EVA insulation to the back plate, then pull the input wires out. Mount the housing onto the junction box and secure with screws.

 Installation Guide




STEP 5

Connect wires through the -box, (1) When using 120V AC, connect the black wire to the building utility. (2) If using 277V AC, connect the red wire to the building utility. Connect neutral wires to the white lead. Unused wires must be capped using enclosed wire nuts. (For detailed wiring diagrams, please refer to page 7)

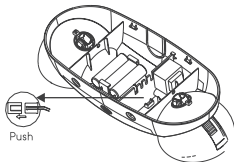


STEP 6

Connect the battery only after continuous AC power can be provided to the unit.

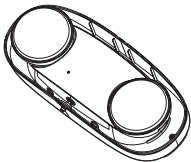

STEP 7

Place the unit back into the housing. Replace the lamp cover and screw back onto the housing.

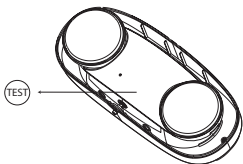


STEP 8

Press the "TEST" button to check for proper operation of the unit.

Product Details

Wiring Diagram

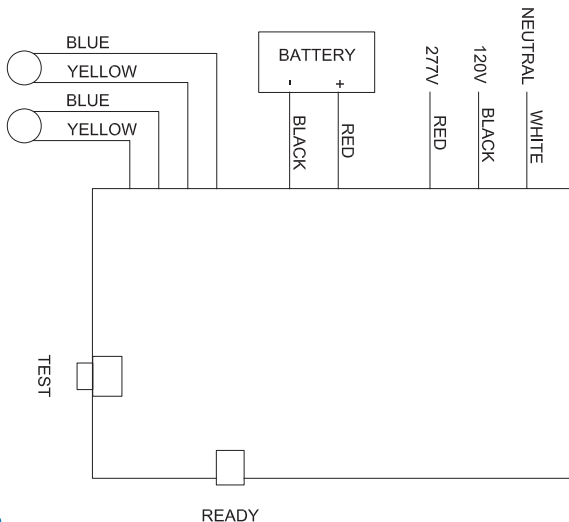

Specifications

Voltage	120V-277V	Beam Angle	120
Wattage	2.4W	Lumens	400 LM
Power Factor	0.48	IP Rating	IP65
CRI	80	Battery	3.6V2000mAh Ni-Cad
Weight	2.09 lbs	Power Source	Battery
Housing Material	ABS+PC	Amps	120V/0.025A, 277V/0.01A
Dimmable	N/A	Warranty	1 Year

Common Troubleshooting

Feeling in the dark about an issue with your product? No worries! Our troubleshooting section is here to shed some light and provide you with easy-to-follow solutions for any

problem. If you still need some assistance, please feel free to contact us with any questions. Our team of lighting experts are happy to help brighten your day.

Installation

Light isn't turning on.

Double check if fixture is properly connected and circuit breaker hasn't been tripped.

Light unexpectedly fails.

For further assistance, reach out to customer support.

Battery

Light not lasting on a single charge.

Ensure the battery is properly connected and compatible.

Battery is not charged.

Verify the battery is securely plugged in and the supply wires are properly connected.

Test light is not working.

Ensure the battery is properly connected.

Flickering

Light is flickering when turning on.

Check that fixture wiring connections are secure.

Light flickering with other lights on the same circuit.

Check that the lights on the same circuit are not overloading the circuit.

Light flickering when turned on.

Verify fixture compatibility and that it is grounded.

Buzzing

Fixture buzzing with power outages.

Verify light is connected to surge protector securely.

Fixture buzzing with appliances or electronic devices.

Look for nearby interferences that can cause buzzing. Such as televisions, radios, computers, etc.

Warranty Policy

This product is covered by our industry leading 1 year warranty.

It gets even better - scan the QR code for 2 extra years of protection!



Scan me for two extra years!

30 Day Return Policy

At Sunco, we value our customers and stand by the quality and performance of our products.

If you are not completely satisfied with your purchase, we accept returns within 30 days of your purchase date.

Customer Service

Our Los Angeles team of lighting experts is here to assist you with all your needs! Contact us at:

Email: support@sunco.com

Call or Text: (844) 334-9938

Sunco

Lighting made better.

support@sunco.com
(844) 334-9938

REV1.0



AMERICAN
COMPANY