


UTILITY SHOP LIGHT

Install Guide and Manual

COMPONENTS

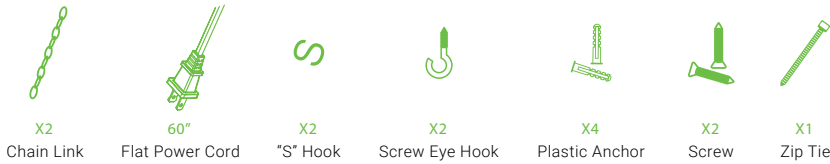


EASY INSTALLATION Suspension Install

Required Tools: Drill, Ladder, Hammer, Pliers, Tape Measure, Pencil.




Turn Power OFF


- Turn off circuit breaker that provides power to the light switch for the LED Shop Light.
- Mounting surface must be able to support the weight of the fixture.
 - Plasterboard - #8 eye hook screw with plastic anchors, or expansion bolts (not included);
 - Plaster board thickness should be 3/8 inch.
 - Open frame wood joists. -#8 eye hooks only, no anchors required.

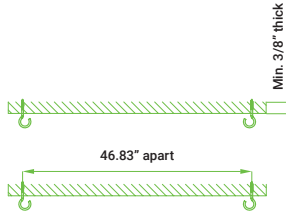


- Drill pilot holes. Spacing between hooks should be 46.83 inches apart.
 - Dry Wall = 7/32" drill bit
 - Wall Stud = 9/64" drill bit
- Insert x2 wall anchors, then screw in the screw eye hooks into the anchors.

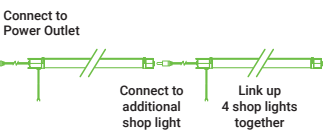


- Space the anchors to suit your lighting plan and power cord length.
 - Link up to 4

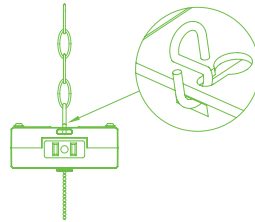

- Install one S hook into each end of the chain.
 - Repeat with second chain.
 - Crimp to secure to chain. Leave other side open
- Loop S hook into the fixture's end keyhole slot.
 - Repeat with second chain.
 - Crimp end to secure.

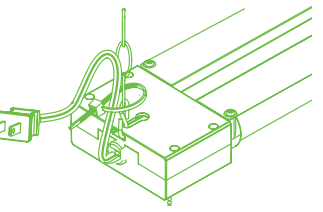

- Loop the supplied cable tie through one chain link and around the power cord to secure it to the chain. This is necessary prior to hanging.

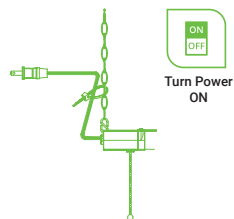

- Hang the loose end of the S hook chain on screw eye hook in ceiling.
 - Repeat with second chain.
- Plug in power cord to electrical outlet.
- Turn on circuit breaker and test light.

WARNING

- To reduce the risk of fire, electric shock or injury to people:
- This product should be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
 - Do not alter, relocate or remove wiring (plug) during installation.
 - Proper grounding is required to ensure safety. Do not install directly over a heat source.
 - Check for damage during shipping prior to install. If the product is damaged, do not use it.
 - This fixture complies Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
 - Not to use with dimmers.
 - Do not use the plug on the side of the LED Shop Light as an outlet for appliances, vacuums, power tools, extension cables, etc. This was designed for daisy chain only. Using it for other purposes will void your warranty.
 - Turn off the switch and circuit breaker before installing this LED light fixture. When using the wall switch, make sure the pull chain is on.
 - Use safety precautions. Safety eyeglasses and gloves are recommended.
 - Please review instructions carefully before proceeding.


SPECIFICATIONS

Voltage	120V
Wattage	40W
Suitable for Locations Ingress	Damp
Housing	Aluminum + PC
Weight	1.47lbs
Warranty	7 years

UTILITY SHOP LIGHT

Install Guide and Manual

COMPONENTS

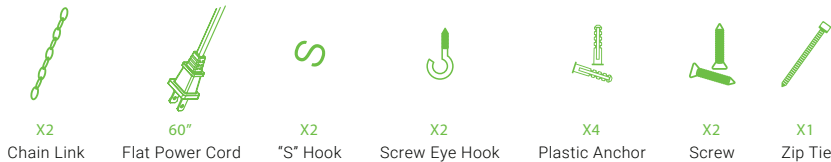


Required Tools: Drill, Ladder, Hammer, Pliers, Tape Measure, Pencil.

EASY INSTALLATION Direct Mount Installation




Turn Power OFF


1. Turn off circuit breaker that provides power to the light switch for the LED Shop Light.
2. Mounting surface must be able to support the weight of the fixture.
 - Plasterboard thickness should be 3/8 inch.
 - Open frame wood joists. -#8 eye hooks only, no anchors required.

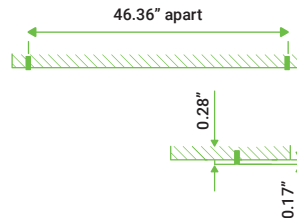


3. Drill pilot holes. Spacing between hooks should be 46.36 inches apart.
 - Dry Wall = 7/32" drill bit
 - Wall Stud = 9/64" drill bit
4. Insert x2 wall anchors, then screws.
 - Leave approximately 1/4" of the screw exposed
 - Leave about 0.17" gap between the screw head and mounting surface

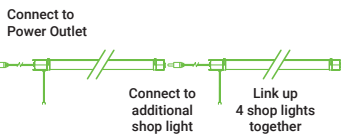

5. Space the anchors to suit your lighting plan and power cord length.
 - Link up to 4

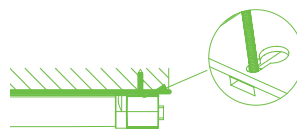

6. Lift fixture up to screws and slide to one side to secure into place. Screw should be in narrow portion of keyhole. Tighten screws so fixture is firmly fixed against screws.

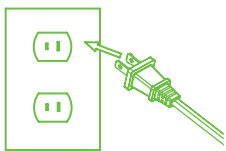

7. Plug in power cord to electrical outlet.



Turn Power ON

8. Turn on circuit breaker and test light.

WARNING

- To reduce the risk of fire, electric shock or injury to people:
- This product should be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
 - Do not alter, relocate or remove wiring (plug) during installation.
 - Proper grounding is required to ensure safety. Do not install directly over a heat source.
 - Check for damage during shipping prior to install. If the product is damaged, do not use it.
 - This fixture complies Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
 - Not to use with dimmers.
 - Do not use the plug on the side of the LED Shop Light as an outlet for appliances, vacuums, power tools, extension cables, etc. This was designed for daisy chain only. Using it for other purposes will void your warranty.
 - Turn off the switch and circuit breaker before installing this LED light fixture. When using the wall switch, make sure the pull chain is on.
 - Use safety precautions. Safety eyeglasses and gloves are recommended.
 - Please review instructions carefully before proceeding.

SPECIFICATIONS

Voltage	120V
Wattage	40W
Suitable for Locations Ingress	Damp
Housing	Aluminum + PC
Weight	1.47lbs
Warranty	7 years