

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/ abrasions, and other hazards read all warnings and instructions included with and on the fixture box and all fixture labels.
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- Commercial installation, service and maintenance of luminaires should be performed by a qualified licensed electrician.
- For the installation: If you are unsure about the installation or maintenance of the luminaires, consult a qualified licensed electrician and check your local electrical code.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.

- Turn off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.
- Turn off the power when you perform any maintenance.
- Verify that supply voltage is correct by comparing it with the luminaire label information.
- All wiring connections should be capped with UL approved wire connectors.

ACAUTION

- Avoid direct eye exposure to the light source while it is on.
- Account for small parts and destroy packing material, as these may be hazardous to children.
- Risk of burn. Disconnect power and allow fixture to cool before changing bulb or handing fixture.


NOTICE: Green ground screw provided in proper location. Do not relocate.

NOTICE: Minimum 194°F supply conductors.


NOTICE: Specifications and dimensions subject to change without notice.

NOTICE: Suitable for Dry or Damp location

General Wiring Diagram

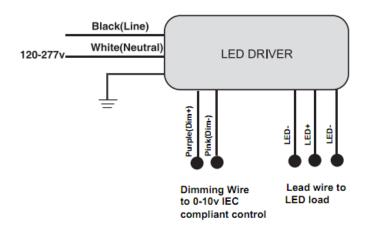


Installation Instruction

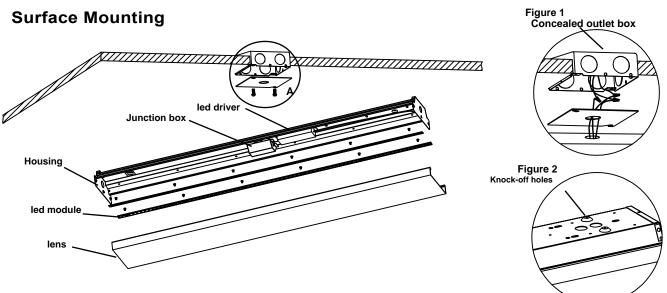

- 1. Remove product from packaging
- 2. Remove lens by pulling from one side of the fixture and hinge on the other
- 3. For mounting, using the provided mounting holes on each end of the fixture housing.
- 4. Make electrical connections according to code.
- 5. Install channel cover
- 6. Install lens on one side of the fixture and rotate to engage the opposite side

Field Adjustable Wattage & CCT

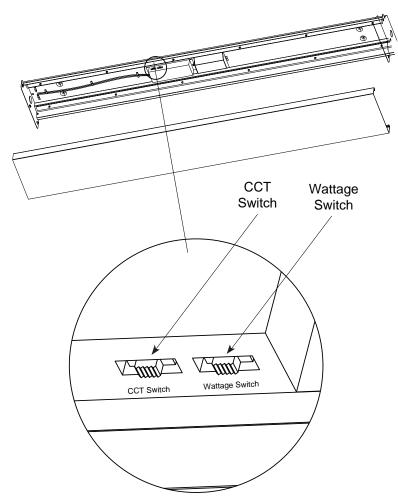

The end users may adjust the color temperature and lumen output respectively by the two DIP switch buttons DIP integrated into the driver. Each switch is accommodated with 3 options (left, middle and right), corresponding to 3 color temperatures and 3 powers respectively, which can perform the desired color temperature and lumen output combination.

- 1. DIP switches are located onto the side of the fixture.
- 2. Select a wattage and color temperature by sliding switch left or right respectively to the desired value.