# **LANDSCAPE LIGHTING - FLOOD**

#### **INSTALL INSTRUCTIONS**

## PLEASE FIND A QUALIFIED ELECTRICIAN FOR INSTALLATION. Please read the instructions before you install and use the luminaire.

- Turn circuit breaker(s) off or remove fuse(s) before installation.
- Fixture(s) must be installed in accordance with all local codes and ordinances.
- DO NOT install within 10 feet of a pool spa or fountain.
- SUITABLE FOR MOUNTING WITHIN 4 FT OF THE GROUND.
- · SUITABLE FOR WET LOCATIONS.

#### SAFETY INFORMATION - TO REDUCE THE RISK OF FIRE, OR INJURY TO PERSONS:

- Turn off/unplug and allow to cool before replacing lamp.
- · Lamps get hot quickly. Contact only switch plug when turning on.
- · Do not touch hot lens, guard or enclosure.
- · Keep lamp away from materials that may burn.
- Do not touch the lamp at any time. Use a soft cloth. Oil from skin may damage lamp.
- Do not operate the luminaire fitting with a missing or damaged shield.

#### **SAVE THESE INSTRUCTIONS**




WARNING DISCONNECT POWER BEFORE INSTALLING OR SERVICING.

This is a low voltage fixture for use with a maximum of 25A, 15V power units. A remote transformer is required. The main cable from the power units should be buried for less than 6 inches under the ground level and can be purchased.

#### **LUMINAIRE MOUNTING (with PVC Spike)**

- 1. Run the wire pigtail from luminaire through the mounting hole on top of the PVC Spike.
- Thread the PVC Spike into the fixture.
- 3. Remove lens cover assembly, push the bulb pins into the socket holes carefully, until seated, then replace the lens cover.
- Place PVC Spike in the desired position and insert into the ground until the flange of the PVC spike is flushed to grade level.
- Attach fixture(s) wires pigtail to main supply cable with connector (not provided) suitable for direct burial.
- 6. Aim luminaire to desired angle. Lock into place by tightening the screw in adjustment knuckle.
- 7. Provide power to the luminaire and check the proper operation.

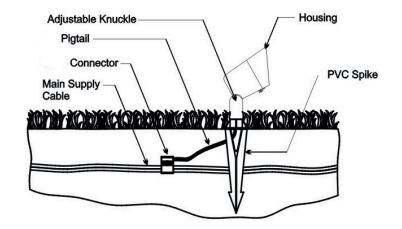

### LAMP REPLACEMENT

- 1. To prevent electrical shock, disconnect transformer from electrical supply before service.
- 2. Remove lens cover to expose lamp.
- 3. Replace lamp with correct wattage and type marked on fixture label. Replace lens cover.

Note: DO NOT touch lamp with bare hands. Always use a soft cloth to handle lamps.