

User Manual
LED Selectable Vapor
Tight Fixture


SKU: VT_DU-WH-3550K





Whats in the Box?

Vapor Light

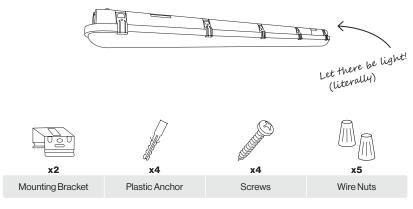



Before You Start

Safety Information

To reduce the risk of fire, electric shock, or physical injury:

- Turn off power before changing fixture.
- Suitable for use in damp environments at temperatures ranging from -22°F to 113°F. Not for use where directly exposed to water.
- Not intended for use with emergency fixtures.
- Not compatible with photo controls.
- Not compatible with occupancy sensors.
- Not compatible with 3rd party sensors.
- Not compatible with all dimmers. For more dimming information, please visit www.sunco.com.
- · Not compatible with timing devices.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1,) This device may not cause harmful interference.

- All electrical connections must be in accordance with local and National Electric Code (N.E.C.) standards
- Please review installation manual carefully before proceeding. Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.



Cancer & Reproductive Harm- www.P65Warnings.ca.gov

2.) This device must accept any interference that may cause undesired operation. Please review all instructions carefully prior to installation.


Quickstart Guide



Step 1
Install brackets with proper spacing for size.



Step 2Unlock the fixture & adjust brightness.

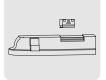


Step 3Snap the housing onto the brackets securely.




Step 4
Latch the lens onto the housing.

Installation Guide

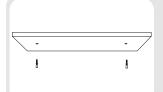


STEP 1

- a. Turn off circuit breaker.
- b. Drill holes to match product lengths, then insert rubber plugs from the kit.

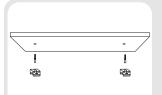

STEP 2


Attach mounting brackets to the surface at the appropriate spacing based on the size.

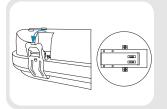

STEP 3


- a. Open the fixture by releasing the metal latches.
- b. Use switches to choose CCT and brightness settings.

Installation Guide (Cont.)

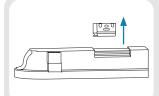


STEP 4

Securely snap the housing onto the mounted brackets.

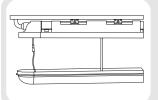

STEP 5

- a. Thread supply wire through waterproof gland, connect to terminal block, and tighten gland securely.
- b. Black to Black (Live): White to White (Neutral): Green to Green (Ground).

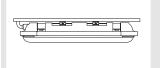

STEP 6

Optional: To use dimming feature, connect Pink to Pink and Purple to Purple.

Attach the lens to the housing using the metal latches.

Recommended Dimmers

Scan for the full	
compative full	
compatible dimmer li	XH

Model
DVSTV
DA21A
NTSTV-DV
DVTV
AWSMT-7DW
DD710-BDZ
DS710-10Z
WS4FBL3PTC
RH4FBL3PTC



Specifications

Voltage	120V-277V	Average Lifetime	50,000 hrs
Wattage	30W/40W/50W	Lumens	4200,5600,7000
Power Factor	>0.9	Moisture Rating	Wet
Beam Angle	120°	CRI	80
Frequency	50/60 Hz	Usage	Indoor/Outdoor
Housing Material	PC	Amps	0.458A
Dimmable	0-10V	Warranty	7 Years


Common Troubleshooting

Fixture buzzing when dimmed.

We've got you covered! Our troubleshooting section is here to shed some light and provide you with easy-to-follow solutions for any problem.	If you still need some assistance, feel free to contact us. Our team of lighting experts are happy to help brighten your day.
Installation	
Light isn't turning on.	Double check if fixture is properly connected and circuit breaker hasn't been tripped.
Light isn't bright enough.	Check proper wattage & for unobstructed fixture.
Dimming Light not dimming to lowest setting.	Ensure minimum dimmer load requirement is met.
Light not dimming smoothly.	Verify dimmer compatibility with fixture.
Light not compatible with dimmer switch.	Check light-dimmer compatibility. Consider purchasing compatible switch if necessary.
Flickering Light is flickering when turning on.	Check that fixture wiring connections are secure.
Light flickering with lights on the same circuit.	Prevent circuit overload from lights.
Light flickering when turned on.	Verify fixture compatibility and that it is grounded.
Light flickering when dimmed. Buzzing	Verify dimmer switch compatibility.
Fixture buzzing with power outages.	Confirm secure surge protector link for light.
Fixture buzzing with appliances.	Look for nearby interferences that can cause buzzing. Such as televisions, radios, etc.

Verify dimmer switch compatibility.

Light Distribution Angle

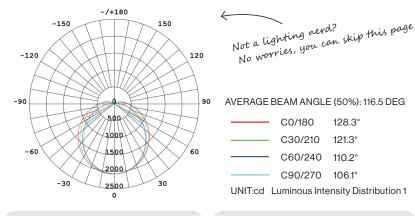

The lighting distribution angle determines how light spreads from a source and impacts its illumination. Two main types exist: symmetric and asymmetric.

Symmetric Lighting: This emits light evenly in all directions, forming a cone-shaped pattern. Great for general lighting in large areas, it's used for tasks like area illumination, security, and perimeter lighting. Also applied in up-lighting.

Asymmetric Lighting (Beam Angle): This directs light in a specific direction, reducin glare and spill. Ideal for task lighting, it's common in settings like landscapes, retail stores, and museums.

Note: Reflectors, lenses, and source to surface distance can affect the lighting distribution angle.

Customer Support

Warranty Policy

This product is covered by our industry leading 7 year warranty.

It gets even better - scan the QR code for 2 extra years of protection!



Scan me for two extra years!

30 Day Return Policy

At Sunco we value our customers and stand by the quality and performance of our products.

If you are not completely satisfied with your purchase, we accept returns within 30 days of your purchase date.

Customer Service

Our team of lighting experts is here to assist you with all your needs! Contact us at:

Email: support@sunco.com Call or Text: (844) 334-9938

Sunco Lighting made better.