



# SUNCO'S 50W WALL PACK

## Install Guide and Manual

### COMPONENTS


- 3 Screws
- 3 Wire Nuts
- 1 Level
- 1 Rubber Seal

### EASY INSTALLATION




Turn Power OFF


**1. Disconnect power at fuse or circuit breaker before installing or servicing**  
 ·If you are replacing an existing HID/HPS fixture, allow fixture to cool before removing from the wall

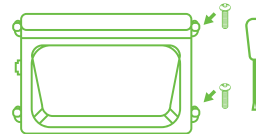


**2. Open cover by unscrewing the two screws that are located on the side of the wall pack, then lift off pinned hinges**  
 ·Detach the internal wiring

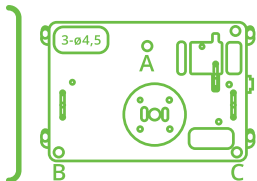

**3. Affix the base plate to the wall by drilling holes at the required 3 mounting points (A, B, C) and securing with mounting screws**  
 ·Align using internal level  
 ·Seal screws with waterproofing material (not included in the box)

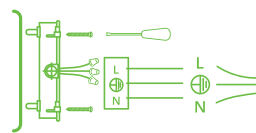

**4. Pull in power supply wiring then connect the internal wires to power supply using wire nuts**  
 ·Live to Live (black)  
 ·Neutral to Neutral (white)  
 ·Ground to Ground (yellow/green)

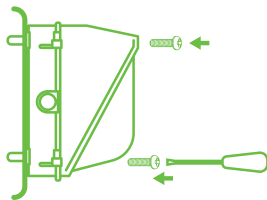

**5. Close the fixture by connecting the left side of the cover to the hinges on the base plate then screw the front cover to the back plate with the door screws**  
 ·Insure no wiring is pinched



Turn Power ON

**6. Turn ON to verify successful installation**

### WARNING

The fixture must be wired in accordance with the National Electric Code and applicable local codes and ordinances.

Rewiring fixtures for use with LED should only be performed by individuals who have been properly trained to perform basic electrical maintenance and repair.

Proper grounding is required to ensure safety (connect green fixture lead to supply ground).

Please review instructions carefully before proceeding.

### SPECIFICATION

Voltage	120/277V
Wattage	50W
Current	0.5/0.18A
Power Factor	0.97
Lumens	4750
Color Temperature	5000k
Color Rendering Index (CRI)	80
Beam Angle	110°

Still having trouble? Contact us!