

WARRANTY STATEMENT

WEN Products is committed to building tools that are dependable for years. Our warranties are consistent with this commitment and our dedication to quality.

LIMITED WARRANTY OF WEN PRODUCTS FOR HOME USE

GREAT LAKES TECHNOLOGIES, LLC ("Seller") warrants to the original purchaser only, that all WEN consumer power tools will be free from defects in material or workmanship during personal use for a period of two (2) years from date of purchase or 500 hours of use; whichever comes first. Ninety days for all WEN products if the tool is used for professional or commercial use. Purchaser has 30 days from the date of purchase to report missing or damaged parts.

SELLER'S SOLE OBLIGATION AND YOUR EXCLUSIVE REMEDY under this Limited Warranty and, to the extent permitted by law, any warranty or condition implied by law, shall be the replacement of parts, without charge, which are defective in material or workmanship and which have not been subjected to misuse, alteration, careless handling, misrepair, abuse, neglect, normal wear and tear, improper maintenance, or other conditions adversely affecting the Product or the component of the Product, whether by accident or intentionally, by persons other than Seller. To make a claim under this Limited Warranty, you must make sure to keep a copy of your proof of purchase that clearly defines the Date of Purchase (month and year) and the Place of Purchase. Place of Purchase must be a direct vendor of Great Lakes Technologies, LLC. Purchasing through third party vendors, including but not limited to garage sales, pawn shops, resale shops, or any other secondhand merchant, voids the warranty included with this product. Contact techsupport@wenproducts.com or 1-847-429-9263 with the following information to make arrangements: your shipping address, phone number, serial number, required part numbers, and proof of purchase. Damaged or defective parts and products may need to be sent to WEN before the replacements can be shipped out.

Upon the confirmation of a WEN representative, your product may qualify for repairs and service work. When returning a product for warranty service, the shipping charges must be prepaid by the purchaser. The product must be shipped in its original container (or an equivalent), properly packed to withstand the hazards of shipment. The product must be fully insured with a copy of the proof of purchase enclosed. There must also be a description of the problem in order to help our repairs department diagnose and fix the issue. Repairs will be made and the product will be returned and shipped back to the purchaser at no charge for addresses within the contiguous United States.

THIS LIMITED WARRANTY DOES NOT APPLY TO ITEMS THAT WEAR OUT FROM REGULAR USAGE OVER TIME, INCLUDING BELTS, BRUSHES, BLADES, BATTERIES, ETC. ANY IMPLIED WARRANTIES SHALL BE LIMITED IN DURATION TO TWO (2) YEARS FROM DATE OF PURCHASE. SOME STATES IN THE U.S. AND SOME CANADIAN PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO LIABILITY FOR LOSS OF PROFITS) ARISING FROM THE SALE OR USE OF THIS PRODUCT. SOME STATES IN THE U.S. AND SOME CANADIAN PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE IN THE U.S., PROVINCE TO PROVINCE IN CANADA AND FROM COUNTRY TO COUNTRY.

THIS LIMITED WARRANTY APPLIES ONLY TO ITEMS SOLD WITHIN THE UNITED STATES OF AMERICA, CANADA AND THE COMMONWEALTH OF PUERTO RICO. FOR WARRANTY COVERAGE WITHIN OTHER COUNTRIES, CONTACT THE WEN CUSTOMER SUPPORT LINE. FOR WARRANTY PARTS OR PRODUCTS REPAIRED UNDER WARRANTY SHIPPING TO ADDRESSES OUTSIDE OF THE CONTIGUOUS UNITED STATES, ADDITIONAL SHIPPING CHARGES MAY APPLY.

V. 2023.02.23

INSTRUCTION MANUAL




MODEL 10725

DIGITAL MICROMETER

SPECIFICATIONS

Measuring Range	0 to 1 in. / 0 to 25 mm
Resolution	0.00005 in. / 0.001 mm
Measuring Force	5 to 10 N
Power	CR2032 Lithium Battery
Power Consumption	< 20 μ A
Operating Temperature	32 to 104°F / 0 to 40°C
Storage Temperature	-4 to 76°F / -20 to 60°C

KNOW YOUR MICROMETER

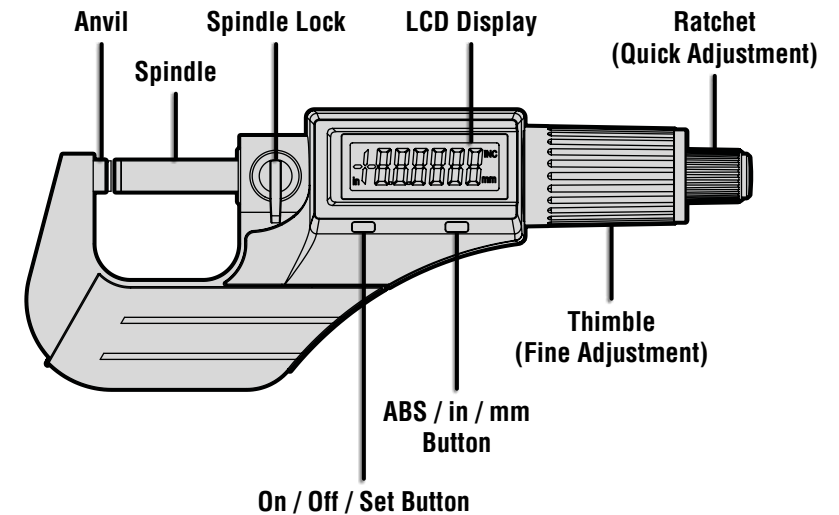

INSTALLING THE BATTERY

One CR2032 Lithium battery is included with your instrument. Turn the battery cover counterclockwise to open. Insert the battery with the positive (+) side facing upward. Turn the battery cover clockwise to close.

CLEANING THE MEASURING SURFACES

Wipe clean the anvil and spindle faces with ethyl alcohol prior to use to remove any oil, grease, or debris.

INSTRUCTION MANUAL

GENERAL SAFETY WARNINGS

TOOL USE AND CARE

1. Avoid exposure to any liquids or excessive humidity.
2. Avoid exposure to electromagnetic fields or high voltages.
3. Avoid exposure to direct sunlight.
4. Use and store the instrument within the recommended temperature ranges.
5. Do not drop or apply excessive force to the instrument.
6. Do not attempt to disassemble the instrument.
7. Do not press the keys with a pointed object.
8. Use a dry soft cloth or cotton swab to clean the instrument. Ethyl alcohol can be used.
9. Do not use solvents (such as acetone or benzene) to clean the instrument.

CALIFORNIA PROP 65 WARNING

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities may contain chemicals, including lead, known to the State of California to cause cancer, birth defects, or other reproductive harm. Wash hands after handling. **Some examples of these chemicals are:**

- Lead from lead-based paints.
- Crystalline silica from bricks, cement, and other masonry products.
- Arsenic and chromium from chemically treated lumber.

Your risk from these exposures varies depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area with approved safety equipment such as dust masks specially designed to filter out microscopic particles.

OPERATION

ON / OFF / SET BUTTON


- **Press and Release** - Turns the tool ON / OFF
- **Press and Hold (4 Seconds)** - Resets reading to ZERO

ABS / IN / MM BUTTON

- **Press and Release** - Switches between absolute measuring mode and relative measuring mode ("INC")
- **Press and Hold (4 Seconds)** - mm / in conversion

LCD DISPLAY

"INC"	Relative Measuring Mode
"in"	Inch
"mm"	Millimeter

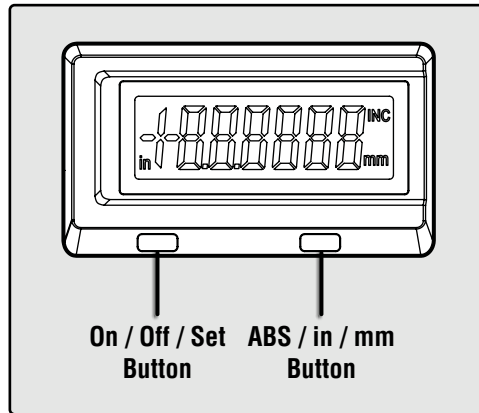

NOTE: When taking measurements, do not touch the measuring faces of the micrometer. The small amount of oil on your hands can affect the accuracy of your reading.

INSTRUCTION MANUAL

OPERATION

SPINDLE LOCK

Turn the spindle lock clockwise to lock the instrument. Do not rotate the thimble or ratchet when the lock is engaged. Turn the spindle lock counterclockwise to unlock the instrument.

RATCHET & THIMBLE

Rotate the ratchet to make quick adjustments the spindle; rotate the thimble to make fine adjustments to the spindle. When you hear a clicking sound during the rotation of the thimble, that means the spindle and anvil have exerted adequate pressure on the subject and an accurate reading can be taken.

NOTE: The instrument will automatically turn OFF if it is not used for five minutes to preserve battery power. Remove the battery if the instrument is not being used for an extended period of time.

BATTERY WARNINGS

WARNING! Follow the safety instructions below for handling and maintaining batteries.

- Do not short circuit batteries.
- Do not keep batteries near fire, sources of heat, or use in direct sunlight.
- Remove batteries from tool when not being used to an extended period of time.
- Never handle leaked batteries. Do not dismantle batteries.
- Recycle used tool and batteries at your local recycling facility.
- Remove the battery if the instrument is not being used for an extended period of time.

CLEANING

After each use, wipe clean the instrument clean with a soft cloth. DO NOT use any type of solvent. DO NOT immerse the instrument in liquid. Water damage may cause the display to fail. If this happens, wipe off the liquid and reset the instrument by removing the battery for 30 seconds. Then reinstall the battery and turn the tool ON.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	SOLUTION
Incorrect measurement	1. Measuring surfaces are dirty 2. Preset data is incorrect	1. Clean the measuring surfaces 2. Reset instrument reading to ZERO
No display on LCD	1. Battery power is low 2. Battery is not properly installed	1. Replace with new CR2032 battery 2. Reinstall the battery, ensuring the (+) side is facing up
Display is dim or flashing	1. Battery power is low	1. Replace with new CR2032 battery

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:



1-847-429-9263 (M-F 8AM-5PM CST)



TECHSUPPORT@WENPRODUCTS.COM