

WARRANTY STATEMENT

WEN Products is committed to building tools that are dependable for years. Our warranties are consistent with this commitment and our dedication to quality.

LIMITED WARRANTY OF WEN PRODUCTS FOR HOME USE

GREAT LAKES TECHNOLOGIES, LLC ("Seller") warrants to the original purchaser only, that all WEN consumer power tools will be free from defects in material or workmanship during personal use for a period of two (2) years from date of purchase or 500 hours of use; whichever comes first. Ninety days for all WEN products if the tool is used for professional or commercial use. Purchaser has 30 days from the date of purchase to report missing or damaged parts.

SELLER'S SOLE OBLIGATION AND YOUR EXCLUSIVE REMEDY under this Limited Warranty and, to the extent permitted by law, any warranty or condition implied by law, shall be the replacement of parts, without charge, which are defective in material or workmanship and which have not been subjected to misuse, alteration, careless handling, misrepair, abuse, neglect, normal wear and tear, improper maintenance, or other conditions adversely affecting the Product or the component of the Product, whether by accident or intentionally, by persons other than Seller. To make a claim under this Limited Warranty, you must make sure to keep a copy of your proof of purchase that clearly defines the Date of Purchase (month and year) and the Place of Purchase. Place of Purchase must be a direct vendor of Great Lakes Technologies, LLC. Purchasing through third party vendors, including but not limited to garage sales, pawn shops, resale shops, or any other secondhand merchant, voids the warranty included with this product. Contact techsupport@wenproducts.com or 1-800-232-1195 with the following information to make arrangements: your shipping address, phone number, serial number, required part numbers, and proof of purchase. Damaged or defective parts and products may need to be sent to WEN before the replacements can be shipped out.

Upon the confirmation of a WEN representative, your product may qualify for repairs and service work. When returning a product for warranty service, the shipping charges must be prepaid by the purchaser. The product must be shipped in its original container (or an equivalent), properly packed to withstand the hazards of shipment. The product must be fully insured with a copy of the proof of purchase enclosed. There must also be a description of the problem in order to help our repairs department diagnose and fix the issue. Repairs will be made and the product will be returned and shipped back to the purchaser at no charge for addresses within the contiguous United States.

THIS LIMITED WARRANTY DOES NOT APPLY TO ITEMS THAT WEAR OUT FROM REGULAR USAGE OVER TIME, INCLUDING BELTS, BRUSHES, BLADES, BATTERIES, ETC. ANY IMPLIED WARRANTIES SHALL BE LIMITED IN DURATION TO TWO (2) YEARS FROM DATE OF PURCHASE. SOME STATES IN THE U.S. AND SOME CANADIAN PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO LIABILITY FOR LOSS OF PROFITS) ARISING FROM THE SALE OR USE OF THIS PRODUCT. SOME STATES IN THE U.S. AND SOME CANADIAN PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE IN THE U.S., PROVINCE TO PROVINCE IN CANADA AND FROM COUNTRY TO COUNTRY.

THIS LIMITED WARRANTY APPLIES ONLY TO ITEMS SOLD WITHIN THE UNITED STATES OF AMERICA, CANADA AND THE COMMONWEALTH OF PUERTO RICO. FOR WARRANTY COVERAGE WITHIN OTHER COUNTRIES, CONTACT THE WEN CUSTOMER SUPPORT LINE. FOR WARRANTY PARTS OR PRODUCTS REPAIRED UNDER WARRANTY SHIPPING TO ADDRESSES OUTSIDE OF THE CONTIGUOUS UNITED STATES, ADDITIONAL SHIPPING CHARGES MAY APPLY.

INSTRUCTION MANUAL



MODEL GA8080

COLLAPSIBLE WAGON

SPECIFICATIONS

Model	GA8080
Maximum Dynamic Weight Capacity	175 Pounds (80 kg)
Inside Dimensions	30 in. x 18 in. x 10 in.
Inside Capacity	23.38 Gallons (88.5 L)
Fabric	600D PVC
Handle Length	21.6 in. - 31.5 in. (55 cm - 80 cm)
Wheels	4 in. x 7 in., Polyurethane
Dimensions (Folded)	8 in. x 20 in. x 30.25 in.
Dimensions (Unfolded)	35.75 in. x 20 in. x 30.25 in.
Weight	22.5 Pounds



INSTRUCTION MANUAL

SAFETY

⚠ WARNING: When using this product, basic safety precautions should always be followed to reduce the risk of personal injury and/or damage to equipment.

- Keep work area clean and well lit. Cluttered and dimly lit areas invite injuries.
- When not in use, the wagon must be stored in a safe and clean location. Always secure products and keep out of reach of children.
- Check for damaged parts. Before using any product, any part that appears damaged should be carefully checked to determine that it will operate properly and perform its intended function.
- Replace or repair damaged or worn parts immediately.
- When servicing, use only identical replacement parts. The use of any other parts will void the warranty.
- Do not exceed the product's maximum load capacity of 175 lbs total, evenly distributed. Uneven weight distribution could cause tipping. Do not lean or climb on the wagon. Be aware of dynamic loading. Sudden load movement may briefly create excess load causing product failure.
- Only use on a surface capable of supporting the wagon and its maximum capacity load of 175 lbs. It is easy to lose control of the wagon if attempting to pull a load on a sloping or uneven surface.
- Do not allow children to play on, stand upon or climb on the wagon. The wagon is not for carrying people or animals.
- Always check the wagon before using. All hardware should be tightened.
- Be careful not to pinch yourself or others when folding or unfolding the wagon.

⚠ WARNING: The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that might occur. Always use common sense and caution when using the wagon.

OPERATION

Your wagon comes pre-assembled and ready to use.

INSTALLING / REMOVING THE COVER

Your wagon comes with a protective cover. Keep the cover on the wagon during storage, or when transporting the folded wagon.

- To remove the cover, release the buckles attached to the straps at the bottom of the cover. Lift the cover off the wagon.

To install the cover:

- Fold the wagon. Collapse the handle to its shortest length and lock the handle. Snap the handle into the handle bracket.
- Place the cover over the folded wagon. Pass the buckle straps through the support frame and secure the buckles to the cover.

NOTE: Always clean your wagon before storing it. Make sure that all dirt, debris, sand, beer cans, starfish, etc. are removed, and that the wagon is dry, before putting the cover on.

INSTRUCTION MANUAL

FOLDING / UNFOLDING THE WAGON

Your wagon can be folded for easy storage, then unfolded as needed.

- To unfold the wagon, release the hook-and-loop handle strap. Push the ends of the wagon outward, then push down in the center. The wagon is now ready for use.
- To fold the wagon, pull up on the pull tab in the center of the wagon's main compartment. Secure the handle straps with the hook-and-loop fabric to keep the wagon folded securely. Collapse the handle to its shortest length and lock the handle. Snap the handle into the handle bracket.

USING THE HANDLE

Your wagon comes with a handle that can be extended as needed.

To use the handle:

- Pull the handle out from its bracket.
- To extend the handle, move the handle latch to the left. Adjust the handle to the desired length, then move the handle latch to the right to lock the handle.
- To collapse the handle, follow the steps above in reverse.
- When folding the wagon, collapse the handle to its shortest length, lock it, and snap it into the handle bracket.

MAINTENANCE

Your wagon will give you years of service if properly maintained. Follow the tips below to get the most out of your wagon.

- If you need to clean the wagon, use a mild soap and water solution. Let it air dry.
- Clean the wagon before storage. Make sure it is dry before putting it away.
- Keep the wagon folded and covered when not in use.
- Make sure the wagon folds smoothly and rolls easily before use.

We advise keeping this instruction manual, saving the receipt by attaching it to the instruction manual, and recording the purchase date in this space: _____ in case you need to exercise the 2-year warranty.

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:



1-800-232-1195 (M-F 8AM-5PM CST)



TECHSUPPORT@WENPRODUCTS.COM

IMPORTANT: Your new tool has been engineered and manufactured to WEN's highest standards for dependability, ease of operation, and operator safety. When properly cared for, this product will supply you years of rugged, trouble-free performance. Pay close attention to the rules for safe operation, warnings, and cautions. If you use your tool properly and for its intended purpose, you will enjoy years of safe, reliable service.

For replacement parts and the most up-to-date instruction manuals, visit WENPRODUCTS.COM