


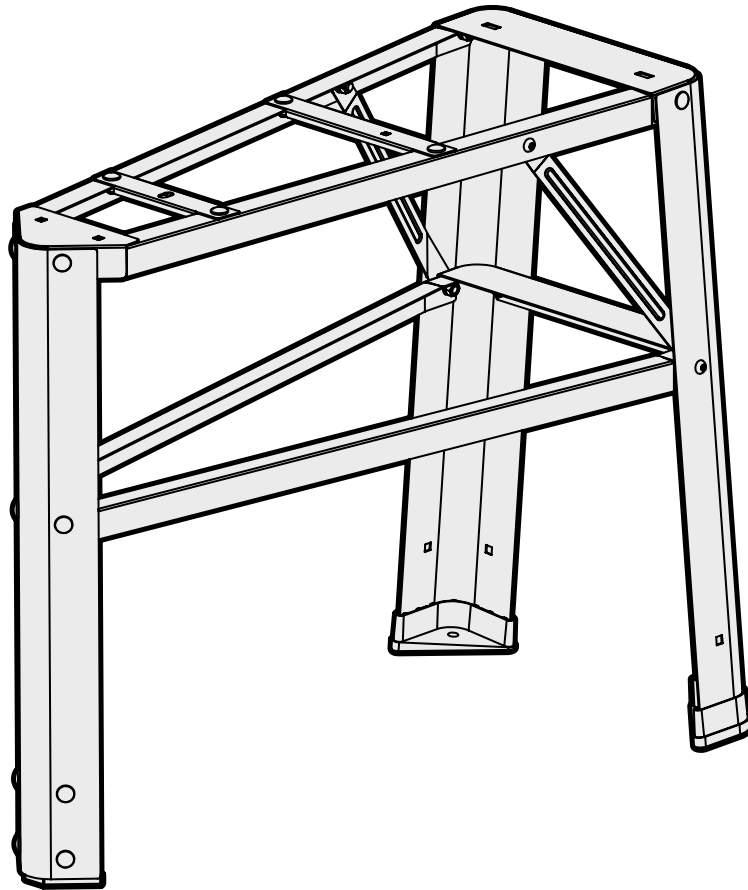

MODEL MSA1621

SCROLL SAW STAND

Instruction Manual



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

 **1-847-429-9263 (M-F 8AM-5PM CST)** |  **TECHSUPPORT@WENPRODUCTS.COM**

IMPORTANT: Your new tool has been engineered and manufactured to WEN's highest standards for dependability, ease of operation, and operator safety. When properly cared for, this product will supply you years of rugged, trouble-free performance. Pay close attention to the rules for safe operation, warnings, and cautions. If you use your tool properly and for its intended purpose, you will enjoy years of safe, reliable service.

For replacement parts and the most up-to-date instruction manuals, visit ***WENPRODUCTS.COM***

CONTENTS


WELCOME	3
Introduction	3
Specifications.....	3
SAFETY	4
General Safety Rules	4
BEFORE OPERATING	6
Unpacking & Packing List	6
Assembly & Adjustment.....	7
OPERATION & MAINTENANCE	11
Exploded View & Parts List.....	11
Warranty Statement	12

To purchase replacement sandpaper for your tool, visit ***WENPRODUCTS.COM***

Momentary Power Foot Pedal Switch for Woodworking (Model WA0392)
16-inch Two-Direction Variable Speed Scroll Saw (Model 3921)
16-inch Variable Speed Scroll Saw with Easy-Access Blade Changes (Model 3922)
16-Inch Variable Speed Scroll Saw with Easy-Access Blade Changes and Work Light (Model 3923)
21-Inch Variable Speed Parallel Arm Scroll Saw (Model LL2156)

INTRODUCTION

Thanks for purchasing the WEN Scroll Saw Stand. We know you are excited to put your tool to work, but first, please take a moment to read through the manual. Safe operation of this tool requires that you read and understand this operator's manual and all the labels affixed to the tool. This manual provides information regarding potential safety concerns, as well as helpful assembly and operating instructions for your tool.

 **SAFETY ALERT SYMBOL:** Indicates danger, warning, or caution. The safety symbols and the explanations with them deserve your careful attention and understanding. Always follow the safety precautions to reduce the risk of fire, electric shock or personal injury. However, please note that these instructions and warnings are not substitutes for proper accident prevention measures.

NOTE: The following safety information is not meant to cover all possible conditions and situations that may occur. WEN reserves the right to change this product and specifications at any time without prior notice.

At WEN, we are continuously improving our products. If you find that your tool does not exactly match this manual, please visit wenproducts.com for the most up-to-date manual or contact our customer service at **1-847-429-9263**.

Keep this manual available to all users during the entire life of the tool and review it frequently to maximize safety for both yourself and others.

SPECIFICATIONS

Model Number	MSA1621
Saw Compatibility	All WEN Scroll Saws, DeWalt ® DW788
Product Dimensions	33 in. x 12 in. x 27 in.

GENERAL SAFETY RULES

 **WARNING!** Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Safety is a combination of common sense, staying alert and knowing how your item works. The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

SAVE THESE SAFETY INSTRUCTIONS.

WORK AREA SAFETY

- 1. Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- 2. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- 3. Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

ELECTRICAL SAFETY

- 1. Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- 2. Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- 3. Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- 4. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- 5. When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.

6. If operating a power tool in a damp location is unavoidable, use a ground fault circuit interrupter (GFCI) protected supply. Use of a GFCI reduces the risk of electric shock.

PERSONAL SAFETY

- 1. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- 2. Use personal protective equipment. Always wear eye protection.** Protective equipment such as a respiratory mask, non-skid safety shoes and hearing protection used for appropriate conditions will reduce the risk of personal injury.
- 3. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- 4. Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- 5. Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- 6. Dress properly. Do not wear loose clothing or jewelry. Keep your hair and clothing away from moving parts.** Loose clothes, jewelry or long hair can be caught in moving parts.

GENERAL SAFETY RULES

 **WARNING!** Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Safety is a combination of common sense, staying alert and knowing how your item works. The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

SAVE THESE SAFETY INSTRUCTIONS.

7. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

POWER TOOL USE AND CARE

1. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

2. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

3. Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

4. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

5. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

6. Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

7. Use the power tool, accessories and tool bits, etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

8. Use clamps to secure your workpiece to a stable surface. Holding a workpiece by hand or using your body to support it may lead to loss of control.

9. KEEP GUARDS IN PLACE and in working order.

SERVICE

1. Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

CALIFORNIA PROPOSITION 65 WARNING

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities may contain chemicals, including lead, known to the State of California to cause cancer, birth defects, or other reproductive harm. Wash hands after handling. Some examples of these chemicals are:

- Lead from lead-based paints.
- Crystalline silica from bricks, cement, and other masonry products.
- Arsenic and chromium from chemically treated lumber.







 



 


 


Your risk from these exposures varies depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area with approved safety equipment such as dust masks specially designed to filter out microscopic particles.

UNPACKING & PACKING LIST

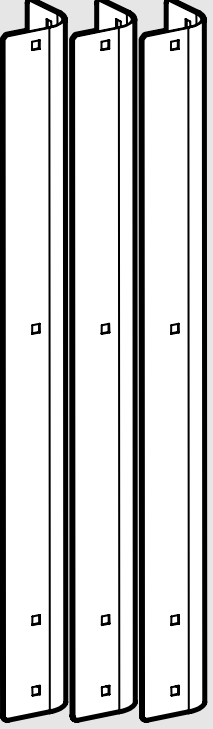





UNPACKING

With the help of a friend or trustworthy foe, such as one of your in-laws, carefully remove the scroll saw stand from the packaging and place it on a sturdy, flat surface. Make sure to take out all contents and accessories. Do not discard the packaging until everything is removed. Check the packing list below to make sure you have all of the parts and accessories. If any part is missing or broken, please contact customer service at **1-847-429-9263** (M-F 8-5 CST), or email techsupport@wenproducts.com.

 Components

			
Adjustable Leg Foot (1)	Right Diagonal Bracket (1)	Back Plate (1)	Front Plate (1)
			
Right Leg Foot (1)	Left Diagonal Bracket (1)	Adjustable Leg Rail (1)	
			
Left Leg Foot (1)	Bottom Plate (1)	Top Left Crossbar (1)	
			
Long Top Bracket (1)	Bottom Left Crossbar (1)	Top Right Crossbar (1)	
			
Short Top Bracket (1)	Bottom Right Crossbar (1)		Legs (3)

Hardware & Tools

					
M8x16 Socket Head Screw (4)	M8 Hex Nuts (22)	5mm Hex Wrench (1)	8mm Lock Washers (22)	8mm Flat Washers (22)	M8x16 Carriage Bolts (18)

Mounting Hardware for 3921, 3922, & 3923

- M6x35 Carriage Bolts (3)
- 6mm Washers (3)
- 6mm Lock Washers (3)
- M6 Nuts (3)

Mounting Hardware for LL2156

- M8x50 Carriage Bolts (4)
- 8mm Washers (4)
- 8mm Lock Washers (4)
- M8 Nuts (4)

ASSEMBLY & ADJUSTMENTS

ASSEMBLING THE STAND

NOTE: Do not fully tighten the fasteners until all stand pieces have been assembled. Once all stand pieces are assembled, fully tighten the fasteners.



1. Secure the long top bracket (Fig. 1 - 1) and the short top bracket (Fig. 1 - 2) to the top left crossbar (Fig. 1 - 3) and the top right crossbar (Fig. 1 - 4) using four M8x16 carriage bolts (Fig. 1 - 5), four washers (Fig. 1 - 6), four lock washers (Fig. 1 - 7), and four M8 hex nuts (Fig. 1 - 8).

NOTE: Make sure that the long top bracket and the short top bracket are installed on top of the crossbars as shown in Fig. 1.

2. Flip the brackets upside-down, then secure the left diagonal bracket (Fig. 2 - 1) to the top left crossbar using one M8x16 socket head screw (Fig. 2 - 2), one washer, one lock washer, and one M8 hex nut.

3. Secure the right diagonal bracket (Fig. 2 - 3) to the top right crossbar using one M8x16 socket head screw, one washer, one lock washer, and one M8 hex nut.

NOTE: Make sure that the diagonal brackets are installed on the inside of the crossbars. The outdent on the diagonal brackets should be facing outward.

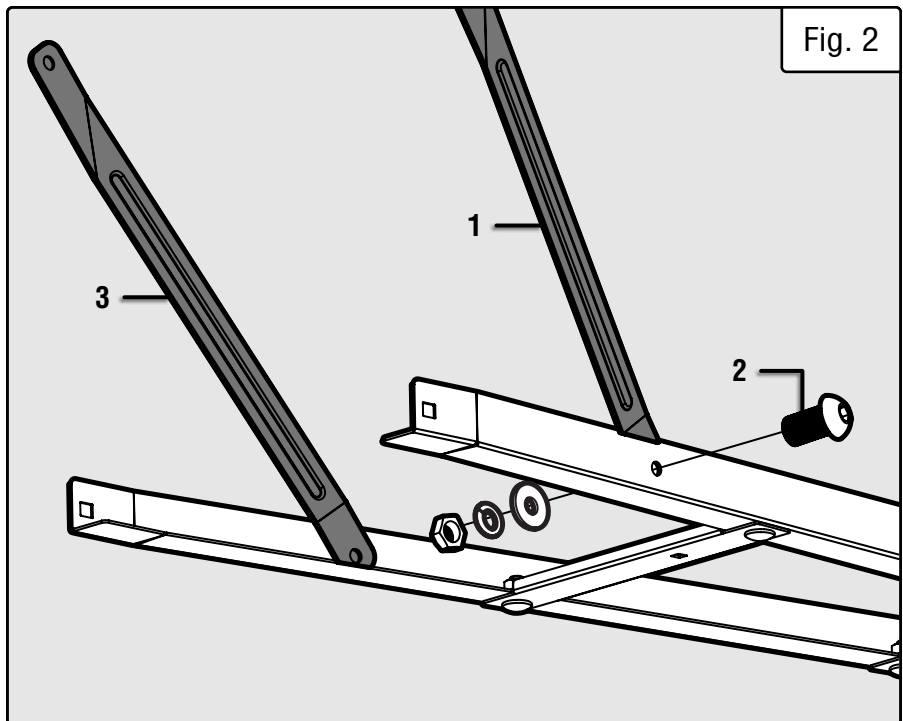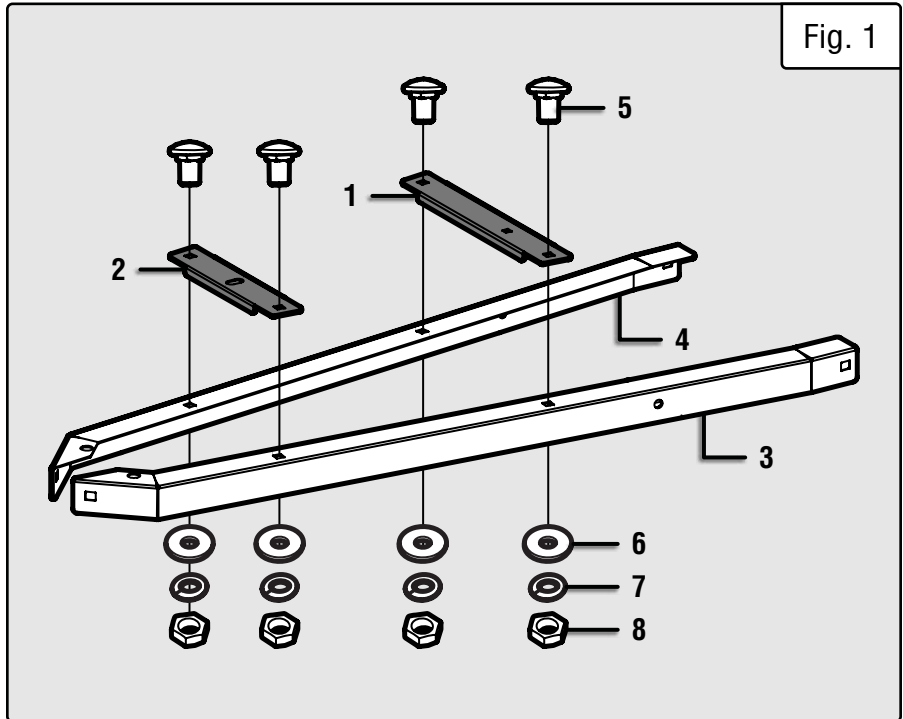

ASSEMBLY & ADJUSTMENTS

ASSEMBLING THE STAND (CONT.)

4. Fit the front plate (Fig. 3 - 1) over the right and left crossbars as shown in Fig. 3. Make sure the holes align.

5. Take two of the legs (Fig. 3 - 2) and align the holes at the top with the four holes in the front plate as shown in Fig. 3.



NOTE: The front plate should now be sandwiched between the legs and the crossbars, and all of the holes should align.

6. Secure the top right and left crossbars, the front plate, and the two legs together using four M8x16 carriage bolts, four washers, four lock washers, and four M8 hex nuts as shown in Fig. 3.

7. Align the holes in the left leg (Fig. 4 - 1), left diagonal bracket (Fig. 4 - 2), bottom plate (Fig. 4 - 3), and bottom left crossbar (Fig. 4 - 4) as shown in Fig. 4. Secure them together using one M8x16 socket head screw, one washer, one lock washer, and one M8 hex nut. Repeat on the right side.

NOTE: Be sure that the legs, diagonal brackets, bottom plate, and the bottom crossbars have been assembled in the correct order as listed above.

8. Secure the bottom plate to the legs through the other two holes (Fig. 4 - 5) using two M8x16 carriage bolts, two washers, two lock washers, and two M8 hex nuts as shown in Fig. 4.

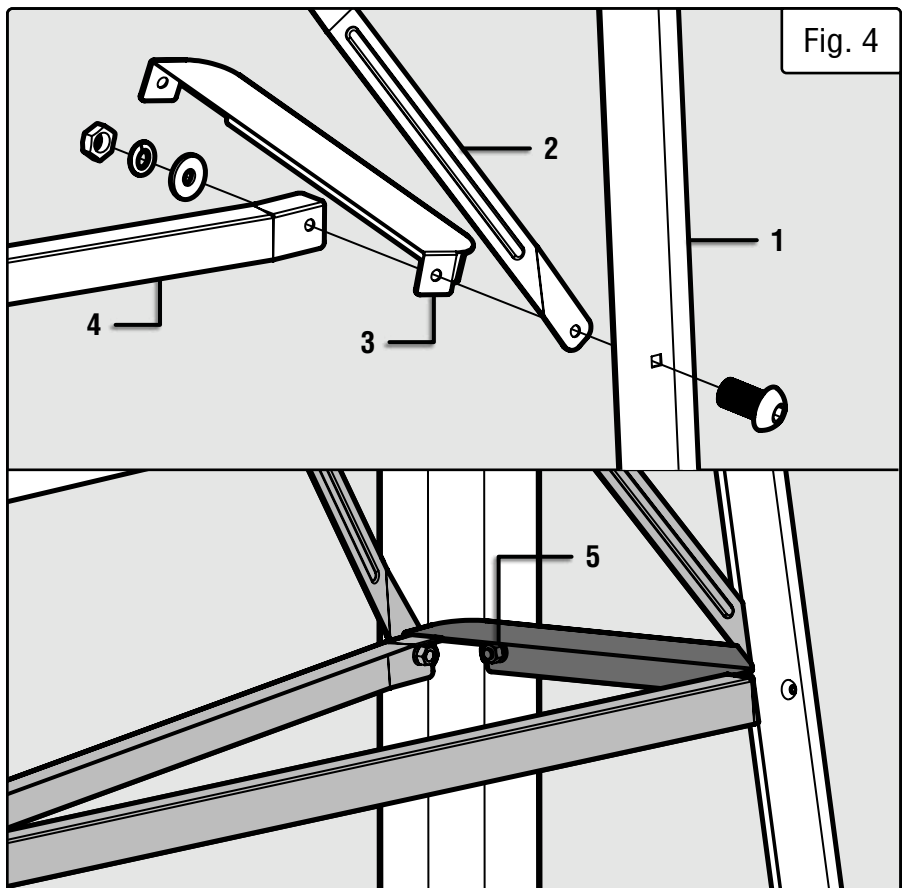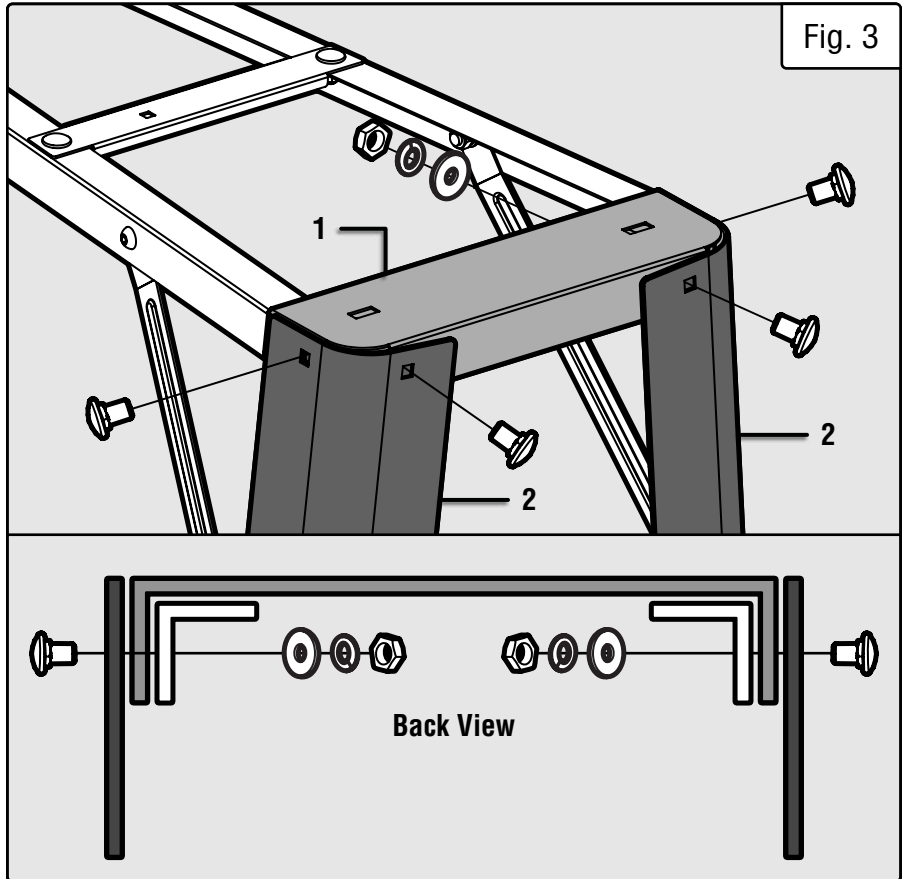

ASSEMBLY & ADJUSTMENTS

ASSEMBLING THE STAND (CONT.)

9. Fit the back plate (Fig. 5 - 1) over the right and left crossbars as shown in Fig. 5. Make sure the holes align.



10. Take the remaining leg (Fig. 5 - 2) and align the holes at the top with the two holes in the back plate as shown in Fig. 5.

NOTE: The back plate should now be sandwiched between the leg and the crossbars, and all of the holes should align.

11. Secure the top right and left crossbars, the back plate, and the leg together using two M8x16 carriage bolts, two washers, two lock washers, and two M8 hex nuts as shown in Fig. 5.

12. Align the holes in the leg with the holes in the bottom left and right crossbars. Secure them together using two M8x16 carriage bolts, two washers, two lock washers, and two M8 hex nuts as shown in Fig. 6.

NOTE: The crossbars should be installed on the inside of the leg.

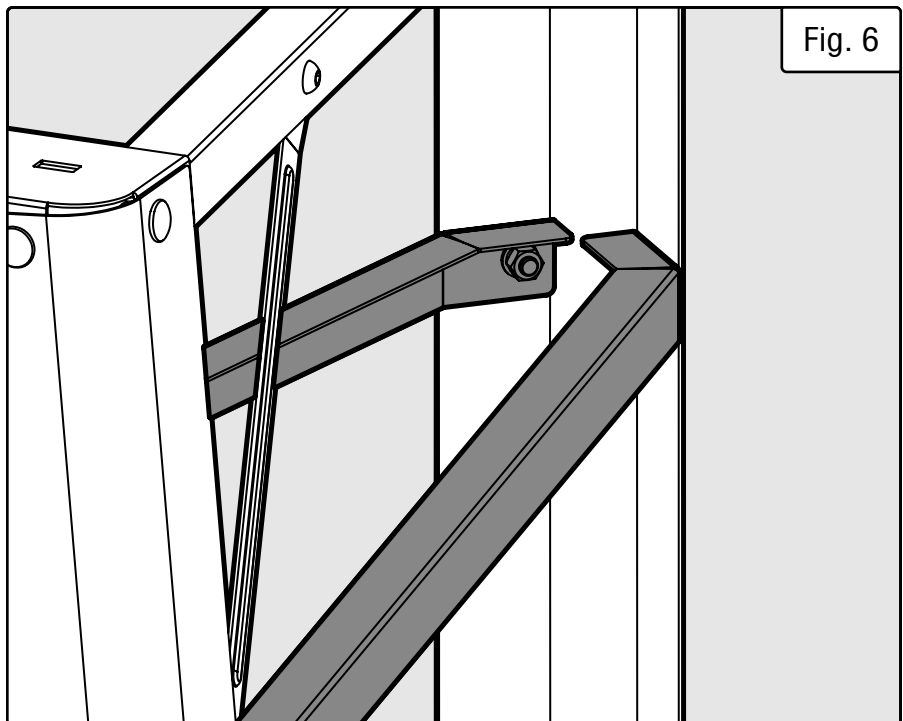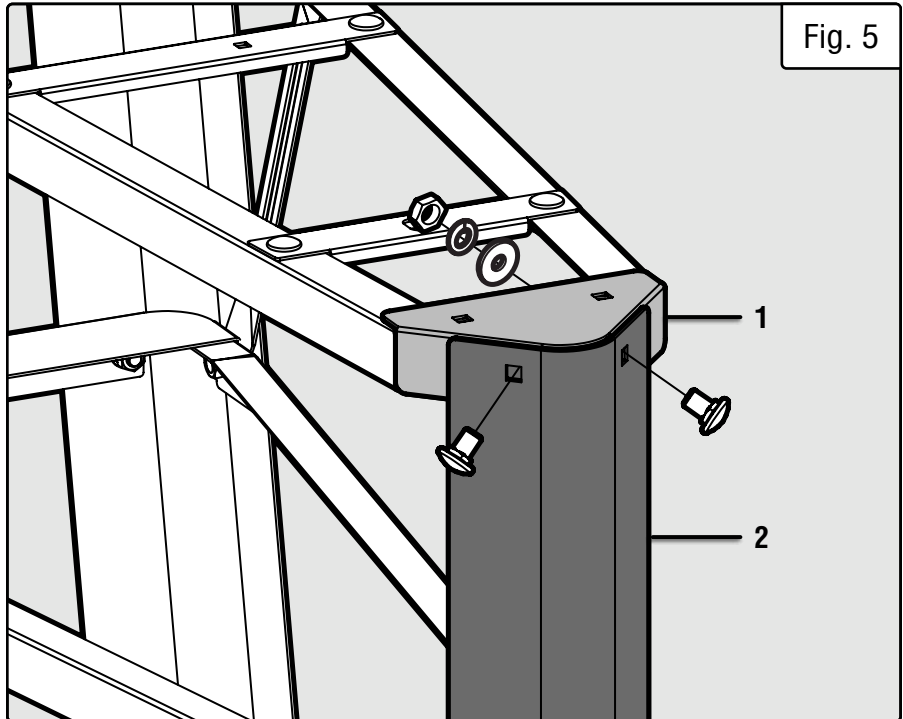

ASSEMBLY & ADJUSTMENTS

ASSEMBLING THE STAND (CONT.)

13. Attach the adjustable leg rail (Fig. 7 - 1) to the bottom holes on the back leg using four M8x16 carriage bolts, four washers, four lock washers, and four M8 hex nuts as shown in Fig. 7.

There are two height options for installing the adjustable leg:


To have the stand sit level: Secure the adjustable leg rail to the four holes labels A in Fig. 7.

To raise the back leg 3 in. and tilt the stand forward: Secure the adjustable leg rail to the four holes labeled B in Fig. 7.

NOTE: The adjustable leg rail must be secured to the back leg through four holes at all times.

14. Attach the two feet (Fig. 7 - 2) to the front legs and the adjustable leg foot (Fig. 7 - 3) to the adjustable leg rail.

15. Make sure that everything is securely fastened before mounting your tool to the stand.

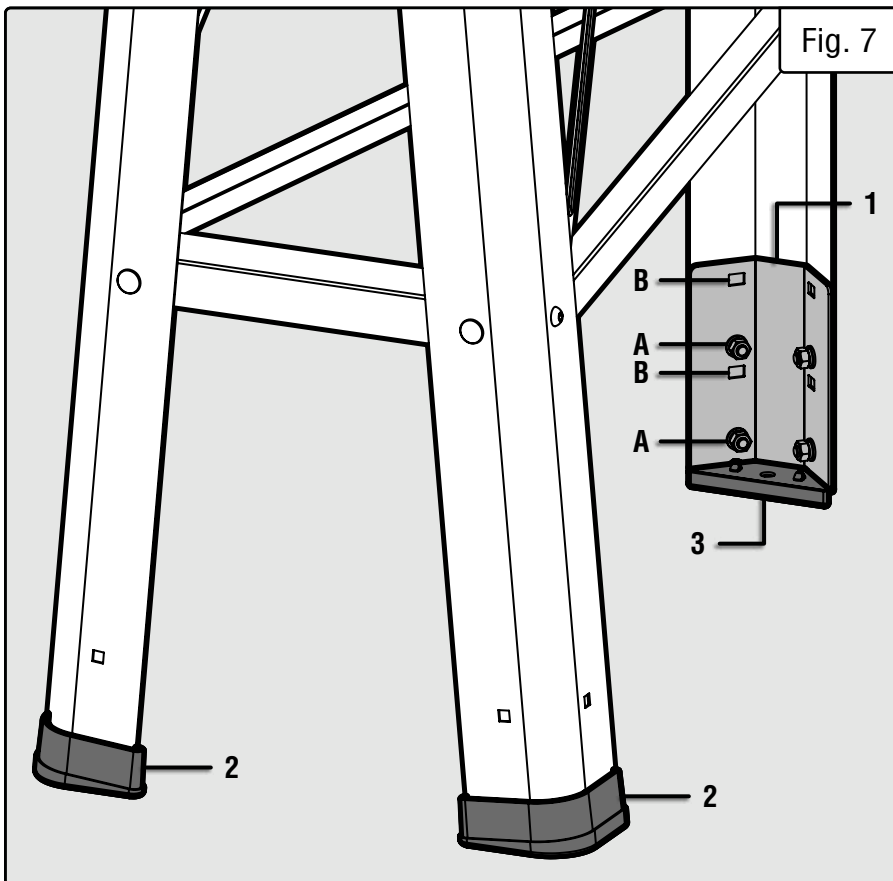

SECURING THE STAND


The stand's feet snap into place on the stand's legs. For extra security, bolt the stand's feet to the floor.

MOUNTING THE SAW


1. Carefully place your saw on top of the stand. Make sure that the weight is evenly distributed to avoid tipping the stand.

2. Use the M6x35 carriage bolts, washers, and nuts to mount the WEN 3920-series saws; use the M8x50 carriage bolts, washers, and nuts to mount the WEN LL2156 and DeWALT® DW788 saws. If you are using a different saw that is not listed, you may need to use different mounting hardware. See Fig. 8 for the different mounting configurations.

3. Tighten all fasteners. Make sure that the saw is securely mounted on the stand before beginning operation.

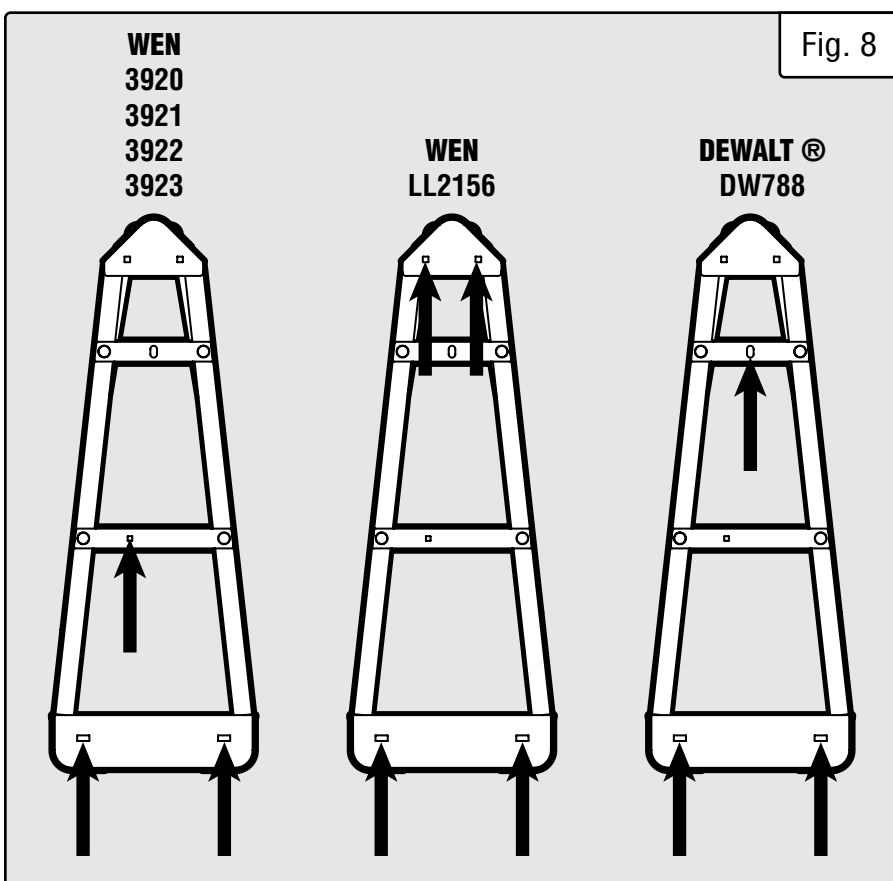

EXPLODED VIEW & PARTS LIST

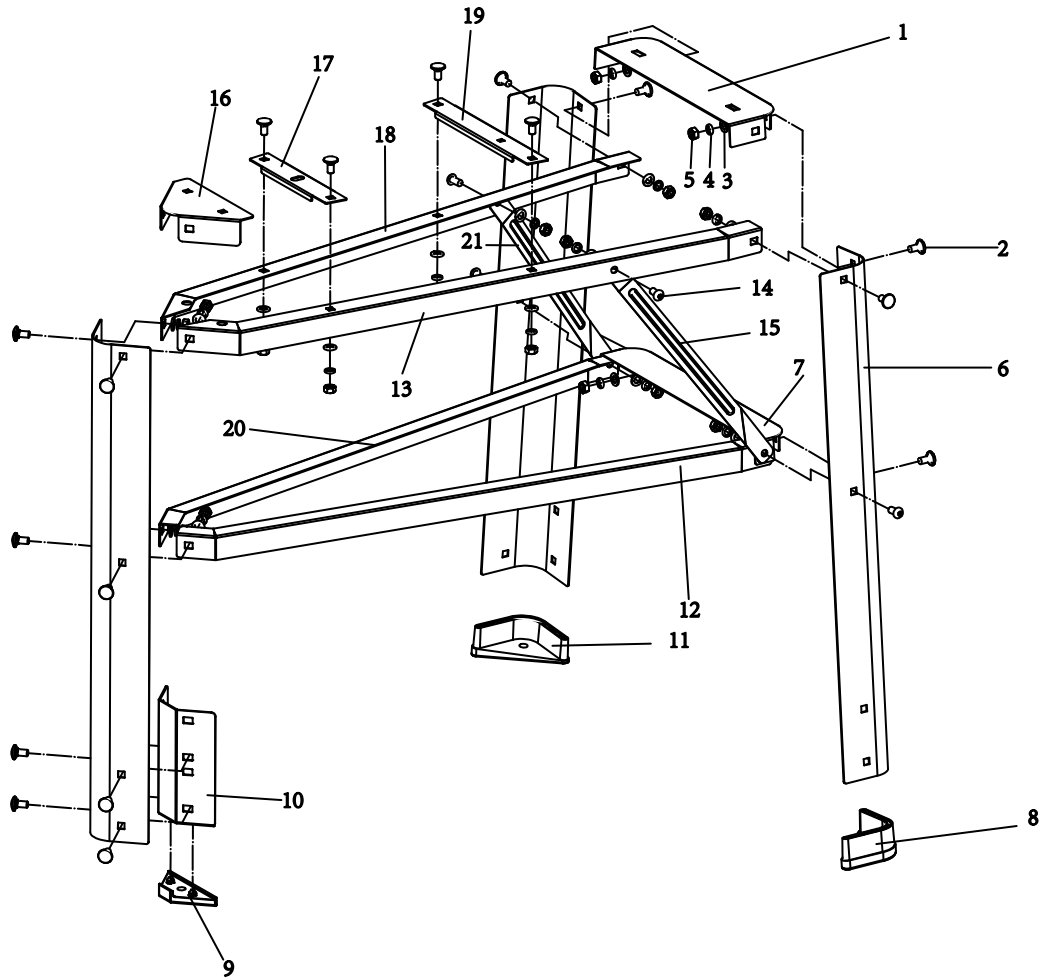

No.	Part No.	Description	Qty.
1	MSA1621-001	Top Plate	1
2	MSA1621-002	Carriage Bolt, M8x16	18
3	MSA1621-003	Flat Washer	22
4	MSA1621-004	Spring Washer	22
5	MSA1621-005	Hex Nut M8	22
6	MSA1621-006	Leg Rail	3
7	MSA1621-007	Bottom Plate	1
8	MSA1621-008	Left Leg Foot	1
9	MSA1621-009	Adjustable Leg Foot	1
10	MSA1621-010	Adjustable Leg	1
11	MSA1621-011	Right Leg Foot	1
12	MSA1621-012	Left Bottom Rail	1
13	MSA1621-013	Left Top Rail	1
14	MSA1621-014	Socket Head Screw, M8x16	4

No.	Part No.	Description	Qty.
15	MSA1621-015	Left Diagonal Bracket	1
16	MSA1621-016	Back Plate	1
17	MSA1621-017	Short Connection Plate	1
18	MSA1621-018	Right Top Rail	1
19	MSA1621-019	Long Connection Plate	1
20	MSA1621-020	Right Bottom Rail	1
21	MSA1621-021	Right Diagonal Bracket	1
N.P.	MSA1621-022	M6x35 Carriage Bolt	3
N.P.	MSA1621-023	6mm Washer	3
N.P.	MSA1621-024	6mm Lock Washer	3
N.P.	MSA1621-025	M6 Nut	3
N.P.	MSA1621-026	M8x50 Carriage Bolt	4
N.P.	MSA1621-027	8mm Washer	4
N.P.	MSA1621-028	8mm Lock Washer	4
N.P.	MSA1621-029	M8 Nut	4

NOTE: Not all parts may be available for purchase. Parts and accessories that wear down over the course of normal use are not covered under the warranty.

WARRANTY STATEMENT

WEN Products is committed to building tools that are dependable for years. Our warranties are consistent with this commitment and our dedication to quality.

LIMITED WARRANTY OF WEN PRODUCTS FOR HOME USE

GREAT LAKES TECHNOLOGIES, LLC (“Seller”) warrants to the original purchaser only, that all WEN consumer power tools will be free from defects in material or workmanship during personal use for a period of two (2) years from date of purchase or 500 hours of use; whichever comes first. Ninety days for all WEN products if the tool is used for professional or commercial use. Purchaser has 30 days from the date of purchase to report missing or damaged parts.

SELLER’S SOLE OBLIGATION AND YOUR EXCLUSIVE REMEDY under this Limited Warranty and, to the extent permitted by law, any warranty or condition implied by law, shall be the replacement of parts, without charge, which are defective in material or workmanship and which have not been subjected to misuse, alteration, careless handling, misrepair, abuse, neglect, normal wear and tear, improper maintenance, or other conditions adversely affecting the Product or the component of the Product, whether by accident or intentionally, by persons other than Seller. To make a claim under this Limited Warranty, you must make sure to keep a copy of your proof of purchase that clearly defines the Date of Purchase (month and year) and the Place of Purchase. Place of Purchase must be a direct vendor of Great Lakes Technologies, LLC. Purchasing through third party vendors, including but not limited to garage sales, pawn shops, resale shops, or any other secondhand merchant, voids the warranty included with this product. Contact techsupport@wenproducts.com or 1-847-429-9263 with the following information to make arrangements: your shipping address, phone number, serial number, required part numbers, and proof of purchase. Damaged or defective parts and products may need to be sent to WEN before the replacements can be shipped out.

Upon the confirmation of a WEN representative, your product may qualify for repairs and service work. When returning a product for warranty service, the shipping charges must be prepaid by the purchaser. The product must be shipped in its original container (or an equivalent), properly packed to withstand the hazards of shipment. The product must be fully insured with a copy of the proof of purchase enclosed. There must also be a description of the problem in order to help our repairs department diagnose and fix the issue. Repairs will be made and the product will be returned and shipped back to the purchaser at no charge for addresses within the contiguous United States.

THIS LIMITED WARRANTY DOES NOT APPLY TO ITEMS THAT WEAR OUT FROM REGULAR USAGE OVER TIME, INCLUDING BELTS, BRUSHES, BLADES, BATTERIES, ETC. ANY IMPLIED WARRANTIES SHALL BE LIMITED IN DURATION TO TWO (2) YEARS FROM DATE OF PURCHASE. SOME STATES IN THE U.S. AND SOME CANADIAN PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO LIABILITY FOR LOSS OF PROFITS) ARISING FROM THE SALE OR USE OF THIS PRODUCT. SOME STATES IN THE U.S. AND SOME CANADIAN PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE IN THE U.S., PROVINCE TO PROVINCE IN CANADA AND FROM COUNTRY TO COUNTRY.

THIS LIMITED WARRANTY APPLIES ONLY TO ITEMS SOLD WITHIN THE UNITED STATES OF AMERICA, CANADA AND THE COMMONWEALTH OF PUERTO RICO. FOR WARRANTY COVERAGE WITHIN OTHER COUNTRIES, CONTACT THE WEN CUSTOMER SUPPORT LINE. FOR WARRANTY PARTS OR PRODUCTS REPAIRED UNDER WARRANTY SHIPPING TO ADDRESSES OUTSIDE OF THE CONTIGUOUS UNITED STATES, ADDITIONAL SHIPPING CHARGES MAY APPLY.