

If the unit's serial number is between...	Use remote...	Use PCB....	IR or RF remote/PCB?
GLT1606UR00001 – GLT1612UR03213	90243-029	90243-046	IR
GLT1701UR00001 – GLT1702UR03158			
GLT1703UR03827 – GLT1703UR04549			
GLT1703UR04550 – GLT1703UR05210			
GLTxxxxTMxxxxx	3410T-AS03	3410T-045	IR
GLT1703UR03159 – GLT1703UR03826	3410-029RF	3410-046RF	RF
GLT1703UR05211 – GLT1703UR05810			
GLT1704UR05811 – GLT1802UR01119			
11708600001 – 11708600627			
11709200001 – 11709200627			
11715600001 – 11715600731	3410-029RF-01	3410-046RF-01	RF
11715700001 and up			