


How to Measure posts for padding

There is no standard sizing for poles, columns and i-beams. It is important to measure to obtain sizing before purchasing any protective padding.

When purchasing a pad, order the size of the pole.

Round Poles

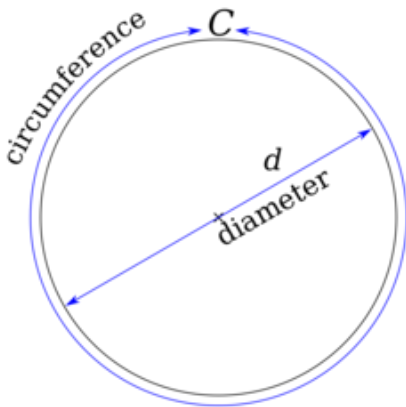

1. Use a soft measuring tape to find the circumference of your pole
2. To find the diameter divide the circumference by 3.14
3. If your diameter is in between two whole numbers, round up for the best fit

Square Columns



Measure each of the four sides independently; A, B, C, & D

Make note if your column is more of a rectangle versus a square. Column pads can be tailored to fit your need

Trassig Corp

203.659.0456
info@trassig.com