

US UK

Dear user

Thank you for choosing REDRAGON product. To protect your rights and for better customer service, please read the following warranty rules carefully.


1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.

1

OS Support

Windows XP/ Vista/ Win 7/ Win 8/ Win 10/WIN 11/Mac OS

Find and slide the switch button WIN/MAC at bottom of keyboard before you use keyboard.

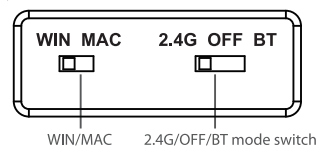

How to connect the keyboard with a computer

Wired Connection

1. Slide the 2.4G/OFF/BT switch to OFF.
2. Take out the USB A to USB Type C cable in the package and connect the keyboard with your computer, the LED marked with M light up in Red.

2.4G Wireless Connection

1. Slide the 2.4G/OFF/BT switch to 2.4G.
2. Plug the USB receiver into any available USB port on your computer within 20 seconds (For reconnection, press and hold FN+2.4G button for 4 seconds, LED M flash quickly in green), LED M lights up in green.

Bluetooth Connection

1. Slide the 2.4G/OFF/BT switch to BT.
2. Press FN+BT1/BT2/BT3, the LED marked with M flashes in blue/Cyan/Magenta.
3. Turn on Bluetooth and scan for available devices on your computer or smart phone. It

2

will find "BT3.0Keyboard or BT5.0 KB" device. Select one of them to get connected with it automatically.

How to recharge the keyboard

The LED indicator (M) will turn to red and flash slowly when keyboard is out of battery in 2.4G/BT modes.

Find the USB A to USB type C cable in the packaging, plug the keyboard and connect it with charging devices (5V=2A or 5V=1A), strong recommend to use computer USB port for charging for prevent damage of keyboard.

How to check the keyboard battery

Press and hold FN+ APP key, All keys light OFF, check Numner keys, 1/2/3 keys in RED indicate low power less than 30%, 1/2/3...9/0 keys in green indicate power condition from 40%-100%.

Keyboard sleep mode and power safe function

In 2.4Ghz and Bluetooth connecting, to safe power, keyboard will be sleep mode after 3 minutes out of working, all LEDs and backlight turn OFF, **please click any key to wake up the keyboard(Not including scroll button).**

Switch the keyboard to OFF while traveling to safe power.

Software inquiries

With standard USB and 2.4G/BT connections in Window or MAC OS, the keyboard can be used on computer without any software or driver installation.

Please noted that driver K660-RGB-PRO for keyboard is only available with wired connecting mode for gaming configuration.

3

How to set keyboard backlight (Customization)

Press FN+HOME to get ready for setting, Press FN+L1~L5 to choose a profile, All keys light OFF, CAPS LED keep twinkle, now it is available for setting, keep press the desire key for favorite color, then press FN+HOME to save and quit.

Commands of key combinations with FN key

FN+INS: Switch backlight in 20 patterns.

FN+L1(FPS): ASDW ↑ ↓ ← → ESC keys light up.

FN+L2(CF): A, S, D, W, Left_Ctrl, Left_Shift, Left_Alt, Space, R, G, Q, E, B, 1~5, Tab F1~F3 Home End PgUp PgDn PrtSc keys light up.

FN+L3(COD): Q, W, E, R, T, A, S, D, F, G, C, V, 1~7, Left_Ctrl, Left_Shift keys light up.

FN+L4(LOL): QWERASD F1~7 keys light up.

FN+L5(QQ race): W, R, A, S, D, Left_Ctrl, Left_Alt, Left_Shift, ↑, ↓, ←, → keys light up.

FN+DEL: Switch backlight color.

FN+APP: Check keyboard battery.

FN+ESC: Back to factory setting.

FN+WIN: Lock window key, repeat to unlock.

Multi-media keys function (WINDOWS OS)

FN+F1= Computer screen bright level down

FN+F2= Computer screen bright level up

FN+F3= Multiple task

FN+F4= Voice (Up to Win 10 OS)

FN+F5= Computer desk

FN+F6= Search

FN+F7= Previous track

FN+F8= Play/Pause

4

FN+F9= Next track
FN+F10= Mute
FN+F11= Volume-
FN+F12= Volume+

Multi-media keys function (MAC OS)

F1= Computer screen bright level down

F2= Computer screen bright level up

F3= Multiple task

F4= Siri

F5= Computer desk

F6= Search

F7= Previous track

F8= Play/Pause

F9= Next track

F10= Mute

F11= Volume-

F12= Volume+

FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.

2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.

5



BATTERY SAFETY GUIDELINES

DO NOT replace the battery with a different model.

DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.

DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.

DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.

DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.

DO NOT impact, bend, alter, disassemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.



CAUTION:

Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.

This device contains licence-exempt transmitter(s)/receiver(s)

that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs exempts de licence

conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

6

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

7



REDRAGON

VISHNU PRO

3 MODES MECHANICAL KEYBOARD HOT-SWAPPABLE

Mechanical Gaming Keyboard
Operating Instructions