

<p>US UK</p> <p>Dear user</p> <p>Thank you for choosing REDRAGON product. To protect your rights and for better customer service, please read the following warranty rules carefully.</p> <ol style="list-style-type: none"> Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty. 	<p>OS Support WinXP/Vista/Win7/Win8/Win10</p> <p>How to plug in Plug type C cable to USB cable with keyboard and PC, keyboard is plug and play, no need driver.</p> <p>Key Function Introduction FN key work with other keys</p> <pre> 1.FN + [1] = F1 2.FN + [2@] = F2 3.FN + [3#] = F3 4.FN + [4\$] = F4 5.FN + [5%] = F5 6.FN + [6!] = F6 7.FN + [7&] = F7 8.FN + [8*] = F8 9.FN + [9@] = F9 10.FN + [0#] = F10 11.FN + [-_] = F11 12.FN + [=+] = F12 13.FN + [L] = Insert 14.FN + [.,] = DEL 15.FN + [,] = Home 16.FN + ["] = End 17.FN + [<] = PgUp 18.FN + [?/] = PgDn 19.FN + [P] = PRSC 20.FN + [(I)] = SCRLK </pre>	<p>21.FN+ [J] =PAUSE 22.FN+ [CTRL_R] =APP 23.FN + [ESC] =`~ 24.FN+ [+] =* 25.FN+ [-] =/ 26.FN+ [Z] =Volume- 27.FN+ [X] =Volume+ 28.FN+ [C] =Mute 29.FN+ [V] =STOP 30.FN+ [B] =Previous track 31.FN+ [N] =Play/Pause 32.FN+ [M] =Next track 33.FN+ [TAB] =Back to default setting</p> <p>Backlight setting FN+ [Alt_R] : Switch backlighting effects, total 20 patterns. FN+ [↑ ↓] : Adjust lighting brightness. FN+ [←→] : Adjust lighting speed. FN+ [Backspace] : Turn OFF the backlighting FN+ [WIN] :Lock Windows key and APP key, repeat to unlock. FN+ [Space] : Switch the color (total 7 colors)in single color backlight pattern.</p>	<p>FAQ</p> <ol style="list-style-type: none"> If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer. If you spill liquid on the keyboard, please remove keyboards USB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again. 	<p>FCC Statement Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p>
--	--	---	---	---

<p>ES</p> <p>Estimado usuario</p> <p>Gracias por elegir REDRAGON Lite. Para proteger sus derechos y obtener un mejor servicio al cliente, le pedimos que preste atención a las reglas de la garantía.</p> <ol style="list-style-type: none"> Dentro del período de garantía, la reparación está garantizada por fallas debido a problemas en el circuito eléctrico. Los daños causados por el hombre, como desmontaje, impactos fuertes, inmersión en agua, conexión a una corriente o a un voltaje incorrecto y los daños causados por desastres naturales como incendios, inundaciones o terremotos no están incluidos. Las partes consumibles (tal como un bastón) y el reemplazo de repuestos no está incluido en nuestra garantía. 	<p>Sistemas Operativos admitidos WinXP / Vista / Win7 / Win8 / Win10</p> <p>Cómo conectar el teclado Conecte el teclado con cable USB tipo C a la PC. De conexión instantánea, no requiere un controlador.</p> <p>Introducción a las teclas de funciones La Tecla FN funciona con otras teclas</p> <pre> 1.FN + [1] = F1 2.FN + [2@] = F2 3.FN + [3#] = F3 4.FN + [4\$] = F4 5.FN + [5%] = F5 6.FN + [6!] = F6 7.FN + [7&] = F7 8.FN + [8*] = F8 9.FN + [9@] = F9 10.FN + [0#] = F10 11.FN + [-_] = F11 12.FN + [=+] = F12 13.FN + [L] = Insert 14.FN + [.,] = Supr 15.FN + [,] = Inicio 16.FN + ["] = Fin 17.FN + [<] = RePág 18.FN + [?/] = AvPág 19.FN + [P] = ImprPant 20.FN + [(I)] = BloqDespl 21.FN+ [J] = Pausa 22.FN+ [CTRL_R] =App </pre>	<p>23.FN + [ESC] =`~ 24.FN+ [+] =* 25.FN+ [-] =/ 26.FN+ [Z] = Bajar volumen 27.FN+ [X] = Subir volumen 28.FN+ [C] = Silenciar 29.FN+ [V] = Parar 30.FN+ [B] = Pista anterior 31.FN+ [N] = Reproducir / Pausar 32.FN+ [M] = Pista siguiente 33.FN+ [TAB] = Volver a la configuración predeterminada</p> <p>Ajuste de la retroiluminación FN + [Alt_R] : cambia los efectos de retroiluminación, con 20 patrones en total. FN + [↑ ↓] : ajusta el brillo de la iluminación. FN + [←→] : ajusta la velocidad de la iluminación. FN + [Retroceso] : apaga la retroiluminación. FN + [WIN] :bloquea la tecla de Windows y la tecla de Aplicación, repita para desbloquear. FN+ [Barra espaciadora] : cambia el color (7 colores en total) a un patrón de retroiluminación de un solo color.</p>	<p>Preguntas y respuestas</p> <ol style="list-style-type: none"> Si el teclado no reacciona, por favor controle que la interfaz esté correctamente insertado en el puerto USB correspondiente de la computadora, o intente insertar la interfaz del teclado en otro puerto USB de la computadora. Si derrama un líquido sobre el teclado por error, por favor extraiga la interfaz del teclado de la computadora inmediatamente, limpie el líquido derramado en el teclado y deje secar el teclado al sol hasta que el líquido se haya evaporado por completo para poder utilizarlo. 	<p>REDRAGON POLLUX 78 KEY WIRED MECHANICAL KEYBOARD</p>  <p>Mechanical Gaming Keyboard Operating Instructions</p>  <p>Please scan here to download user manual</p>
--	---	---	---	--