

US UK

Dear user

Thank you for choosing REDRAGON product. To protect your rights and for better customer service, please read the following warranty rules carefully.

1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.

1

Function Introduction

Plug type C cable to USB cable with keyboard and PC, keyboard is plug and play, no need driver.

Key Function Introduction

1. Computer USB port interfaces with the keyboard without needing to install drivers or software.
2. Multi-level backlight brightness: Press and hold the [FN] key, and then press the arrow key "↑" to increase the backlight brightness of the keyboard. Press and hold the [FN] key, and then press the arrow key "↓" to decrease the backlight brightness of the keyboard.
3. There are 19 backlighting patterns(FN+INS) for all keycaps: Wave, Shadow, Sine, Left-right scan, Pinwheel, Waterfall, Flowers, Storm, OFF, ON, Breathing, Rainbow, click-On, Walk in rain, Roulette, Rippling, Star, Snow, Flow.
4. To disable the [WIN] key: Press and hold the [FN] key, and then press left [WIN] key to turn off [WIN] key in order to avoid leaving gaming function if user presses [WIN] key by mistake. Repeat the above operation to restore the function.
5. Adjustable light brightness for all keycaps: press FN + [↑] or FN+[↓], total 5 levels .
6. Adjustable colors for all keycaps: Press FN+[DEL] to change backlight colors(8 colors option) in available patterns.
7. Adjustable lighting speed for all keycaps: Press FN+ [←] or FN+ [→] adjust light rotating speed.
8. Side light bard pattern: FN+Pause to switch the patterns (RGB-Neon-ON-Breathing-OFF).
9. Side light bar speed: Press FN+SCRLK to switch in 5 level.
10. Side light bar color: Press FN+PRTSC to adjust color

2

(Red-Green-Blue-Yellow-Purple-Cyan-White).

11. Turn ON/OFF the keyboard backlight: FN+Space.
12. Pre-set gamer light patters:
FN+1 (FPS): A,S,D,W, ↑, ↓, ←, →, ESC key light ON.
FN+2(CF): A, S, D, W, Left-Ctrl, Left-Shift, Left-Alt ,Space, R, G, Q, E, B, 1, 2, 3, 4, 5, Tab, F1, F2, F3, Home, End, PgUp, PgDn ,PrtSc key light ON.
FN+3(COD): Q, W, E, R, T, A, S, D, F, G, C, V, 1, 2, 3, 4, 5, 6, 7, Left-Ctrl, Left-Shift key light ON.
FN+4(LOL): Q, W, E, R, A, S, D, F1, F2, F3, F4, F5, F6, F7 key light ON.
FN+5(QQ race): W, R, A, S, D, Left-Ctrl, Left-Alt, Left-Shift, ↑, ↓, ←, →key light ON.
13. Light recording function: Press to choice the group from FN+1 to FN+5, Press FN+Home to get start to recording(Num/Cap/Scr/Win LEDs are flash while recording), then keep press the desire key for favourite color, to complete all setting, press FN+Home again for save and quit.
14. Back to factory setting: Press and hold FN+ESC for 3 seconds.
15. The short cut multi-media keys at keyboard right corner: Mute/Calculator/One click to lock screen/ one click back to desk

Multi-media keys (FN+F1~F12)

FN+F1	Screen brightness -
FN+F2	Screen brightness +
FN+F3	Email
FN+F4	Calculator
FN+F5	My computer
FN+F6	Media player
FN+F7	Previous track
FN+F8	Play/Pause
FN+F9	Next track

3

FN+F10	Mute
FN+F11	Volume-
FN+F12	Volume+

FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excessliquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.



3

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help
- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

California Proposition 65

⚠ WARNING: Risk of Cancer from [Name of one or more chemicals known to cause cancer] And Reproductive Harm From [Name of one or more chemicals known to cause reproductive toxicity] Exposure - www.P65Warnings.ca.gov

4



REDRAGON

TRUNDLE

REDRAGON WIRED 108 KEYS MECHANICAL KEYBOARD

Mechanical Gaming Keyboard
Operating Instructions