

Dear user

Thank you for choosing **REDRAGON** product. To protect your rights and for better customer service, please read the following warranty rules carefully.

- Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
- 2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.

OS Support

Windows XP/ Vista/ Win 7/ Win 8/ Win 10/Mac OS

1. Plug and play, no need software.

2. Keyboard interface: USB full speed

Commands of FN key combinations

FN+ 【P】=Prtsc

 $\mathsf{FN+} \ \blacksquare \ \mathsf{L} \ \blacksquare = \mathsf{Ins}$

 $\mathsf{FN+} \ \blacksquare \ [\, \{\, \, \blacksquare \ = \mathsf{ScLk} \,$

FN+ []}] = Pause FN+ [;:] = Home

FN+ 【'"】 = End

FN+ 【 , < 】 = Del

 $\mathsf{FN+}\ \pmb{[\![}\ .> \pmb{]\!]}\ = \mathsf{PgUp}$

FN+ [/ ?] = PgDn

FN+ 【 Alt 】 for 20 backlight effects.

FN+ $\uparrow \downarrow$ to adjust the backlight brightness.

 $\mathsf{FN+} \leftarrow \mathsf{to} \; \mathsf{Slow} \; \mathsf{down} \; \mathsf{the} \; \mathsf{running} \; \mathsf{speed} \; \mathsf{of} \; \mathsf{backlight}.$

 $\text{FN+} \rightarrow \text{to}$ Add up the running speed of backlight.

FN+ Space to switch the backlight color under available pattern.

FN+ Backspace to turn off backlight.

FN+1/2/3/4 for macro profiles.

FN+ Win to lock Win and App key, repeat to unlock.

FN+ Tab: Press and hold for 3 second, back to default setting.

2

Scroll button function

Scroll button is place on right upcorner of keyboard for volume adjustment and keyboard backlight brightness adjustment function.



Backlight brightness adjustment: Press 데/※ key, it is light on White color, Scroll button can switch in different brightness level.

Volume adjustment: Press 卤/米 key, the key light's OFF, scroll button can be switch the volume level

Shortcut key function

Previous track

▶I Next track

▶II Play /Pause

Stop

Macro recording function

- 1. Press MR key (MR key lights ON in Red), then press G key (G1/G2/G3/G4/G5), the G key lights ON in Red.
- 2. Record the desired keys.
- 3. Press MR key to complete recording (MR key lights OFF).

For example: MR \rightarrow G1 \rightarrow ABC \rightarrow MR

How to play Macro

1. Press the Macro key from G1 to G5

For example: G1(ABC)

3

How to delete Macro

- 1. Press MR key (MR key lights ON).
- 2. Double press G keys from G1 to G5 (The key lights OFF).
- 3. Press MR key to save(MR key lights OFF).

FAC

- If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
- 2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excessliquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.



FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- $\mathbin{\hspace{1pt}\text{--}\hspace{1pt}}$ Increase the separation between the equipment and receiver.
- --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



REDRAGON

MAGIC-WAND SE

75% MECHANICAL KEYBOARD
WITH MULTIPLE FUNCTION

Mechanical Gaming Keyboard Operating Instructions

4

5