



REDRAGON

VISHNU

Wired & Wireless Mechanical Keyboard

Wired & Wireless Mechanical Keyboard Operating Instructions

US UK

Dear user

Thank you for choosing REDRAGON Brand, to protect your rights and for better customer service, we ask that you note our warranty rules.

1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot stick) and spare parts replacement are not included in our warranty.
3. Please fill out the warranty card. Warranty card is valid with the stamp of the retailer.
4. This warranty card will not be reissued if lost. Please keep it in a safe place.

1

OS support

Windows XP/Vista/Win7/Win8/Win10

How to connect keyboard with computer

Wired Connection

1. Take out the USB to Type C cable in the package and connect the keyboard with your computer.
2. The computer will recognize and configure the keyboard automatically.
3. The keyboard will be ready for use when the configuration is finished.
4. Slide the ON/Off switch of the keyboard to ON. The keyboard is under recharging now. It will take about 5 hours for the keyboard to be fully recharged.

Wireless Connection

1. Take out the USB receiver in the package and plug it into any available USB port on your computer. Slide the ON/Off switch of the keyboard to ON. Make sure the keyboard has enough power before doing so.
2. The computer will recognize and configure the keyboard automatically.
3. The keyboard will be ready for use when the configuration is finished.
4. The keyboard can work about 9 hours with LED backlight be OFF, and about 2 hours with LED backlight be fully ON.
5. Recharge the keyboard when the battery is low.

Function Introduction

6. Computer USB port interfaces with the keyboard without needing to install drivers or software.
7. Multi-level backlight brightness: Press and hold the [FN] key, and then press the arrow key "↑" to increase the backlight brightness of the keyboard. Press and hold the [FN] key, and then press the arrow key "↓" key to decrease the backlight brightness of the keyboard.
8. There are 18 backlighting effects:

2

- FN + [Insert] key: switch 3 backlighting modes: 1. The trial of Light 2. Breathing 3. Normally on.
- FN + [Home]: switch 3 backlighting modes: 1. Ripple Graff 2. Pass without Trace 3. Coastal.
- FN + [Page Up]: switch 3 backlighting modes: 1. Both ways 2. Surmount 3. Fast and the furious.
- FN + [Del]: switch 3 backlighting modes: 1. Go with the stream 2. Clouds fly 3. Winding Paths.
- FN + [End]: switch 3 backlighting modes: 1. Flowers blooming 2. Snow winter jasmine 3. Swift action.
- FN + [Page Down]: switch 3 backlighting modes: 1. Hurricane 2. Accumulate 3. Digital Times.
9. To disable the [WIN] key: Press and hold the [FN] key, and then press left [WIN] key to turn off [WIN] key in order to avoid leaving gaming function if user presses [WIN] key by mistake. Repeat the above operation to restore the function.
 10. Adjustable lighting direction: When backlit keys are cycling through effects press FN + [←] to change directions.
 11. Adjustable colors: Press FN+ [→] to change backlight colors(8 colors option)
 12. Customized backlighting mode: Press FN+ [~] get ready for set the colors on the key, [~] key now is your palette, Press FN+ [→] for color switching, there are 9 modes including 8 colors options and light off mode, 3 indicators [Num, Cap, Scroll] twinkle in same time during customization, Press the desired key for colors setting. Press FN+ [~] key to save the setting. For example, Set [T] key as BLUE color, FN+ [~] → press the letter [T] key → Press FN+ [→] to switch palette key [~] as BLUE color → Press [T] key again to set Blue color on it → Press FN+ [~] to save the customization.
 13. Adjustable lighting speed: Press FN+ [-] or FN+ [+] adjust lighting effect speed.
 14. Marco recording function:
 - 14.1 G keys with Macro function (Factory setting function of G1~G10 as F1~F10).
 - 14.2 Macro recording function: FN+(G1~G10)(LED's of cap-lock, and scroll-lock and Win-lock will twinkle at the same time during recording or deleting). Macro keys will be in green backlighting when it is being setting as macro functions.

3

- 14.3 Delete the recording: FN+CTRL+(G1~G10).
- 14.4 Play Macro: Press G1~G10.
15. Customized backlighting mode: Press FN+ [~] get ready for set the colors on the key, [~] key now is your palette, Press FN+ [→] for color switching, there are 9 modes including 8 colors options and light off mode, 3 indicators [Num, Cap, Scroll] twinkle in same time during customization, Press the desired key for colors setting. Press FN+ [~] key to save the setting. For example, Set [T] key as BLUE color, FN+ [~] → press the letter [T] key → Press FN+ [→] to switch palette key [~] as BLUE color → Press [T] key again to set Blue color on it → Press FN+ [~] to save the customization.
16. Switchable backlighting modes on sides: Press FN+PAUSE to switch lighting modes.
17. Adjustable lighting speed on sides: Press FN+SCRLK to adjust the lighting speed.
18. Scroll wheel function: Volume+/Volume- (Short-cut key light OFF). Brightness +/- Brightness-(Short-cut key light ON).
19. Shortcut keys
 - 1) Volume Control/Backlight mode switch
 - 2) Back
 - 3) Play /Pause
 - 4) Forward

Multi-media keys (FN+F1~F12)

- FN+F1 Media player
- FN+F2 Volume down
- FN+F3 Volume up
- FN+F4 Mute
- FN+F5 Stop
- FN+F6 Previous track
- FN+F7 Play/Pause
- FN+F8 Next track
- FN+F9 E-mail
- FN+F10 Home
- FN+F11 Calculator
- FN+F12 Search

4

FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please remove keyboards USB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.



5

尺寸 : 100x100mm
正反印