

US UK

Dear user

Thank you for choosing REDRAGON product. To protect your rights and for better customer service, please read the following warranty rules carefully.

1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.

1

OS Support

WinXP/Vista/Win7/Win8/Win10/Win11

How to plug in

Plug type C cable to USB cable with keyboard and PC, keyboard is plug and play, no need driver.

Key Function Introduction

FN key work with other keys

1. FN + Z= Volume-
2. FN + X= Volume+
3. FN +C= Mute
- 4.FN+V= Stop
5. FN + B= Previous track
6. FN + N= Play/Pause
7. FN + M= Next track
8. FN + **[1~10]** = F1~F10
9. FN + **[-]** = F11
10. FN + **[=+]** = F12
11. FN + **[{]}** = HOME
12. FN + **[}]** = END
13. FN + **[;:]** = PRTSC
14. FN + **["]** = INSERT
- 15.FN + **[/?]** = SCRLK
16. FN+ESC Press and hold for 5 seconds for back to factory setting.
17. FN+WIN:To Lock Windows key , repeat to unlock.

2

Backlight setting

FN+ **[PGDN]** :To switch backlight in 20 patterns.

FN+ **[←]** :To switch the light rolling direction.

FN+ **[→]** :To switch the light color under the available patterns.

FN+ **↑ ↓** :Adjust backlighting brightness(Total in 5 levels).

FN+ **[,<] + [,>]** :Adjust backlighting rolling speed(Total in 5 levels).

FN+ **[PGUP]** :To switch side light in 11 patterns.

FN+ **[~]** : Adjust side light rolling speed in 5 levels

FN+CAPSLK: Test key, to switch all LED in white, repeat to previous setting.

FAQ

1. If the keyboard doesn't respond, please check if the keyboard's USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please remove keyboard's USB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.



3

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

California Proposition 65

⚠ WARNING: Risk of Cancer from [Name of one or more chemicals known to cause cancer] And Reproductive Harm From [Name of one or more chemicals known to cause reproductive toxicity] Exposure - www.P65Warnings.ca.gov

5

ES

Estimado usuario

Gracias por elegir REDRAGON Lite. Para proteger sus derechos y obtener un mejor servicio al cliente, le pedimos que preste atención a las reglas de la garantía.

1. Dentro del período de garantía, la reparación está garantizada por fallas debido a problemas en el circuito eléctrico. Los daños causados por el hombre, como desmontaje, impactos fuertes, inmersión en agua, conexión a una corriente o a un voltaje incorrecto y los daños causados por desastres naturales como incendios, inundaciones o terremotos no están incluidos.
2. Las partes consumibles (tal como un bastón) y el reemplazo de repuestos no está incluido en nuestra garantía.

25

Sistemas Operativos admitidos

WinXP / Vista / Win7 / Win8 / Win10/Win11

Cómo enchufar

Conecte el cable tipo C al cable USB al teclado y a la PC, el teclado es plug and play, no necesita un controlador.

Introducción a la tecla de función

La tecla de función trabaja con otras teclas

1. FN + Z= Subir volumen
2. FN + X= Bajar volumen
3. FN +C= Silenciar
- 4.FN+V= Parar
5. FN + B= Pista anterior
6. FN + N= Reproducir/Pausar
7. FN + M= Pista siguiente
8. FN+ **[1~10]** = F1~F10
9. FN+ **[-]** = F11
10. FN+ **[=+]** = F12
11. FN+ **[{]}** = Inicio
12. FN+ **[}]** = Fin
13. FN+ **[;:]** = ImprPant
16. FN+ **["]** = Insertar
- 18.FN+ **[/?]** = BloqDespl
19. FN+ESC = Manténgalas presionadas durante 5 segundos para volver a la configuración de fábrica.
21. FN+WIN: Para bloquear la tecla Windows, repita para desbloquearla.

Ajuste de la retroiluminación

FN+ **[PGDN]** : Para cambiar la retroiluminación a 20 patrones.

FN+ **[←]** : Para cambiar la dirección predeterminada de la luz.

26

FN+ **[→]** : Para cambiar el color de la luz según los patrones disponibles.

FN+ **↑ ↓** : Ajusta el brillo de la retroiluminación (5 niveles en total).

FN+ **[,<] + [,>]** : Ajusta la velocidad predeterminada de la retroiluminación (5 niveles en total).

FN+ **[RePág]** : Para cambiar la luz lateral a 11 patrones.

FN+ **[~]** : Ajusta la velocidad predeterminada de la luz lateral a 5 niveles

FN+BloqMayus: Tecla de prueba, para cambiar todos los LED a blanco, repita la configuración anterior.

Preguntas y respuestas

1. Si el teclado no reacciona, por favor controle que la interfaz esté correctamente insertado en el puerto USB correspondiente de la computadora, o intente insertar la interfaz del teclado en otro puerto USB de la computadora.
2. Si derrama un líquido sobre el teclado por error, por favor extraiga la interfaz del teclado de la computadora inmediatamente, limpie el líquido derramado en el teclado y deje secar el teclado al sol hasta que el líquido se haya evaporado por completo para poder utilizarlo.



27



REDRAGON

SHACO

60% ALUMINUM RGB MECHANICAL KEYBOARD



Please scan here to download user manual

Mechanical Gaming Keyboard
Operating Instructions