

BLADE KNUCKLE REPLACEMENT INSTRUCTIONS



STEP 2 Pull the Spike out of the Knuckle.

STEP 3 Remove the hardware that attaches the Knuckle to the U-Channels using a 9/16" Socket & Wrench. FIG 2 STEP 4 Insert the Spreader Block into the U-Channel and twist it to remove the defective Knuckle. FIG 3

INSTALLATION

STEP 1 Apply a lubricant such as Green Marine to the top portion of the Spike and fully insert it into the new Knuckle.
STEP 2 Install the Spike mounting hardware in the proper order and tighten snug using a 7/16" Socket & Wrench. FIG 1
STEP 3 Use the Spreader Block to insert the Knuckle into the top U-Channel. Install all upper hardware. FIG 2
STEP 4 Repeat STEP 3 for the bottom U-Channel. Tighten all nuts flush with bolt ends. FIG 4



Need help? Contact our Customer Service Team at 1 + 813.689.9932 Option 2



9010 Palm River Road, Tampa, Florida 33619 • phone 813.689.9932 • fax 813.689.8883 • power-pole.com Rower-Pole is a registered trademark of JL Marine Systems, Inc. © Copyright 2021 JL Marine Systems, Inc. All Rights Reserved.