

Air filling V-40 valve



V 40 valve.

Sealed / closed

****The V-40 valve is designed for easy inflation and deflation of our largest products, A6, A7 and F13. This is not a non-return valve.****



Valve screw is open and cannot get further out of the valve.

Valve screw is now ready for inflation through center hole.

****To inflate the product, the valve is opened by turning the valve screw anticlockwise 3-4 times. A 17 socket (17mm socket) is the correct tool. ****



Inflation of product through center hole.

Close / seal valve screw after inflation

****Inflate through the center hole of the valve screw itself, and tighten the Screw. ****

Standard air gun can be used to inflate the product

For more information, please see our website User Guide

<http://www.boatfendersdirect.co.uk/about/user-guide/>