

ASSEMBLY INSTRUCTIONS PRO SNEEZE GUARD

T: 03330153450 E: HELLO@DISPLAYPRO.CO.UK WWW.DISPLAYPRO.CO.UK © Displaypro Ltd 2020



Supplied with protective film. Please remove during assembly.

Caution may contain sharp edges.

Fixing pack contains small parts. Keep away from children choking hazard.


PART	DESCRIPTION	QTY		FIXING	DESCRIPTION	QTY	
	SCREEN	1		(K)	pan screw	6	
				O	NUT	8	PRO SNEEZE GUARD HATCH AND REDUCER
	REDUCER	1		Ø	WASHER	8	
					PENNY WASHER	2	
	LEFT & RIGHT LEG	1		(F)	CSK SCREW	2	
ļ			-		COACH BOLT	2	
	LEFT & RIGHT FOOT	1		<u>S</u>	WING NUT	2	
				NOI	TO SCALE		Ensure all parts are present. If missing please contact customer service.

PART	DESCRIPTION	QTY
	SCREEN	1
	LEFT & RIGHT LEG	1
	LEFT & RIGHT FOOT	1

		1				
FIXING	DESCRIPTION	QTY				
K M	PAN SCREW	6				
	NUT	8				
Ø	WASHER	6				
Ø	PENNY WASHER	2				
(F)	CSK SCREW	2				
NOT TO SCALE						


PRO SNEEZE GUARD HATCH ONLY 넹


PRO SNEEZE GUARD NO HATCH

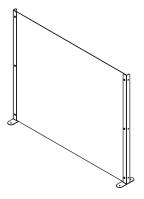



T: 03330153450 E: HELLO@DISPLAYPRO.CO.UK WWW.DISPLAYPRO.CO.UK © Displaypro Ltd 2020

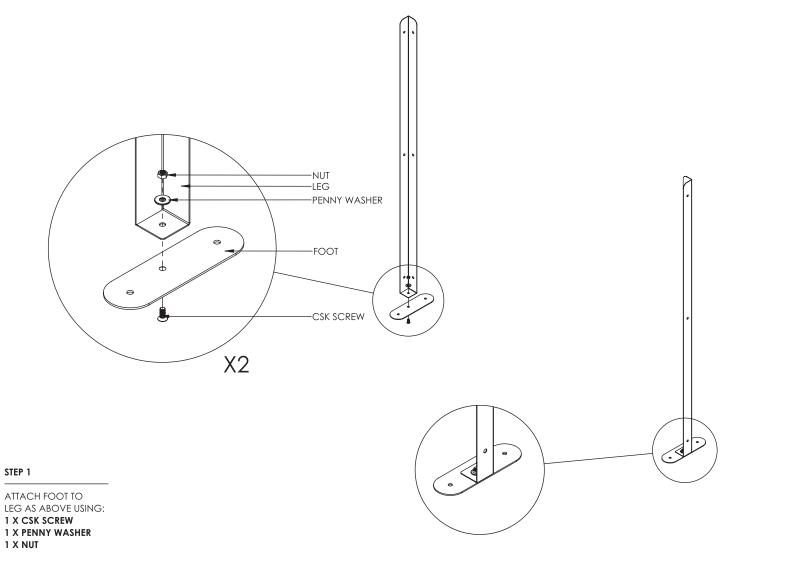

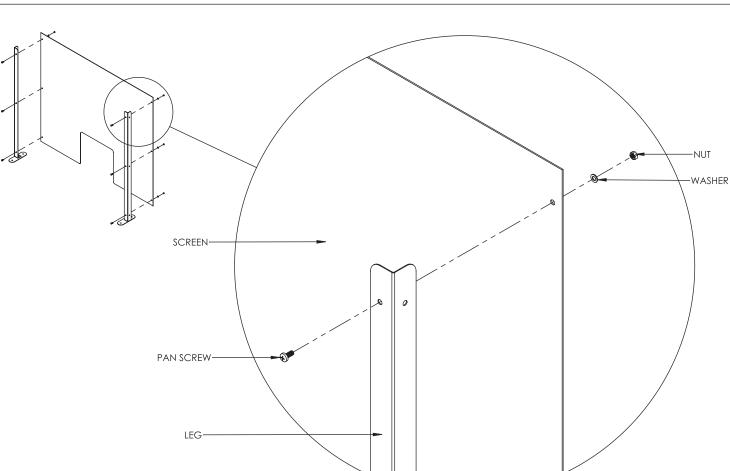


STEP 2

ATTACH SCREEN TO LEG AS SHOWN USING: 6 X PAN SCREW 6 X WASHER 6 X NUT


ENSURE FIXINGS ARE NOT OVERLY TIGHTENED AS MAY CAUSE CRACKS ON SCREEN* E: HELLO@DISPLAYPRO.CO.UK WWW.DISPLAYPRO.CO.UK © Displaypro Ltd 2020



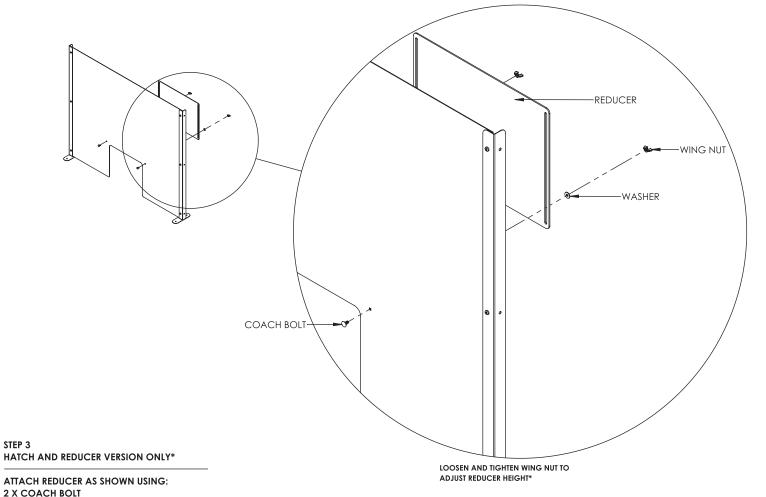

ATTACH REDUCER AS SHOWN USING: 2 X COACH BOLT 2 X WASHER 2 X WING NUT

STEP 3

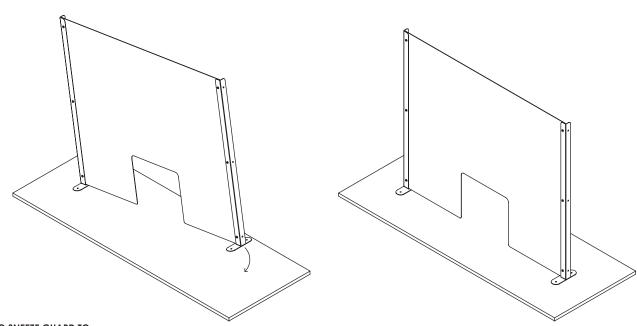

STEP 4 ANCHORING PRO SNEEZE GUARD TO COUNTER TOP

METHOD 1:

ATTACH HEAVY DUTY DOUBLE SIDED FOAM TAPE TO UNDERSIDE OF FEET. AFFIX ONE FOOT IN PLACE FIRST THEN THE OTHER ENSURING THE SCREEN IS TIGHT AND NOT FLEXING OR BOWING IN THE MIDDLE

METHOD 2:

USE SUITABLE SCREWS FOR COUNTERTOP USING THE HOLES IN THE FEET TO ANCHOR SNEEZE GUARD IN PLACE

T: 03330153450 E: HELLO@DISPLAYPRO.CO.UK WWW.DISPLAYPRO.CO.UK © Displaypro Ltd 2020

